
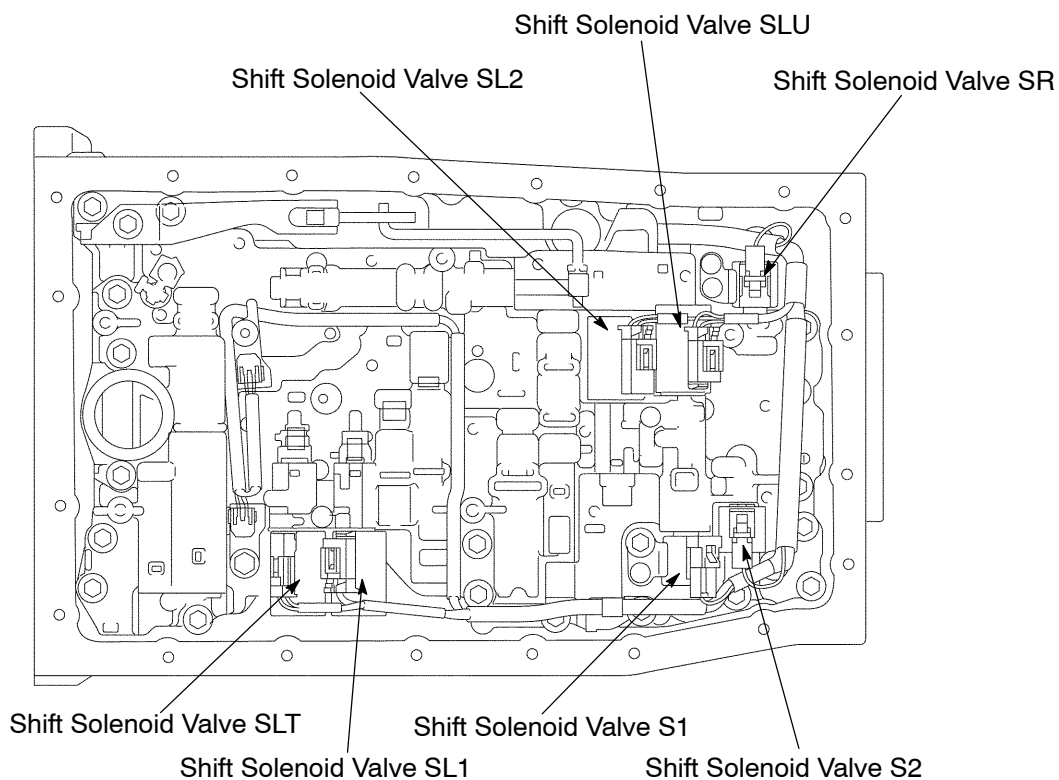


OPERATION

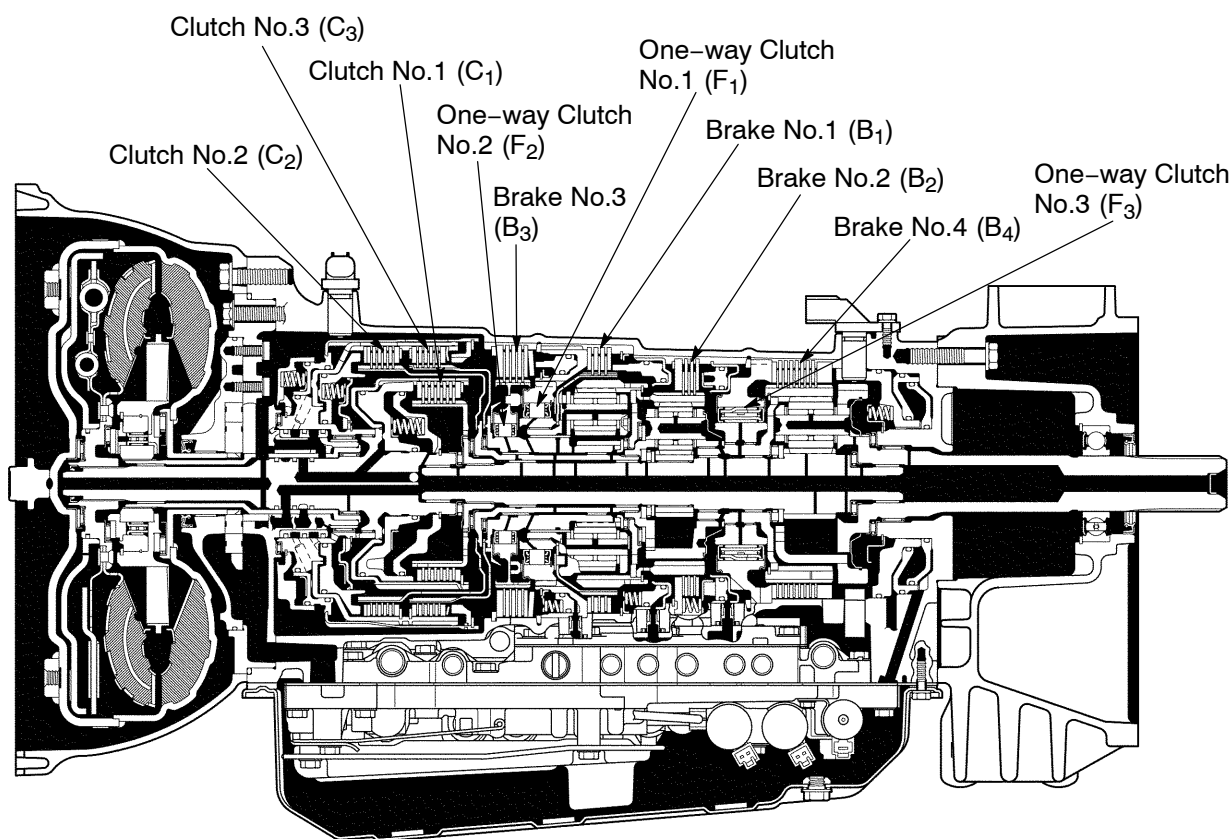

P

D12728

Shift Lever Position	Gear Position	S1	S2	SR	SL1	SL2	SLU	C ₁	C ₂	C ₃	B ₁	B ₂	B ₃	B ₄	F ₁	F ₂	F ₃
P	Park	○	㊦	㊦	㊦	○	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦
R	Reverse	○	㊦	㊦	㊦	○	㊦	㊦	㊦	○	○	㊦	㊦	○	○	㊦	㊦
N	Neutral	○	㊦	㊦	㊦	○	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦
D	1st	○	㊦	㊦	㊦	○	㊦	○	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	○
	2nd	○	○	㊦	㊦	○	㊦	○	㊦	㊦	㊦	㊦	○	㊦	○	○	㊦
	3rd	㊦	○	㊦	㊦	○	㊦	○	㊦	○	㊦	㊦	○	㊦	○	㊦	㊦
	4th	㊦	㊦	㊦	㊦	○	○	○	○	○	㊦	㊦	○	㊦	㊦	㊦	㊦
	5th	㊦	㊦	○	○	㊦	○	㊦	○	○	○	㊦	○	㊦	㊦	㊦	㊦
4	1st	○	㊦	㊦	㊦	○	㊦	○	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	○
	2nd	○	○	㊦	㊦	○	㊦	○	㊦	㊦	㊦	㊦	○	㊦	○	○	㊦
	3rd	㊦	○	㊦	㊦	○	㊦	○	㊦	○	㊦	㊦	○	㊦	○	㊦	㊦
	4th	㊦	㊦	㊦	㊦	○	○	○	○	○	㊦	㊦	○	㊦	㊦	㊦	㊦
3	1st	○	㊦	㊦	㊦	○	㊦	○	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	○
	2nd	○	○	㊦	㊦	○	㊦	○	㊦	㊦	㊦	㊦	○	㊦	○	○	㊦
	3rd	㊦	○	㊦	㊦	㊦	㊦	○	㊦	○	○	㊦	○	㊦	○	㊦	㊦
2	1st	○	㊦	㊦	㊦	○	㊦	○	㊦	㊦	㊦	㊦	㊦	㊦	㊦	㊦	○
	2nd	○	○	○	㊦	㊦	㊦	○	㊦	㊦	㊦	○	○	㊦	○	○	㊦
L	1st	○	㊦	㊦	㊦	㊦	㊦	○	㊦	㊦	㊦	㊦	㊦	○	㊦	㊦	○

○ : Operating

F1, F2, F3 : Operate only when driving