

DTC	P0985	Shift Solenoid "E" Control Circuit Low (Shift Solenoid Valve SR)
------------	--------------	---


DTC	P0986	Shift Solenoid "E" Control Circuit High (Shift Solenoid Valve SR)
------------	--------------	--

CIRCUIT DESCRIPTION

See page [DI-284](#).


DTC No.	DTC Detection Condition	Trouble Area
P0985	ECM detects short in solenoid valve SR circuit 4 times when solenoid valve SR is operated (1-trip detection logic)	• Short in shift solenoid valve SR circuit • Shift solenoid valve SR • ECM
P0986	ECM detects open in solenoid valve SR circuit 4 times when solenoid valve SR is not operated (1-trip detection logic)	• Open in shift solenoid valve SR circuit • Shift solenoid valve SR • ECM

WIRING DIAGRAM

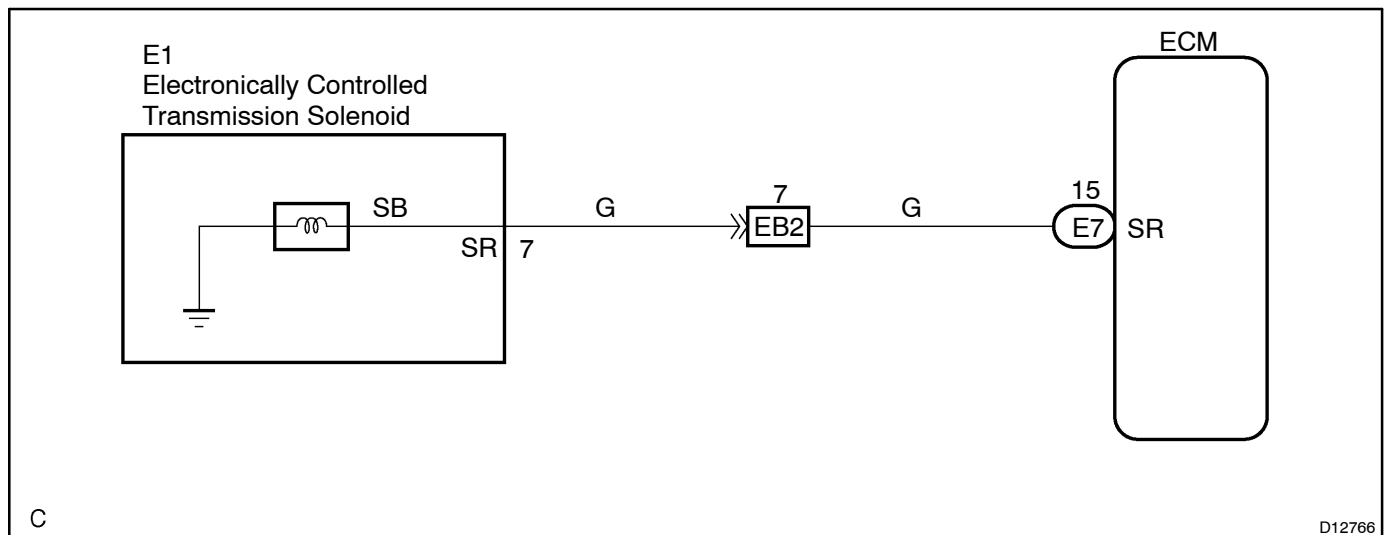

INSPECTION PROCEDURE

1 Check transmission wire.

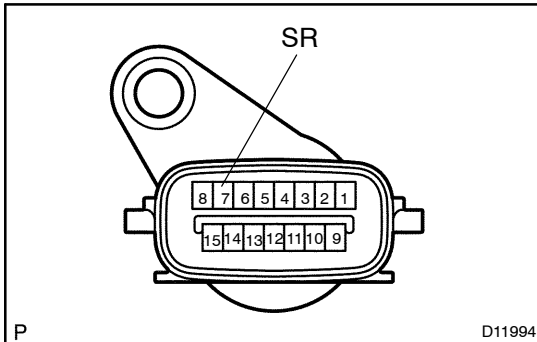

PREPARATION:

Disconnect the transmission wire connector.

CHECK:

Measure resistance between SR of transmission wire connector and body ground.

OK:


Resistance: 11 to 15 Ω at 20°C (68°F)

NG

Go to step 3.

OK

2 Measure resistance between terminal SR and E1 of ECM connector.

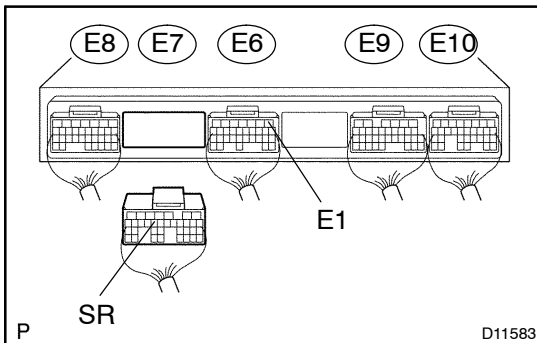

PREPARATION:

- (a) Connect the transmission wire connector.
- (b) Disconnect the connector of the ECM.

CHECK:

Measure resistance between terminals SR and E1 of ECM connector.

OK:

Resistance: 11 to 15 Ω at 20°C (68°F)


NG

Repair or replace the harness or connector (See page [IN-36](#)).

OK

Check and replace the ECM (See page [IN-36](#)).

3 Check shift solenoid valve SR.

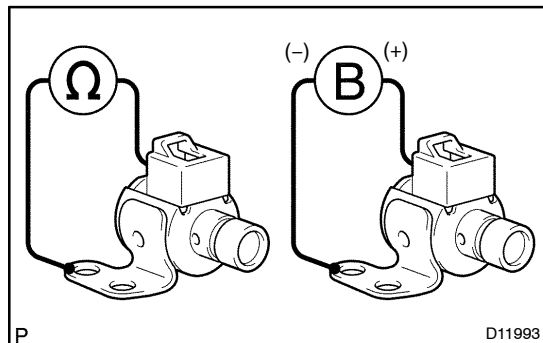**PREPARATION:**

- (a) Jack up the vehicle.
- (b) Remove the oil pan.
- (c) Remove the shift solenoid valve SR.

CHECK:

Measure the resistance between the solenoid connector terminal and the body ground.

OK:

Resistance: 11 to 15 Ω at 20°C (68°F)

CHECK:

Connect the battery positive lead to the solenoid connector terminal and the battery negative lead to the solenoid body ground.

OK:

Solenoid sounds operation noise.

NG

**Replace the shift solenoid valve SR
(See page [AT-8](#)).**

OK

**Repair or replace the transmission wire
(See page [AT-6](#)).**