


DTC	2	"CODE 2. Button module failure"
------------	----------	--


CIRCUIT DESCRIPTION

This DTC is output when any of the LEXUS Link switches is turned ON for 15 sec. or more, and this condition is judged as a stuck switch.

Note that this DTC is output even when the switches are kept pressing.

WIRING DIAGRAM

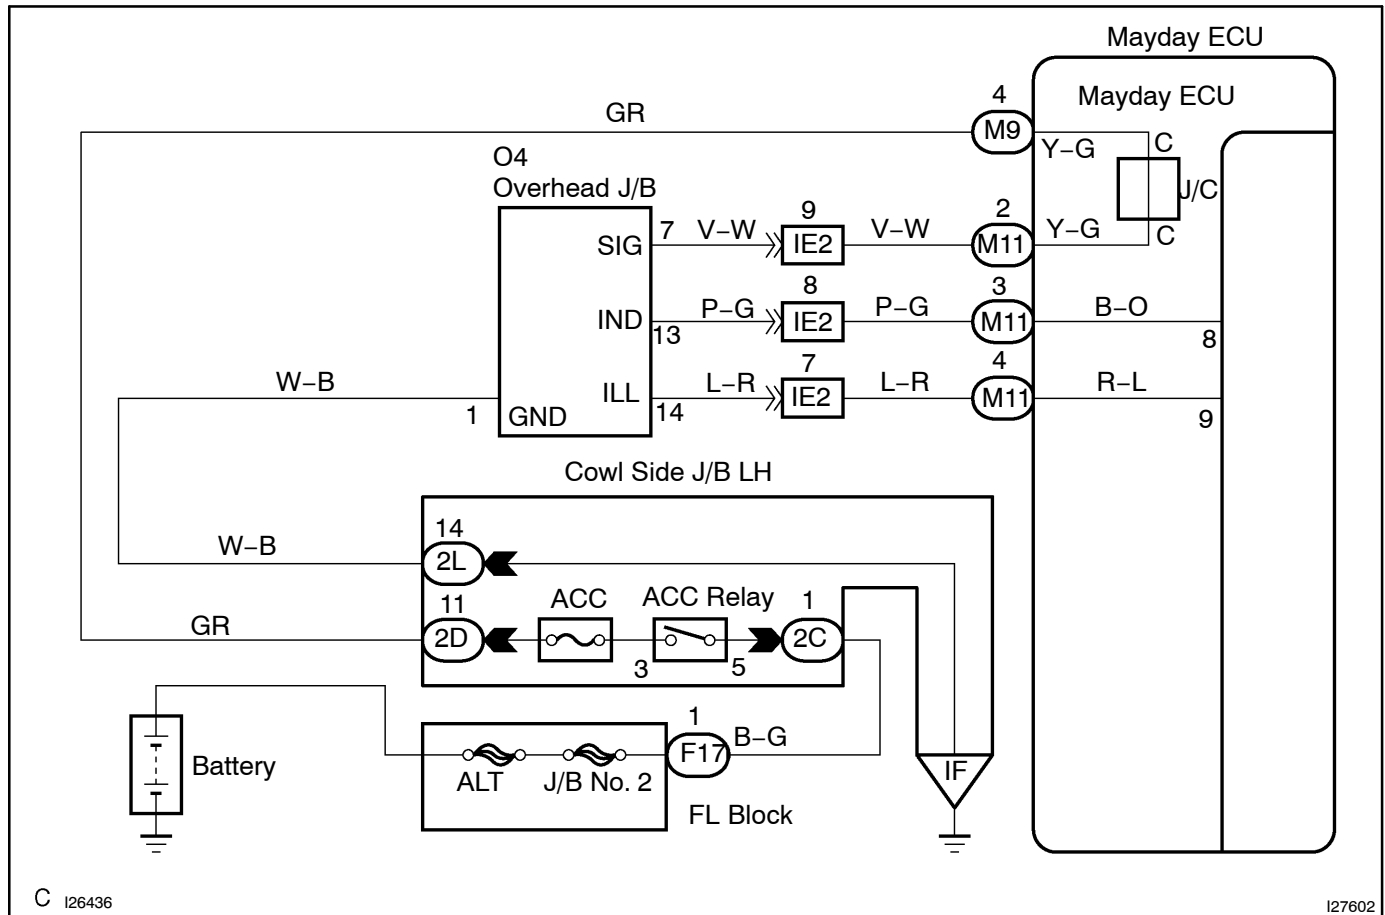

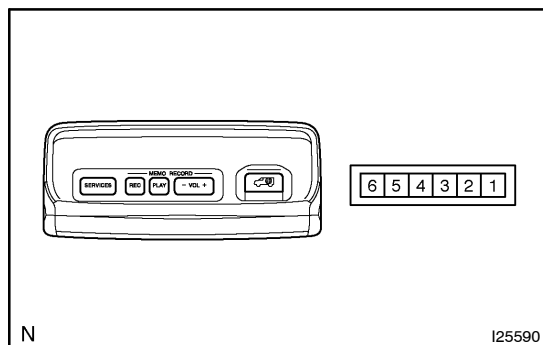INSPECTION PROCEDURE**1 Check Mayday switch (Overhead J/B).****PREPARATION:**

Disconnect the Mayday switch connector.

CHECK:

Check that continuity exists between terminals of Mayday switch when each switch is pressed.

OK:

Switch position	Tester connection	Specified condition
Service Play back Record	1 – 2	Continuity
Emergency Volume UP Volume DOWN	2 – 3	Continuity

NG**Replace the Mayday switch (overhead J/B).****OK****2 Check for open and short circuit in harness and connector between telephone ECU (Mayday ECU) and Mayday switch (See page IN-36).****NG****Replace or repair wire harness connector.****OK****Replace the telephone ECU (Mayday ECU)
(See page IN-36).****HINT:**

If DTC is not cleared even though the Mayday ECU is replaced, replace the Mayday Assembly (Transceiver, Back-up battery, Bus buffer ECU and Mayday ECU).