



Turn Signal and Hazard Warning Light

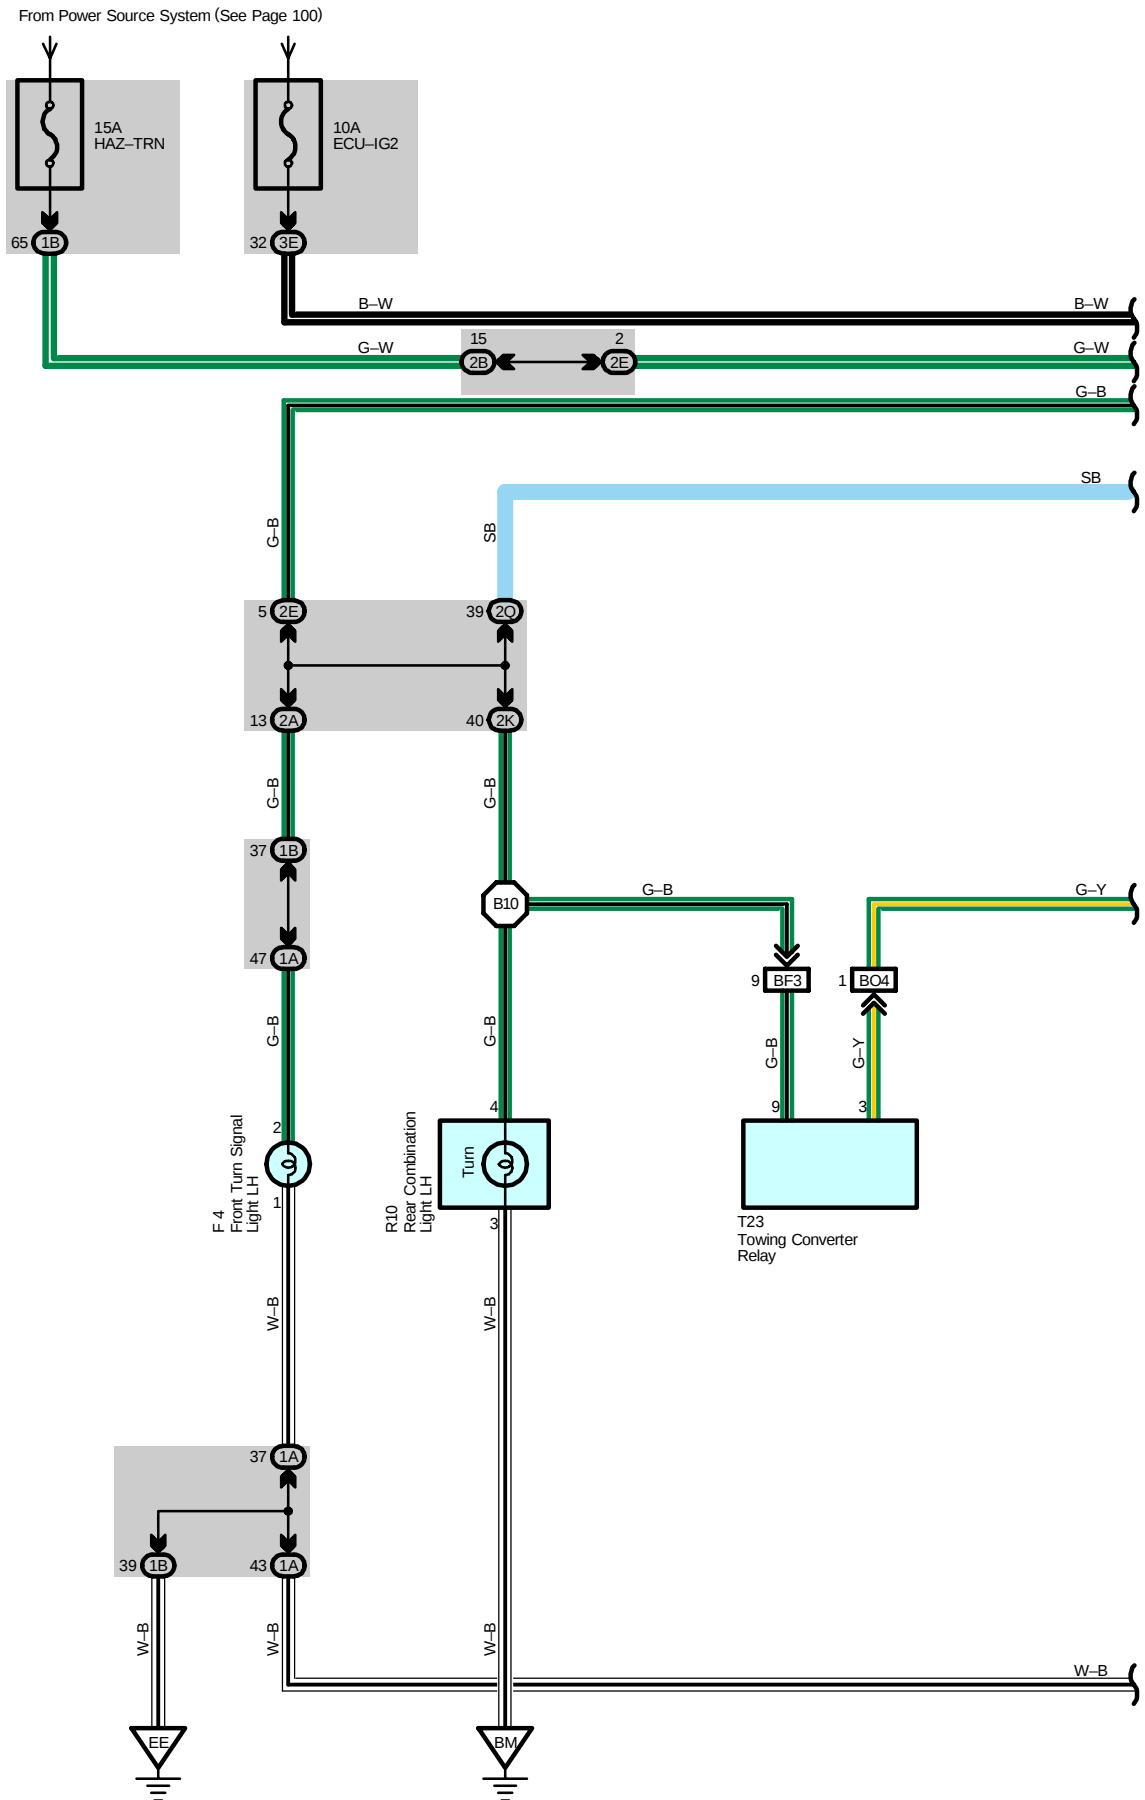

- * 1 : w/ LEXUS Navigation System
- * 2 : w/o LEXUS Navigation System

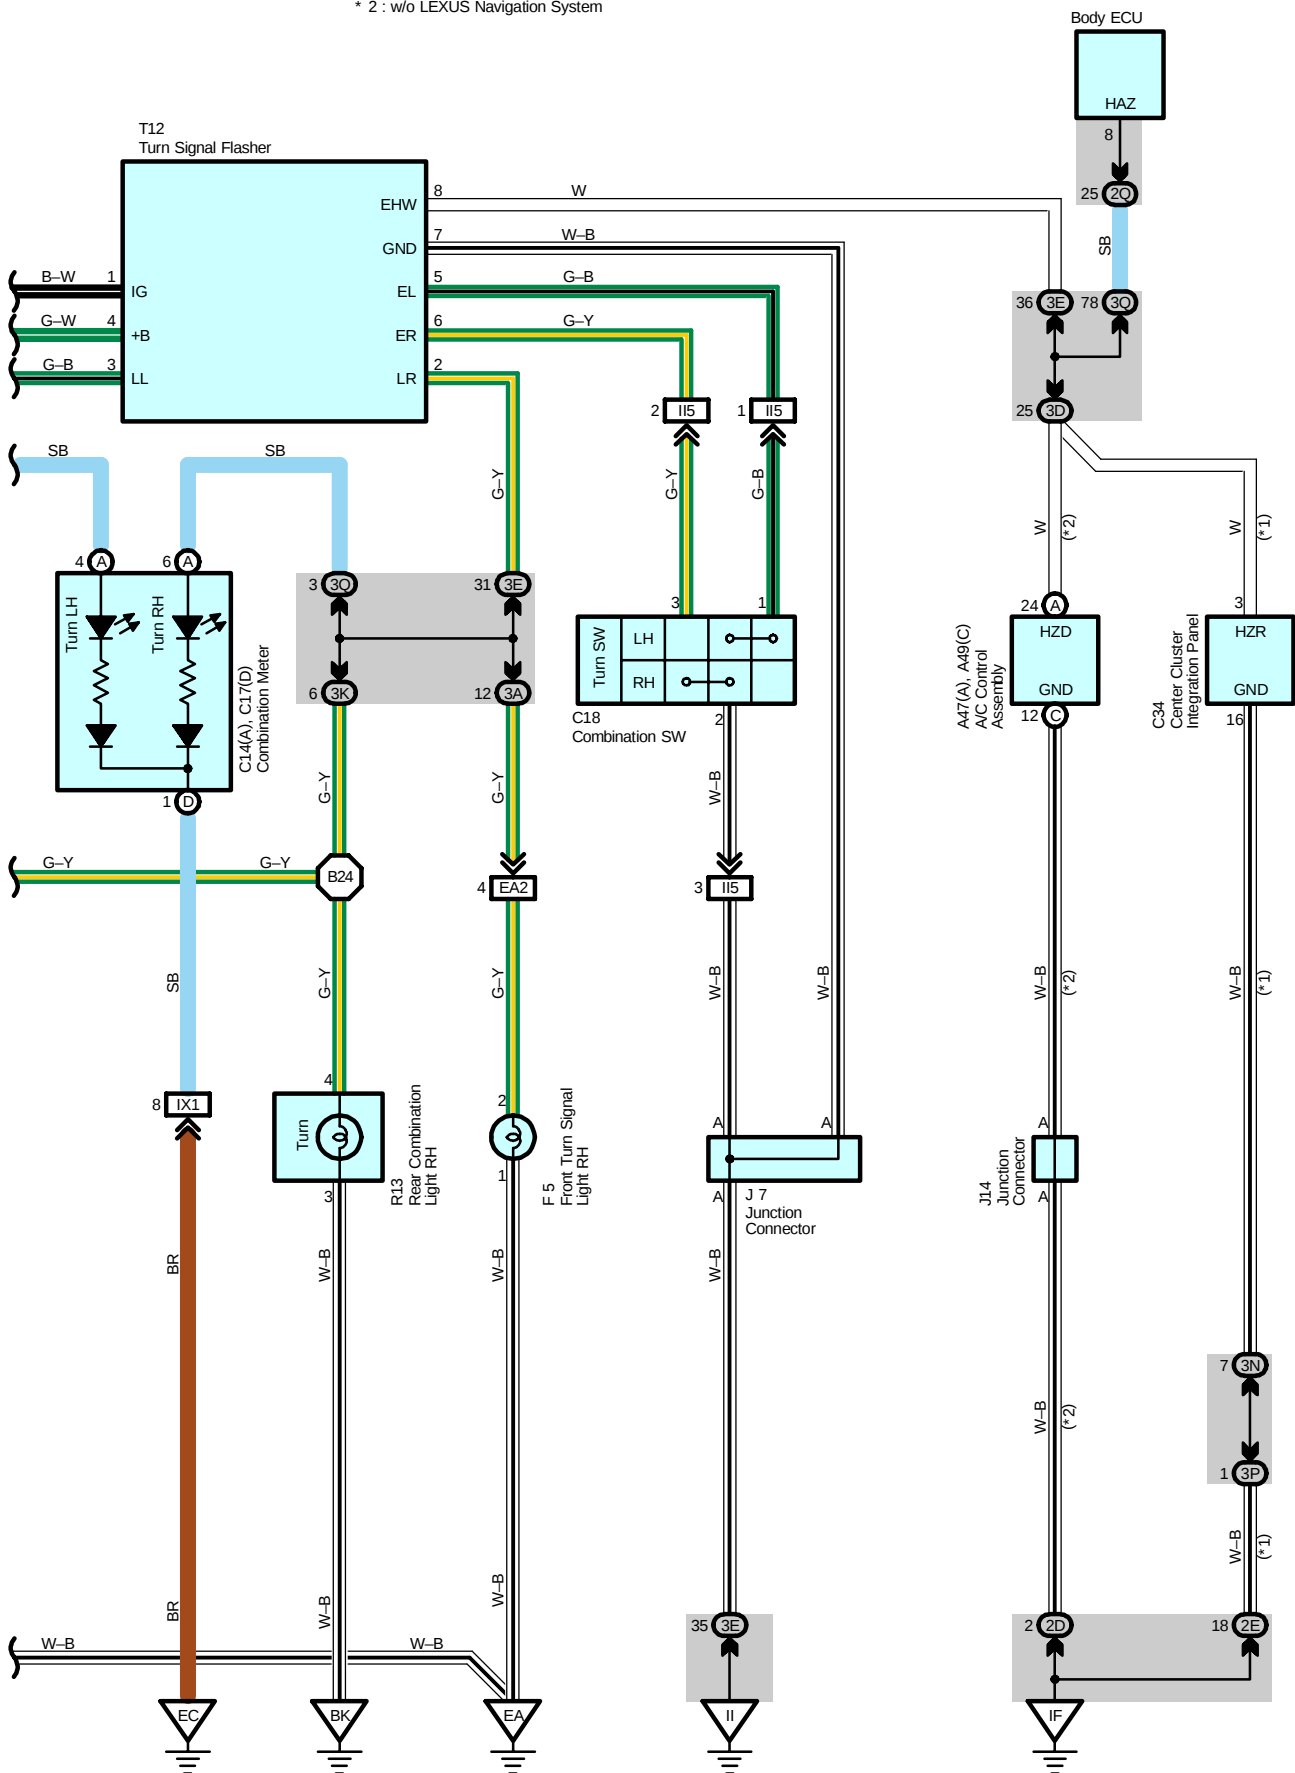

Turn Signal and Hazard Warning Light

Service Hints

T12 Turn Signal Flasher

- 4–Ground : Always approx. 12 volts
- 1–Ground : Approx. 12 volts with ignition SW at ON or ST position
- 7–Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
A47	A	70	C34	71	R10	75
A49	C	70	F4	68	R13	75
C14	A	71	F5	68	T12	73
C17	D	71	J7	72	T23	75
C18		71	J14	72		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B	24	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	28	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2B		
2D		
2E	28	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	40	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3D	40	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E		
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3N	43	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3P		
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	78	Engine Room Main Wire and Engine Room No.2 Wire (Engine Compartment Right)
II5	82	Dash Wire and Column Wire (Near the Ignition SW)
IX1	86	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BF3	90	Floor No.3 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)
BO4	94	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	78	Front Right Side of Fender Apron
EC	78	Rear Bank of Right Cylinder Head
EE	78	Front Left Side of Fender Apron
IF	80	Set Bolt of Cowl Side J/B LH
II	80	Set Bolt of Cowl Side J/B RH
BK	90	Front Side Under the Front Passenger's Seat
BM	90	Left Rear Side Quarter Panel

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	92	Floor No.1 Wire	B24	92	Floor No.2 Wire

