


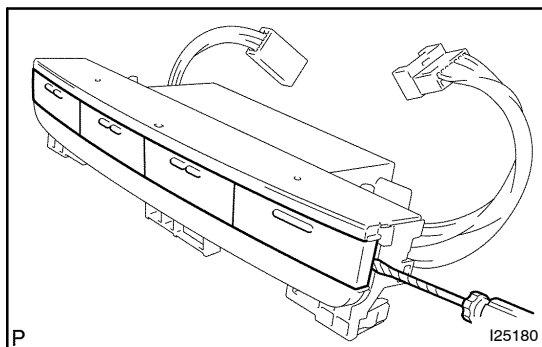

DISASSEMBLY


1. w/ LEXUS navigation system:
REMOVE KNOB

Using a screwdriver, pull out the knobs.

HINT:


Tape up the screwdriver tip before use.

AC3PJ-01

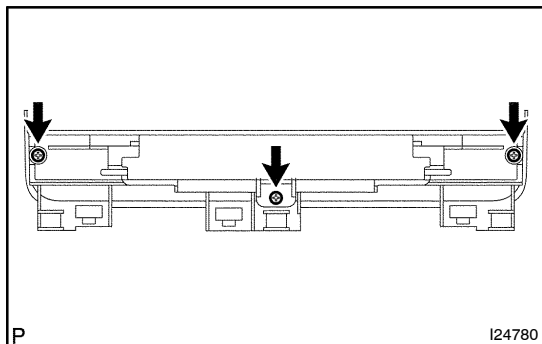


2. w/ LEXUS navigation system:
REMOVE INTEGRATION CONTROL PANEL

- (a) Remove the 3 screws.

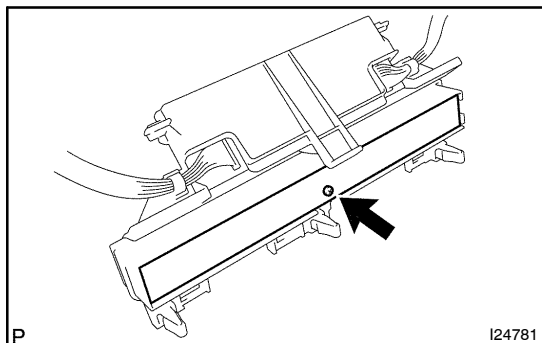

- (b) Remove the screw and the board.

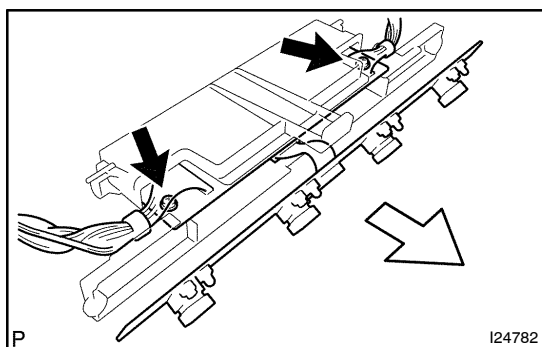

3. w/ LEXUS navigation system:
REMOVE HEATER CONTROL HOUSING

- (a) Disconnect the connector clamps.
- (b) Remove the 2 screws and pull out the board from the heater control housing.


4. **REMOVE KNOB**

- (a) Using a screwdriver, pull out the knobs.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the nut.

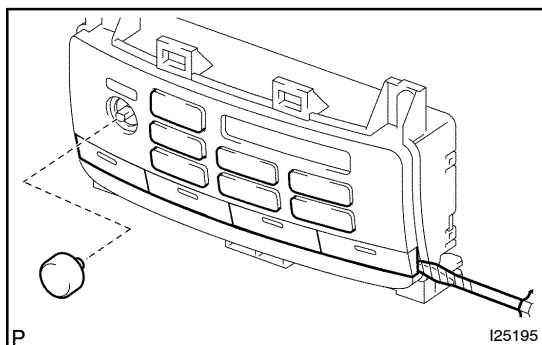


5. w/o LEXUS navigation system:
REMOVE KNOB


Using a screwdriver, pull out the knobs.

HINT:

Tape up the screwdriver tip before use.

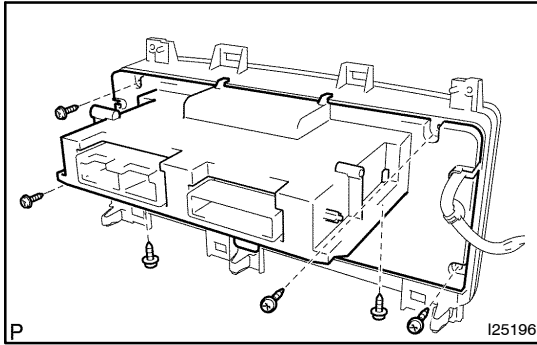**6. w/o LEXUS navigation system:****REMOVE INTEGRATION CONTROL PANEL**

- (a) Remove the 6 screws and pull out the A/C amplifier.

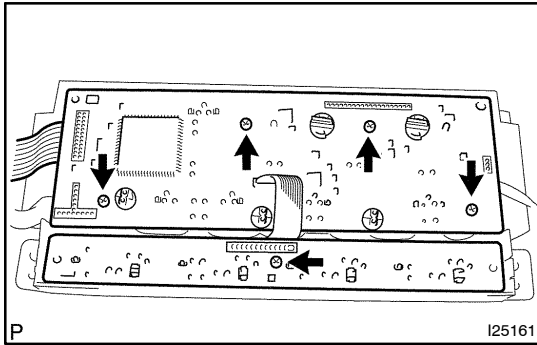

- (b) Remove the 5 screws and the board.