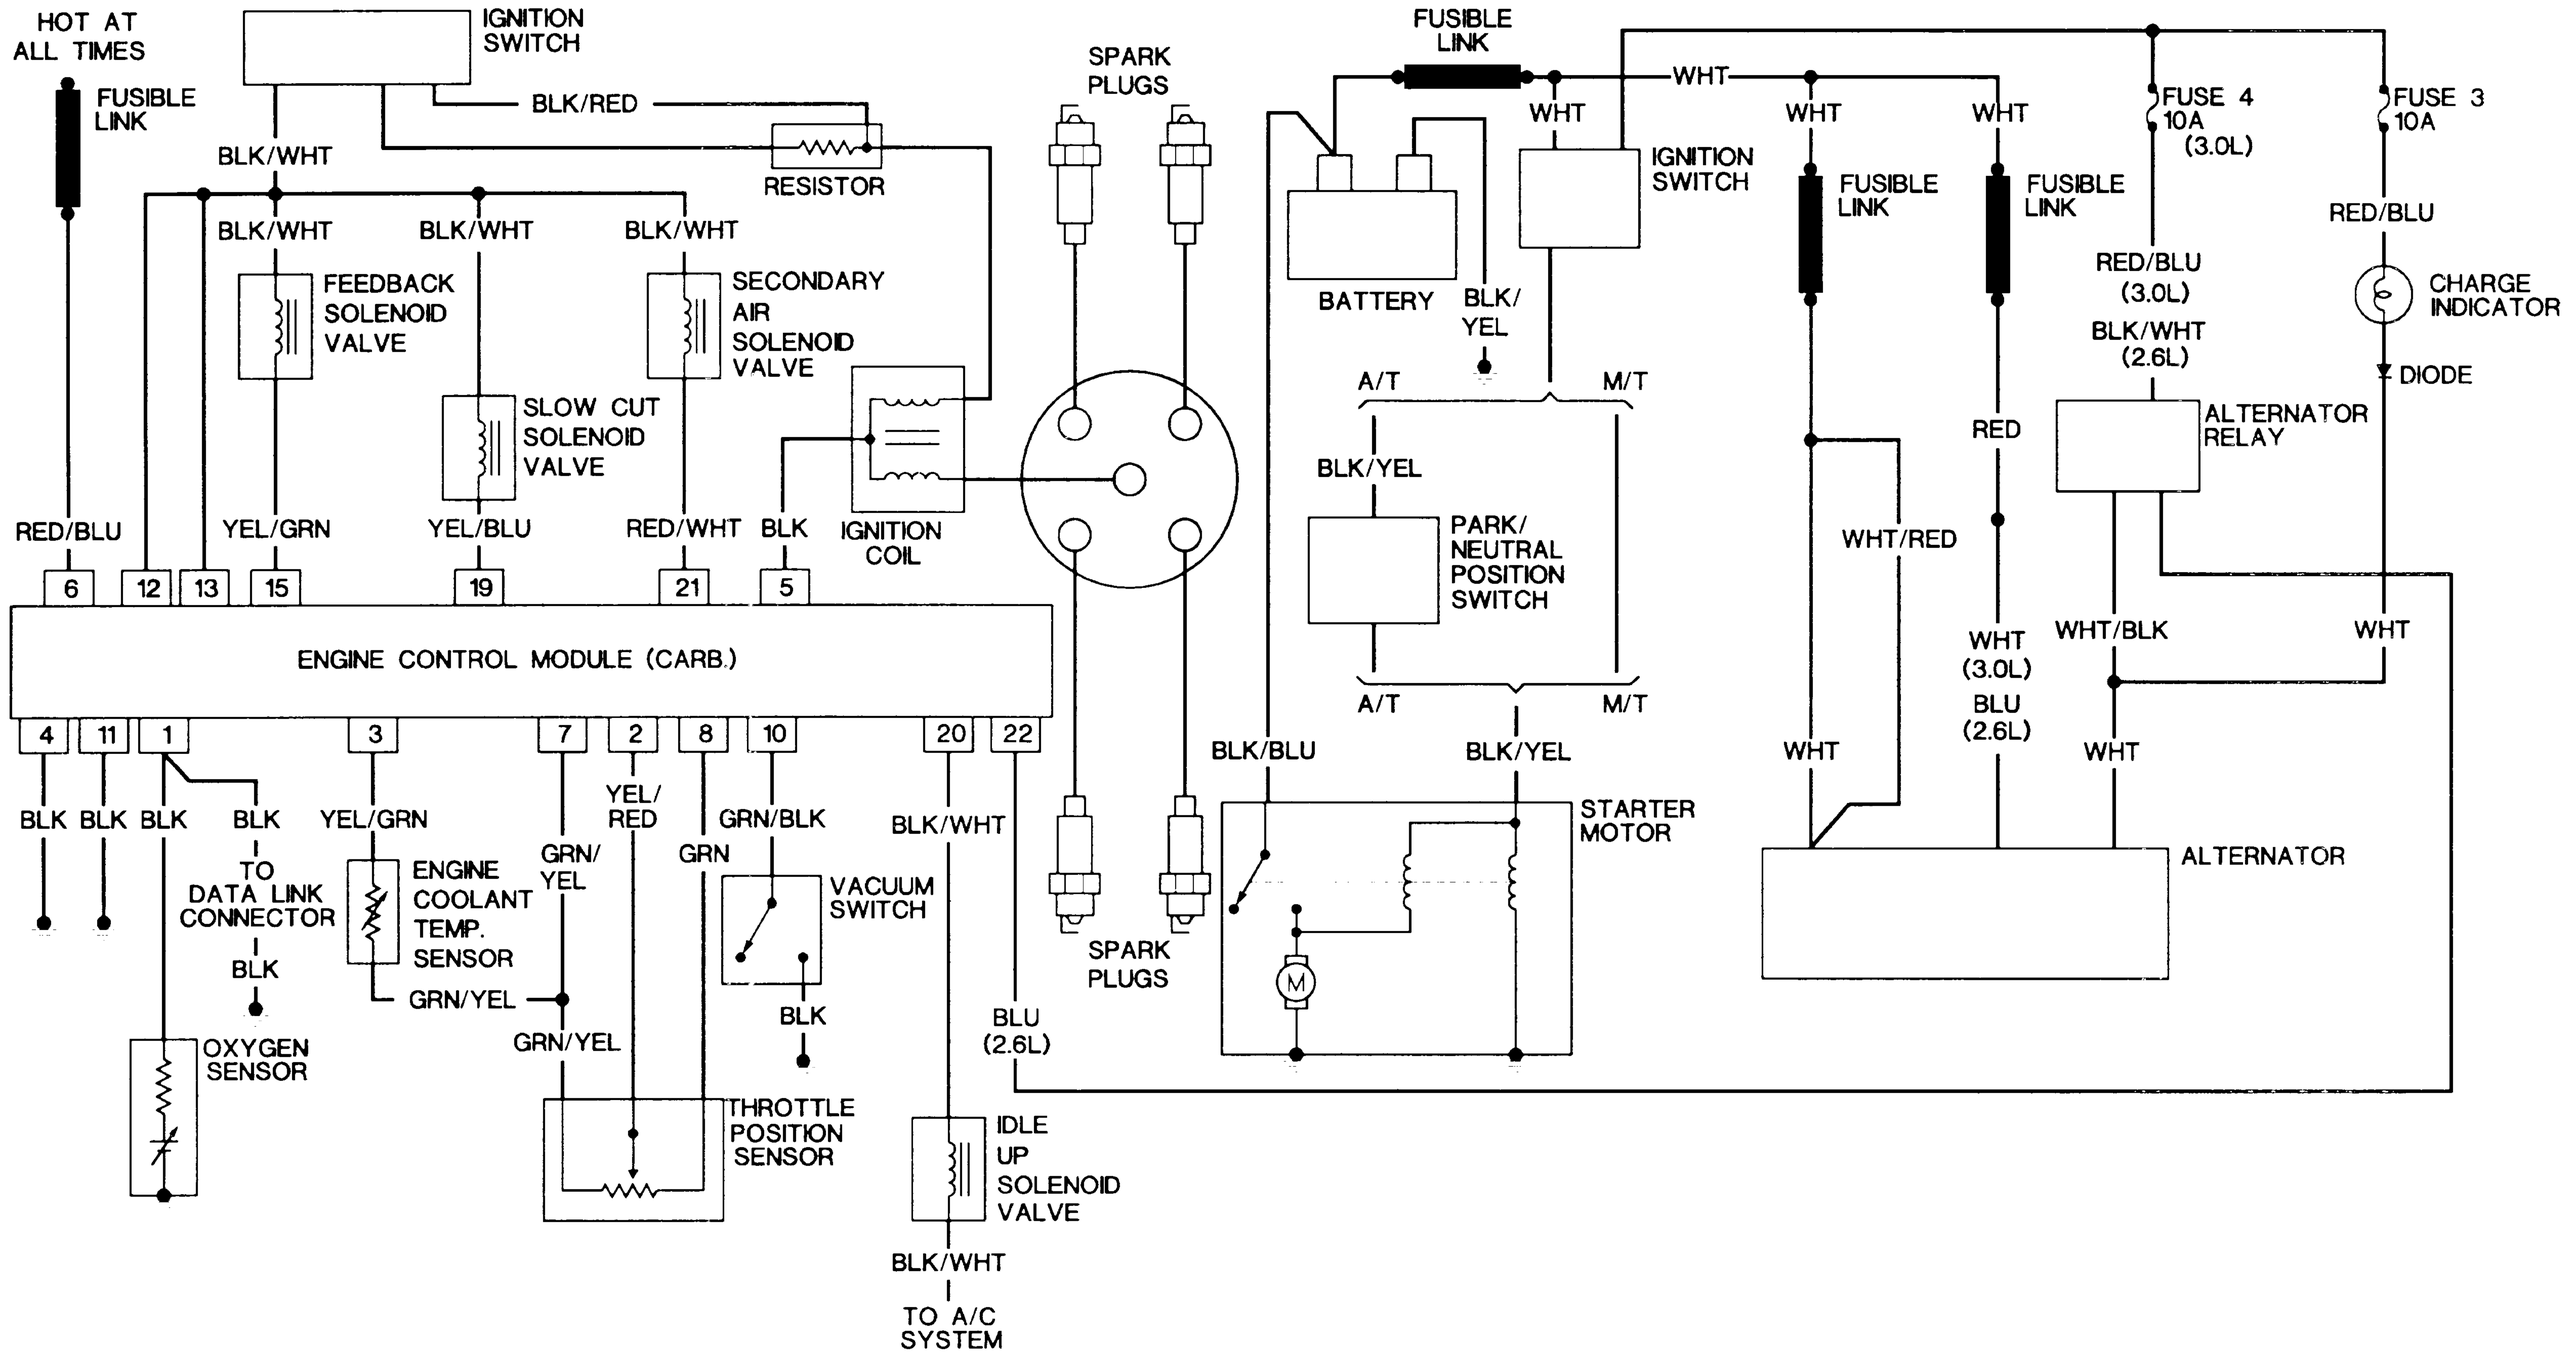
HOT AT ALL TIMES
FUSIBLE LINK
IGNITION SWITCH
BLK/RED
RESISTOR
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
FEEDBACK SOLENOID VALVE
SECONDARY AIR SOLENOID VALVE
SLOW CUT SOLENOID VALVE
SPARK PLUGS
RED/BLU
YEL/GRN
YEL/BLU
RED/WHT
BLK
IGNITION COIL
6
12
13
15
19
21
5
ENGINE CONTROL MODULE (CARB.)
4
11
1
3
7
2
8
10
20
22
BLK
BLK
BLK
BLK
TO DATA LINK CONNECTOR
BLK
OXYGEN SENSOR
YEL/GRN
ENGINE COOLANT TEMP. SENSOR
GRN/YEL
GRN/YEL
GRN/YEL
YEL/RED
GRN
GRN/BLK
VACUUM SWITCH
BLK
THROTTLE POSITION SENSOR
BLK/WHT
IDLE UP SOLENOID VALVE
BLK/WHT
TO A/C SYSTEM
SPARK PLUGS
BLU (2.6L)
FUSIBLE LINK
WHT
BATTERY
BLK/YEL
IGNITION SWITCH
A/T
M/T
BLK/YEL
PARK/ NEUTRAL POSITION SWITCH
A/T
M/T
BLK/BLU
BLK/YEL
STARTER MOTOR
M
WHT
WHT
WHT
FUSIBLE LINK
FUSIBLE LINK
WHT/RED
RED
WHT (3.0L)
BLU (2.6L)
WHT
FUSE 4 10A (3.0L)
RED/BLU (3.0L)
BLK/WHT (2.6L)
ALTERNATOR RELAY
WHT/BLK
WHT
WHT
FUSE 3 10A
RED/BLU
CHARGE INDICATOR
DIODE
ALTERNATOR