GROUP 21
CLUTCH

GENERAL

OUTLINE OF CHANGES

- Service point for the clutch pedal installation has been added.
- Service procedures for the clutch control have been changed since the clutch fluid line routing has been changed.
  <L.H. drive vehicles>

CLUTCH PEDAL

REMOVAL AND INSTALLATION

The procedure is the same as before.

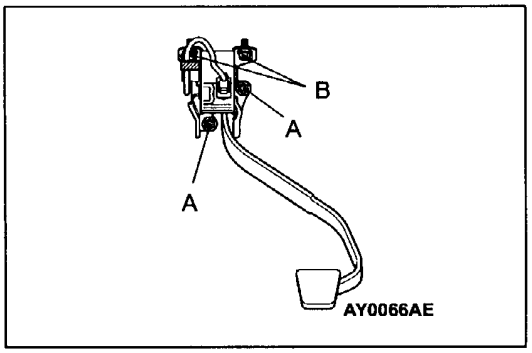

INSTALLATION SERVICE POINT

CLUTCH PEDAL AND PEDAL SUPPORT MEMBER INSTALLATION

Tighten the clutch master cylinder mounting nuts (A), and then the clutch pedal mounting bolts (B).

NOTE
The pedal support member can not be positioned correctly if the pedal mounting bolts (B) are tightened first as the their holes are oblong holes.

CLUTCH CONTROL <L.H. drive vehicles>

REMOVAL AND INSTALLATION

Pre-removal Operation
Clutch Fluid Draining

Post-installation Operation
- Clutch Fluid Supplying
- Clutch Line Bleeding (Refer to P.21-3)*
- Clutch Pedal Adjustment (Refer to P.21-2)*

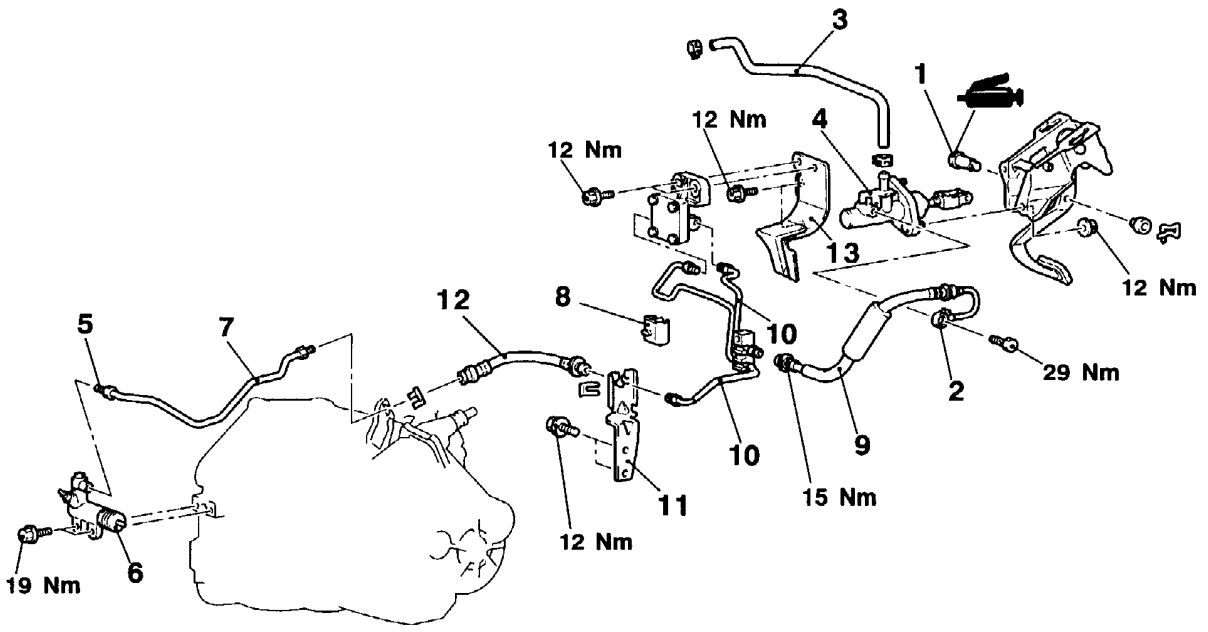

AY0069AE

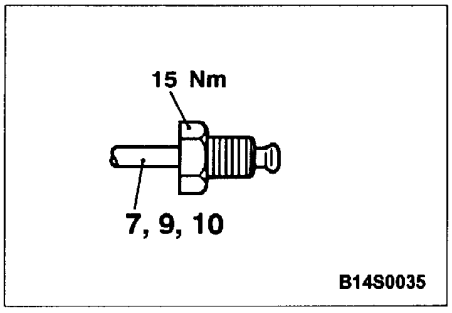

B14S0035

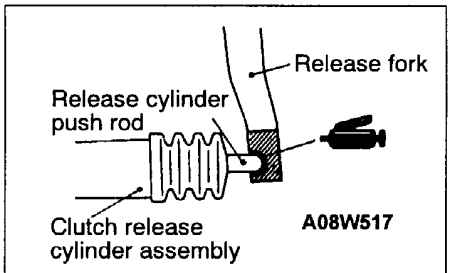

A08W517

Specified grease:
MITSUBISHI genuine grease Part No. 0101011

NOTE
*: Refer to '99 SPACE RUNNER,'99 SPACE WAGON Workshop Manual (Pub. No. PWDE9803).

Clutch master cylinder assembly removal steps
1. Clevis pin
2. Clutch pipe connection
3. Reservoir hose
4. Clutch master cylinder

Clutch release cylinder assembly removal steps
5. Clutch pipe connection
6. Clutch release cylinder assembly

Clutch line removal steps
7. Clutch pipe
8. Clip
9. Clutch hose
10. Clutch tube
11. Bracket
12. Clutch hose
13. Protector