

**DATSUN 280Z
MODEL S30 SERIES**

SECTION GI

GI

GENERAL INFORMATION

MODEL VARIATION	GI- 2
IDENTIFICATION NUMBERS	GI- 3
APPROXIMATE REFILL CAPACITIES	GI- 4
RECOMMENDED PETROL (FUEL)	GI- 4
RECOMMENDED LUBRICANTS	GI- 4
LIFTING POINTS AND TOWING	GI- 5



NISSAN MOTOR CO., LTD.
TOKYO, JAPAN


General Information

MODEL VARIATION

Destination		Class	Model	Engine	Transmission model	Tire size	Differential gear carrier	
							Model	Gear ratio
U.S.A.	All areas except California	2-seater	HLS30U	L28	F4W71B	175HR-14 195/70HR-14*	R200	3.545
			HLS30AU		3N71B			
		2 + 2-seater	GHLS30U		F4W71B			
			GHLS30AU		3N71B			
	California	2-seater	HLS30UV		F4W71B			
			HLS30AUV		3N71B			
		2 + 2-seater	GHLS30UV		F4W71B			
			GHLS30AUV		3N71B			
Canada		2-seater	HLS30UN		F4W71B			
			HLS30AUN		3N71B			
		2 + 2-seater	GHLS30UN		F4W71B			
			GHLS30AUN		3N71B			

Items with an asterisk "*": Steel radial with tube.

G H L S30 A U N V C

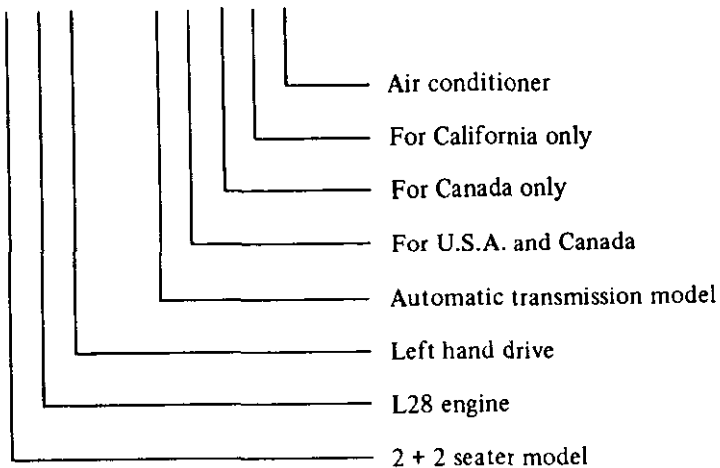

IDENTIFICATION NUMBERS

The unit and car numbers are stamped and registered at the factory.

The engine and car identification numbers are used on legal documents.

These numbers are used for factory communication such as Technical Report, Warranty Claim, Service Journal and other information.

CAR IDENTIFICATION PLATE

The car identification plate is located on the left hoodledge panel at the back of strut housing.

The plate contains the car type, engine capacity, maximum horsepower, wheelbase and engine and car serial numbers.

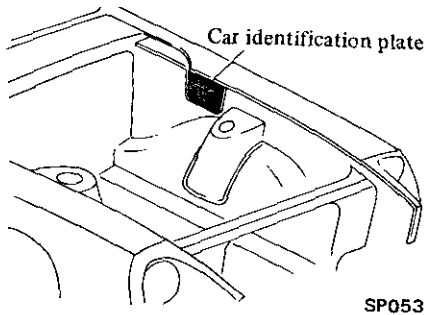


Fig. G1-1 Car identification plate location

CAR SERIAL NUMBER

The car serial number is stamped on the instrument panel and can be seen from outside. The car number consists

of the car model and the serial number.

(HLS30-XXXXX)

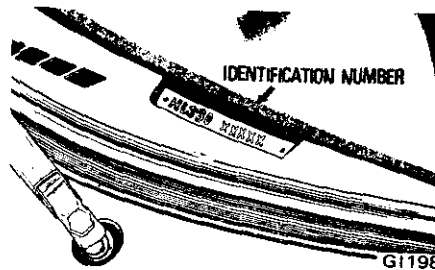


Fig. G1-2 Car serial number location

ENGINE SERIAL NUMBER

The engine serial number is stamped on the right side of the cylinder block.

The number is broken down as shown in the following Figure G1-3.

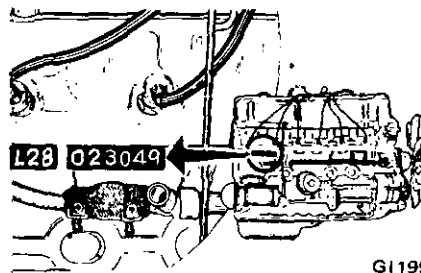


Fig. G1-3 Engine serial number location

COLOR CODE NUMBER LABEL

The body color number plate is attached on the top face of radiator core support.


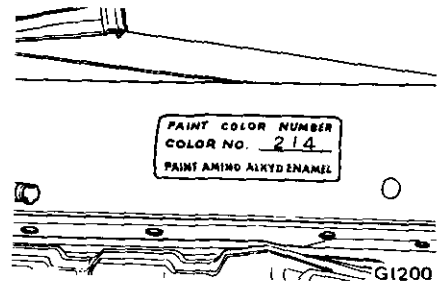


Fig. G1-4 Body color number location

CERTIFICATION AND INFORMATION LABEL LOCATION

The M.V.S.S. certification and Vehicle emission control information labels are affixed to the upper portion of the left lock pillar.

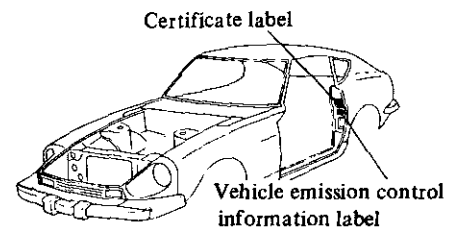

SP058

BODY AND UPHOLSTERY COLORS

Body color number		Body color	Upholstery color
1.	110*	Red	Black, Beige
2.	214	Brown Metallic	Black, Coffee Brown
3.	301	Bronze Metallic	Black, Coffee Brown
4.	302	Leaf Green Metallic	Black, Beige, Coffee Brown
5.	240	Green Metallic	Black, Beige, Coffee Brown
6.	304	Gold Metallic	Black, Beige, Coffee Brown
7.	305	Light Blue Metallic	Black, Beige
8.	306	Silver Metallic	Black, Coffee Brown
9.	307	Blue Metallic	Black, Beige
10.	216*	White	Black, Coffee Brown

Note: Paint finish consists of two coats and one bake except for those marked with an asterisk, which indicates one coat and one bake.

APPROXIMATE REFILL CAPACITIES

		Liters	U.S. measure	Imper. measure
Fuel tank		65	17 $\frac{1}{8}$ gal.	14 $\frac{3}{8}$ gal.
Engine cooling system (including heater and reserve tank) *1		10.4	11 qt.	9 $\frac{1}{8}$ qt.
Engine crankcase *2		4.7	5 qt.	4 $\frac{1}{8}$ qt.
Transmission case	Manual	1.5	3 $\frac{1}{8}$ pt.	2 $\frac{5}{8}$ pt.
	Automatic	5.5	5 $\frac{7}{8}$ qt.	4 $\frac{7}{8}$ qt.
Differential case		1.3	2 $\frac{3}{4}$ pt.	2 $\frac{1}{4}$ pt.

*1 Includes 0.8 liter ($\frac{1}{8}$ U.S. qt., $\frac{1}{4}$ Imp. qt.) required for heater.

*2 Includes 0.7 liter ($\frac{3}{4}$ U.S. qt., $\frac{5}{8}$ Imp. qt.) required for oil filter replacement.

RECOMMENDED PETROL (Fuel)

Use an unleaded or low-lead gasoline with a minimum octane rating of 91 RON (Research Octane


Number).

For cars which meet the California regulations (California Models), use

only unleaded gasoline to protect the catalytic converter from contamination.

RECOMMENDED LUBRICANTS

RECOMMENDED SAE VISCOSITY NUMBER

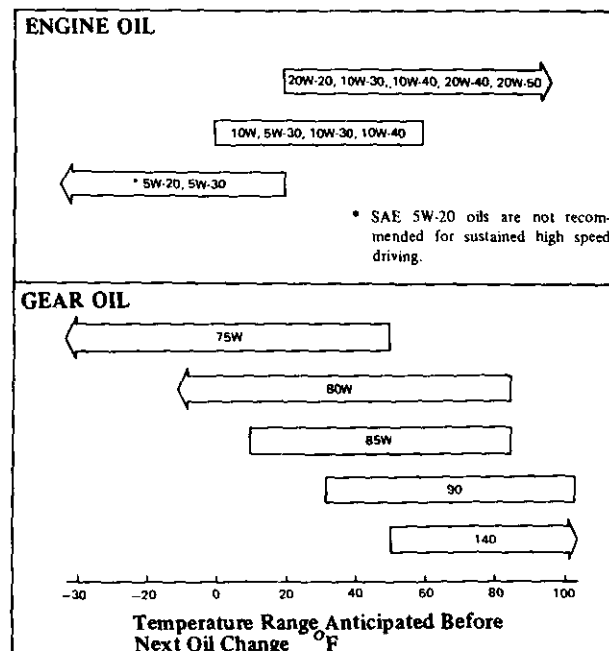

LUBRICANT SPECIFICATION

(For U.S.A. and Canada) from June 1, 1972.


Item		Specifications	Remarks
Gasoline engine oil		SAE Classification SD or SE	Furthermore refer to SAE recommended viscosity table. See Page 4.
Gear oil	Transmission and steering	API GL-4	_____
	Differential	API GL-5	_____
Automatic T/M fluid		Type DEXRON	_____
Multipurpose grease		NLGI 2	Lithium soap base
Brake and clutch fluid		DOT 3	_____
Antifreeze		_____	Permanent anti-freeze (Ethylene glycol base)

LIFTING POINTS AND TOWING

JACK UP

PANTOGRAPH JACK

Place a jack under the position where sill flange is cut for identification. Do not jack up other positions.

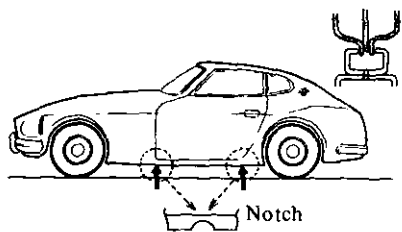


G1201

Fig. G1-5 Jacking point

GARAGE JACK


The front jacking point is center of front suspension member and rear is differential gear carrier.

Do not place a jack on the center portion of front suspension transverse link.

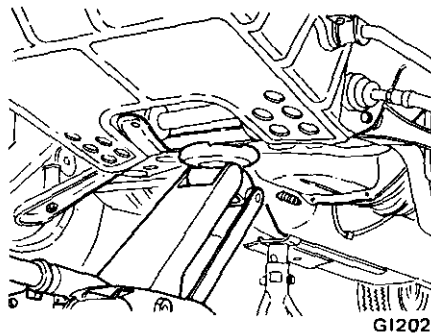

G1202


Fig. G1-6 Front jacking point

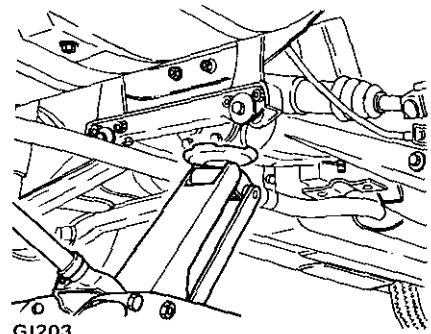

G1203


Fig. G1-7 Rear jacking point

supportable points are on both sides of front differential mounting cross-member.

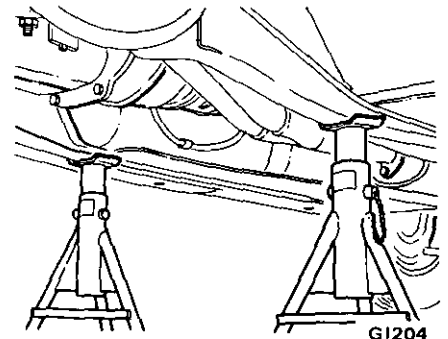

G1204

Fig. G1-8 Front supportable points

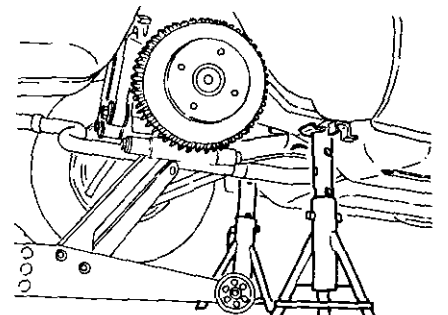

G1205

Fig. G1-9 Rear supportable points

SUPPORTABLE POINT

Front supportable points for stand are both front side members. Rear

TOWING

WARNING

Only front hooks may be used for towing purposes. When front hooks are used for towing, remove front apron and front fender front to prevent possible interference with towing rope.

Be sure to remove rear hooks before delivery of car.

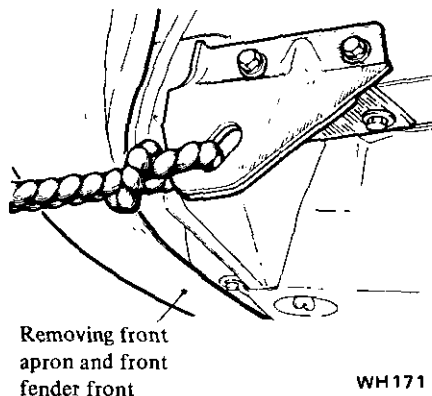


Fig. GI-10 Front towing point

AUTOMATIC TRANSMISSION MODEL

Car may be towed safely on its rear wheels on the ground with select lever in "N" (Neutral) position at speeds of less than 30 km/h (20 MPH). However, propeller shaft must be disconnected or car must be towed on its front wheels on the ground under the following conditions:

1. Two speed of more than 30 km/h (20 MPH).
2. Car must be towed for a long distance (over 6 miles or 10 km).
3. Transmission is not operating properly.

If car is towed on its front wheels on the ground, steering wheel should be secured to maintain a straight ahead position.

Caution: Always pull the rope in a straight direction with respect to hook.

Do not apply force to hook in side directions.

TIE-DOWN HOOK

There are four tie-down hooks. Two of them are located on front side members, and the other two on rear panel.

Front tie-down hook attached to either side member is also used as a towing hook.

Note: When fastening chains to rear transverse link, wrap them around link to avoid interfering with any adjacent parts.

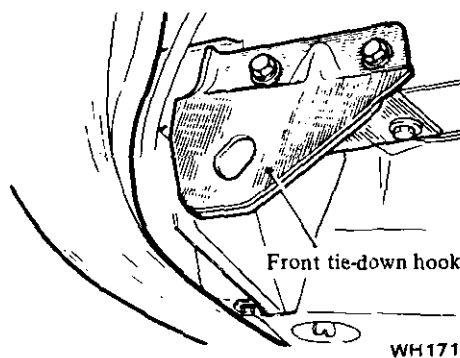


Fig. GI-11 Front tie-down hook

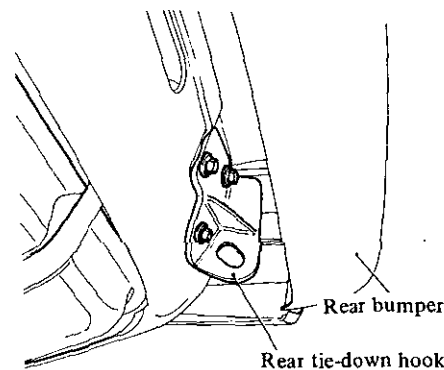


Fig. GI-12 Rear tie-down hook



509 Debby Lane
Adamsville, AL 35005
<http://www.zcarcreations.com>
cborden@zcarcreations.com

NISSAN FACTORY SERVICE MANUAL CDROM END-USER LICENSE AGREEMENT

NOTICE TO USER: THIS IS A CONTRACT. BY PURCHASING AND USING THE SERVICE MANUAL ON CDROM, YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT.

This End User License Agreement accompanies the Service Manual on CDROM product and related explanatory materials. Please read this Agreement carefully. By purchasing and using the Service Manual on CDROM, you are implying that you have carefully read, agree with, and will adhere to the conditions set forth in this agreement. If you do not wish to accept the terms of this End User Agreement please do not use the Service Manual on CDROM. You will not be permitted to use the Service Manual on CDROM without consenting to this end user agreement.

Upon your acceptance of this Agreement, Z Car Creations, LLC grants to you a nonexclusive license to use the Service Manual on CDROM, provided that you agree to the following:

USE OF SOFTWARE

You may install the contents of the CD on a hard disk or other storage device for personal use only. Each Service Manual on CDROM comes with a single user license. Under no circumstances should the contents of the Service Manual CDROM be placed on a server for purposes of distributing or allowing access to the material over a network.

COPYRIGHT AND TRADEMARK RIGHTS

The Service Manual CDROM is owned by Z Car Creations, LLC and its structure and organization, all graphics and coding are considered intellectual property of Z Car Creations, LLC. The manual content itself is property of Nissan Motors. The Service Manual on CDROM is also protected by United States Copyright Law and International Treaty provisions. This Agreement does not grant you any intellectual property or resale rights to the Service Manual CDROM.

RESTRICTIONS

You agree not to modify, adapt, translate, reverse engineer, decompile or disassemble the PDF file on the Service Manual CDROM. The Service Manual on CDROM is licensed and distributed by Z Car Creations, LLC for single user utilization of its contents only. Licensed users will be permitted to use the contents of the Service Manual CDROM for multimedia presentation to an audience from a single machine using a large display or projection device but the Service Manual CDROM may not otherwise be distributed, sold to or made accessible to multiple users.

NO WARRANTY

The software is being delivered to you AS IS and Z Car Creations, LLC makes no warranty as to its use or performance. Z CAR CREATIONS, LLC DOES NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SERVICE MANUAL CDROM OR DOCUMENTATION, NOR MAKES ANY WARRANTIES, EXPRESS OR IMPLIED, AS TO NONINFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL Z CAR CREATIONS, LLC BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR SPECIAL DAMAGES FOR ANY REASON.



509 Debby Lane
Adamsville, AL 35005
<http://www.zcarcreations.com>
cborden@zcarcreations.com

GOVERNING LAW AND GENERAL PROVISIONS

This Agreement will be governed by the laws of the State of Alabama, USA, excluding the application of its conflicts of law rules. This Agreement will not be governed by the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If any part of this Agreement is found void and unenforceable, it will not affect the validity of the balance of the Agreement, which shall remain valid and enforceable according to its terms. You agree that the Service Manual on CDROM will not be shipped, transferred or exported into any country or used in any manner prohibited by the United States Export Administration act or any other export laws, restrictions or regulations. This Agreement shall automatically terminate upon failure by you to comply with its terms. This Agreement may only be modified in writing signed by and authorized officer for Z Car Creations, LLC.

Craig Borden
Z Car Creations, LLC
509 Debby Lane
Adamsville, AL 35005
USA

YOUR ACCEPTANCE OF THE FOREGOING AGREEMENT IS IMPLIED UPON PURCHASING AND USING THE SERVICE MANUAL CDROM.