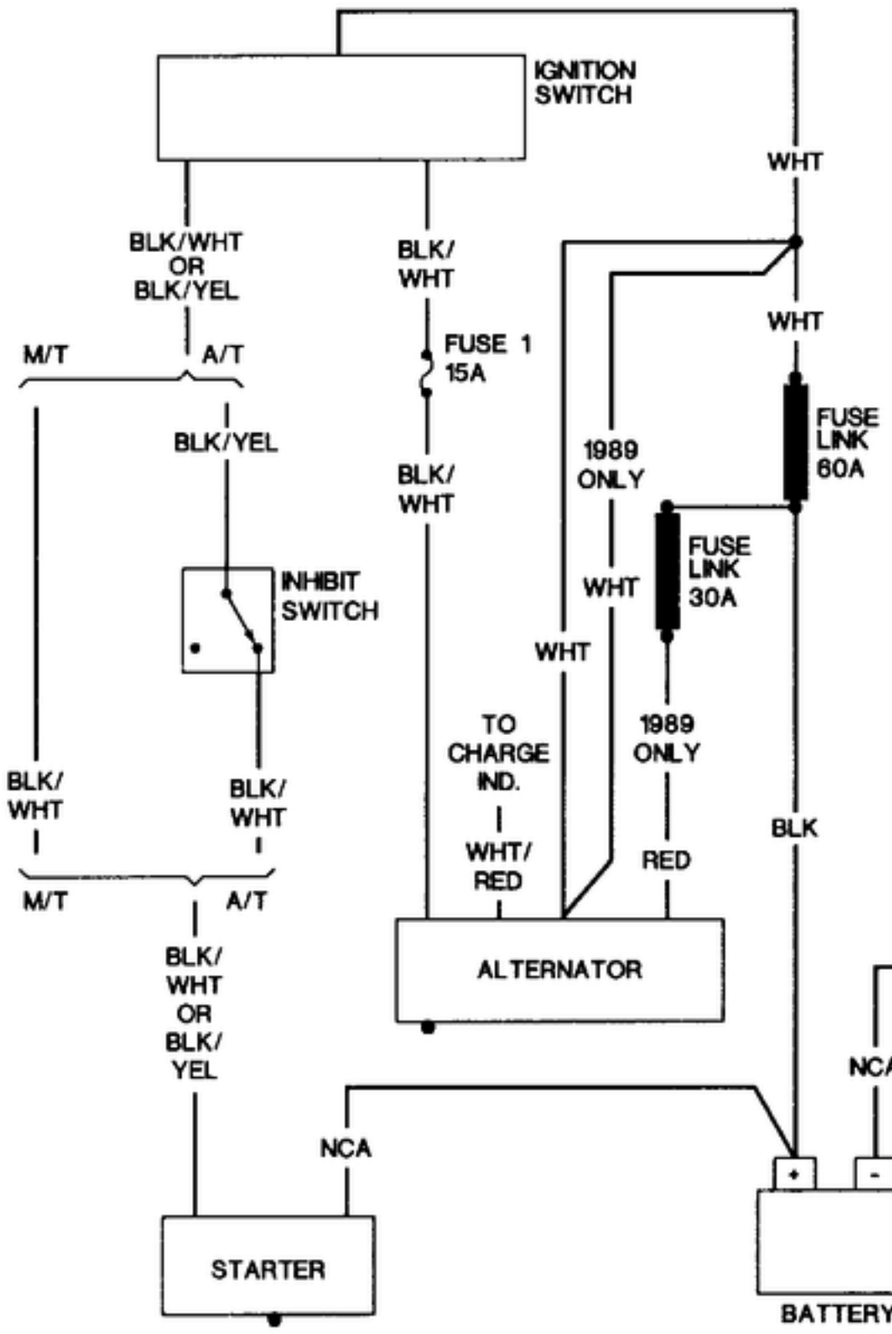
IGNITION SWITCH
BLK/WHT OR BLK/YEL
M/T
A/T
BLK/YEL
BLK/ WHT
BLK/ WHT
FUSE 1 15A
BLK/ WHT
INHIBIT SWITCH
BLK/ WHT
M/T
BLK/ WHT OR BLK/ YEL
A/T
WHT
WHT
FUSE LINK 60A
1989 ONLY
FUSE LINK 30A
WHT
WHT
TO CHARGE IND.
1989 ONLY
WHT/ RED
RED
BLK
ALTERNATOR
NCA
NCA
STARTER
BATTERY

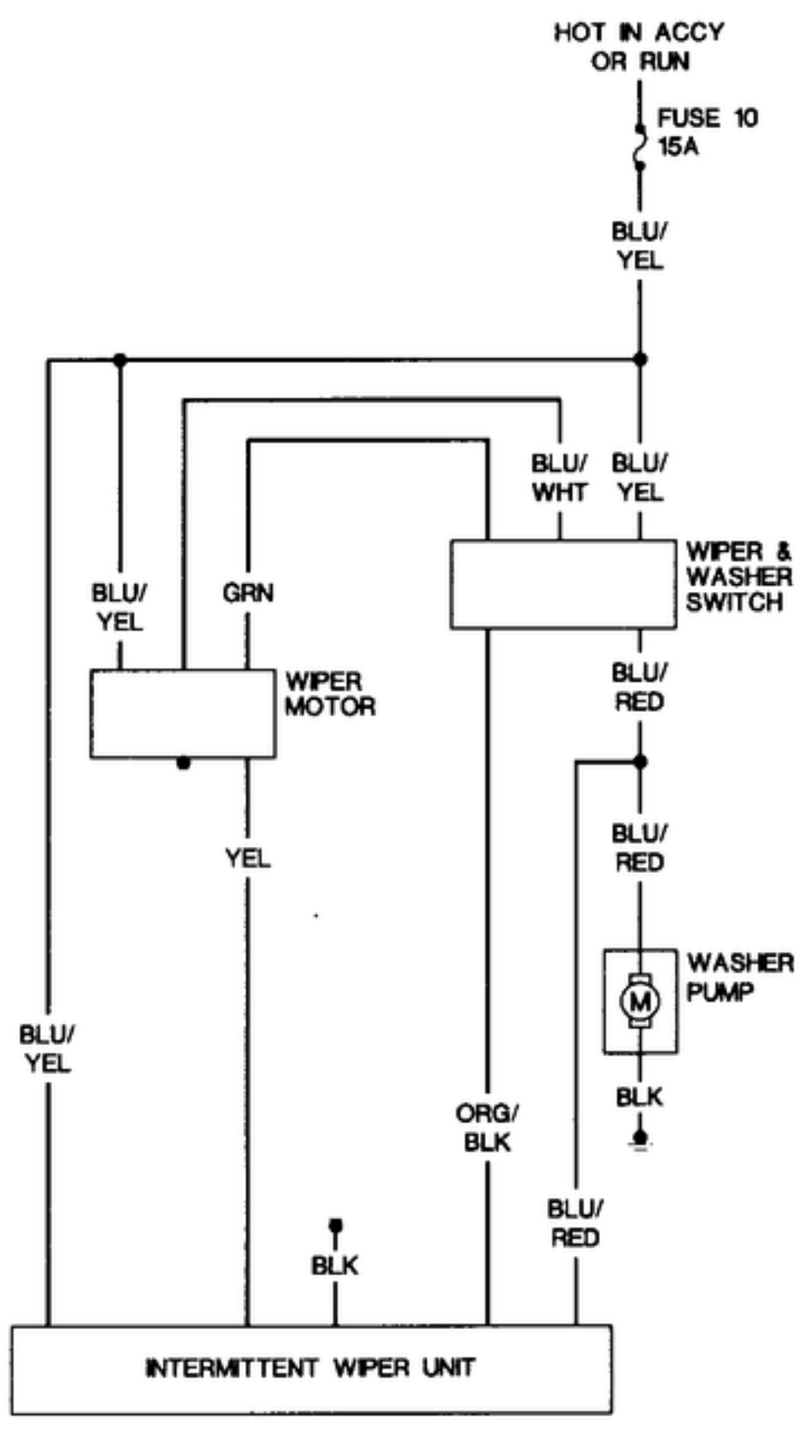
HOT IN ACCY OR RUN
FUSE 10 15A
BLU/ YEL
BLU/ YEL
BLU/ WHT
BLU/ YEL
WIPER & WASHER SWITCH
BLU/ YEL
GRN
WIPER MOTOR
BLU/ RED
YEL
BLU/ RED
WASHER PUMP
M
BLK
BLU/ YEL
ORG/ BLK
BLU/ RED
BLK
INTERMITTENT WIPER UNIT

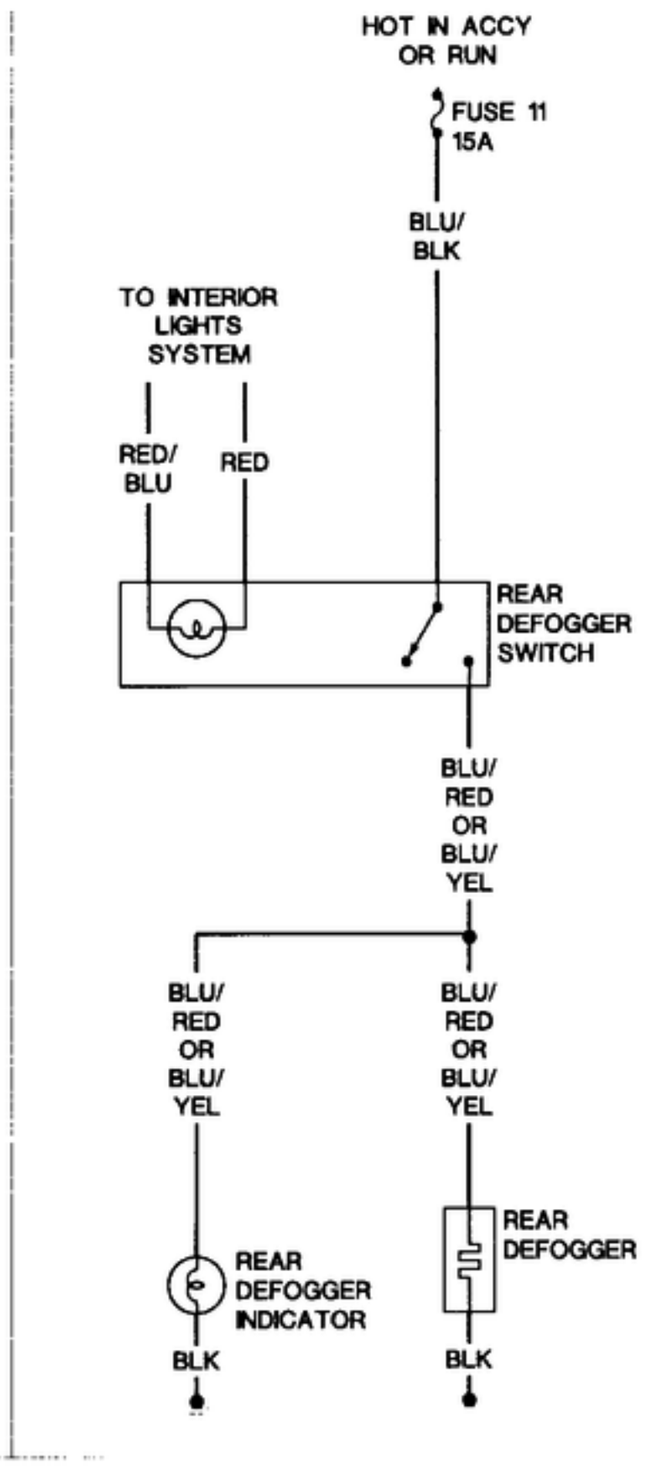
HOT IN ACCY OR RUN
FUSE 11 15A
BLU/ BLK
TO INTERIOR LIGHTS SYSTEM
RED/ BLU
RED
REAR DEFOGGER SWITCH
BLU/ YEL
BLU/ RED OR BLU/ YEL
BLU/ RED OR BLU/ YEL
REAR DEFOGGER INDICATOR
REAR DEFOGGER
BLK
BLK

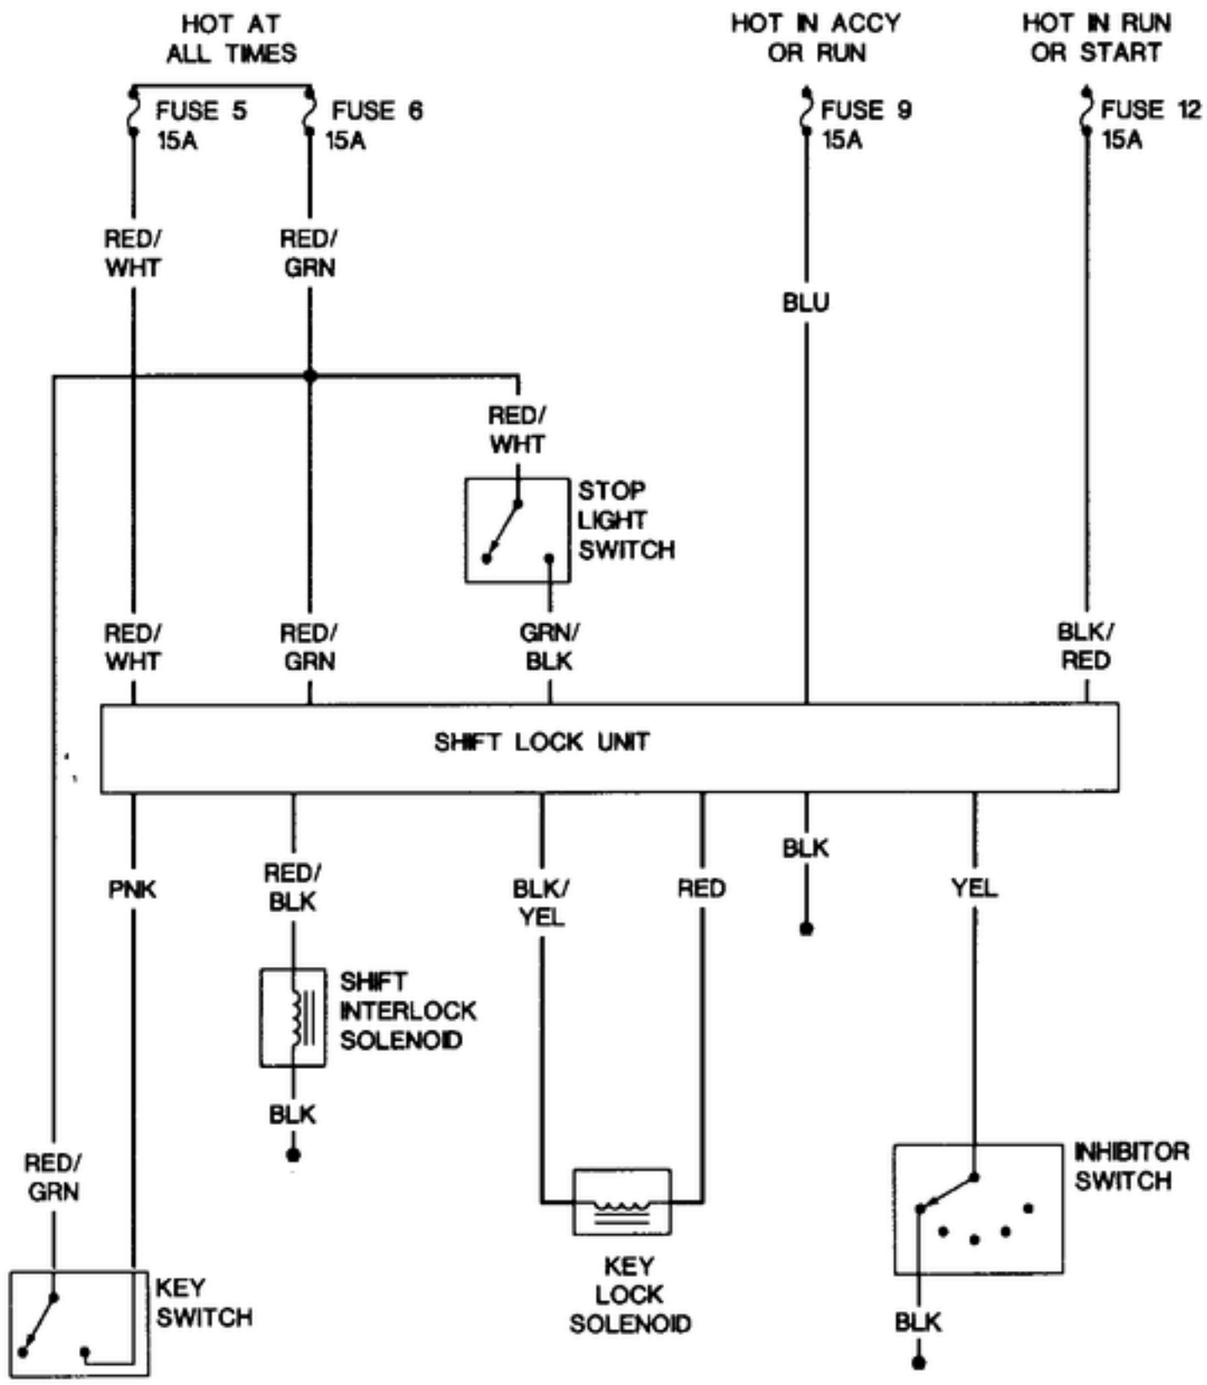
HOT AT ALL TIMES
FUSE 5 15A
FUSE 6 15A
RED/ WHT
RED/ GRN
RED/ WHT
STOP LIGHT SWITCH
GRN/ BLK
RED/ WHT
RED/ GRN
BLK/ RED
SHIFT LOCK UNIT
PNK
RED/ BLK
BLK/ YEL
RED
BLK
YEL
SHIFT INTERLOCK SOLENOID
BLK
RED/ GRN
KEY SWITCH
KEY LOCK SOLENOID
INHIBITOR SWITCH
BLK

HOT IN ACCY OR RUN
FUSE 9 15A
BLU

HOT IN RUN OR START
FUSE 12 15A

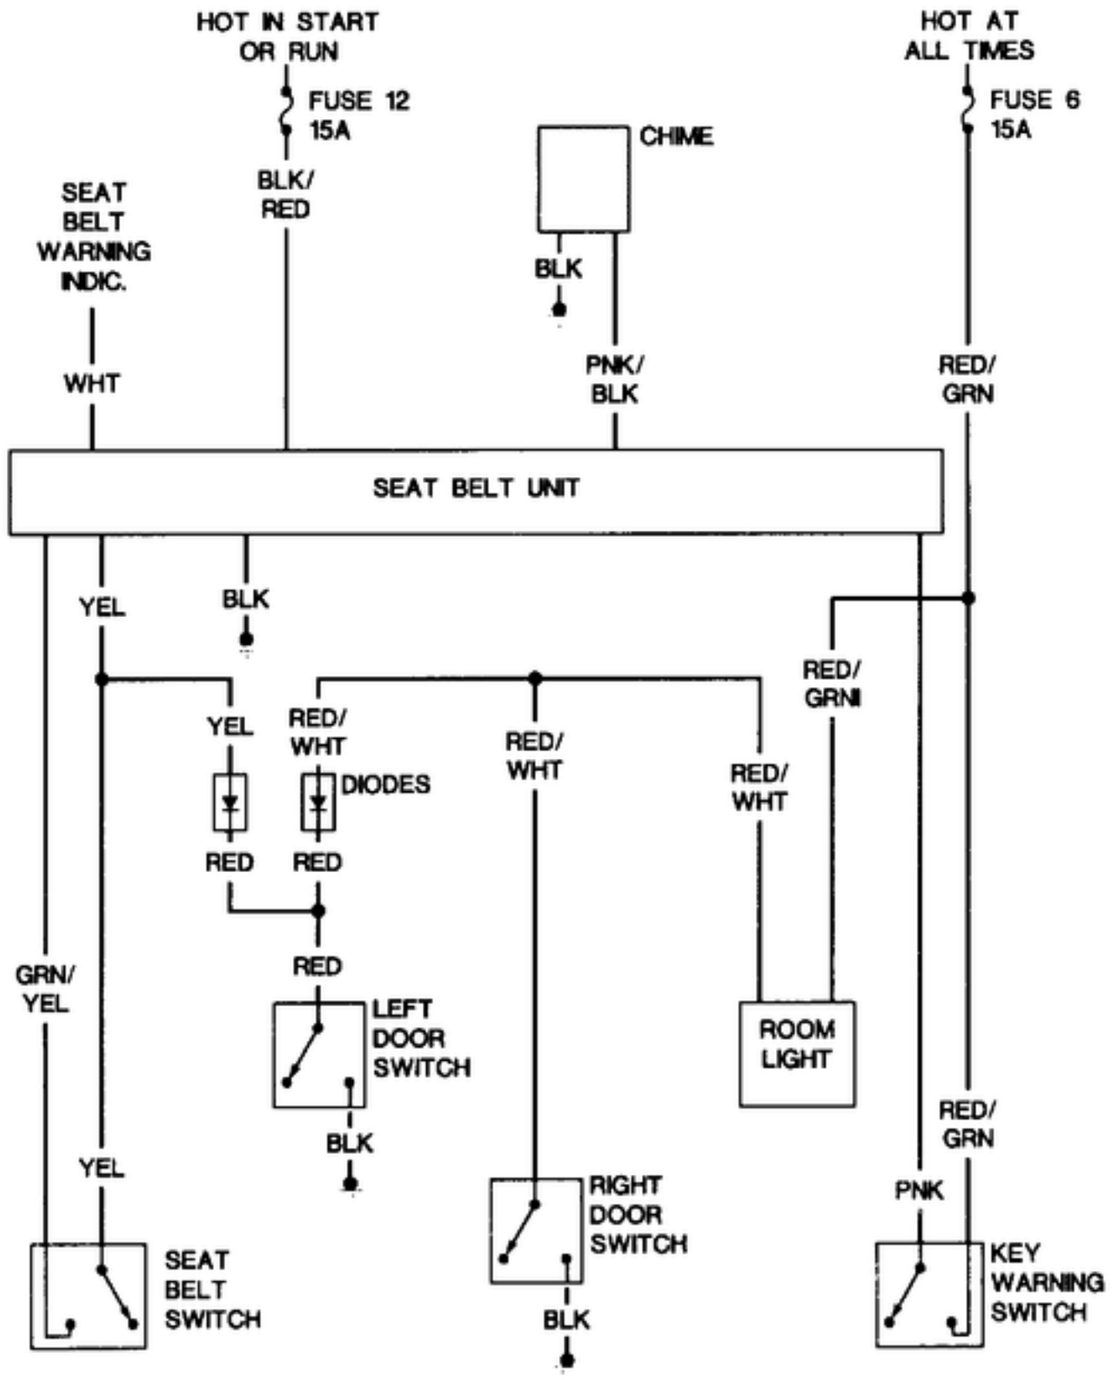
SEAT BELT WARNING INDIC.
WHT
HOT IN START OR RUN
FUSE 12 15A
BLK/ RED
PNK/ BLK
CHIME
BLK
PNK/ BLK
HOT AT ALL TIMES
FUSE 6 15A
RED/ GRN
SEAT BELT UNIT
YEL
BLK
YEL
RED/ WHT
DIODES
RED
RED
RED
LEFT DOOR SWITCH
BLK
RED/ WHT
RED/ WHT
RED/ WHT
RED/ GRN
ROOM LIGHT
GRN/ YEL
YEL
SEAT BELT SWITCH
RIGHT DOOR SWITCH
BLK
RED/ GRN
PNK
KEY WARNING SWITCH