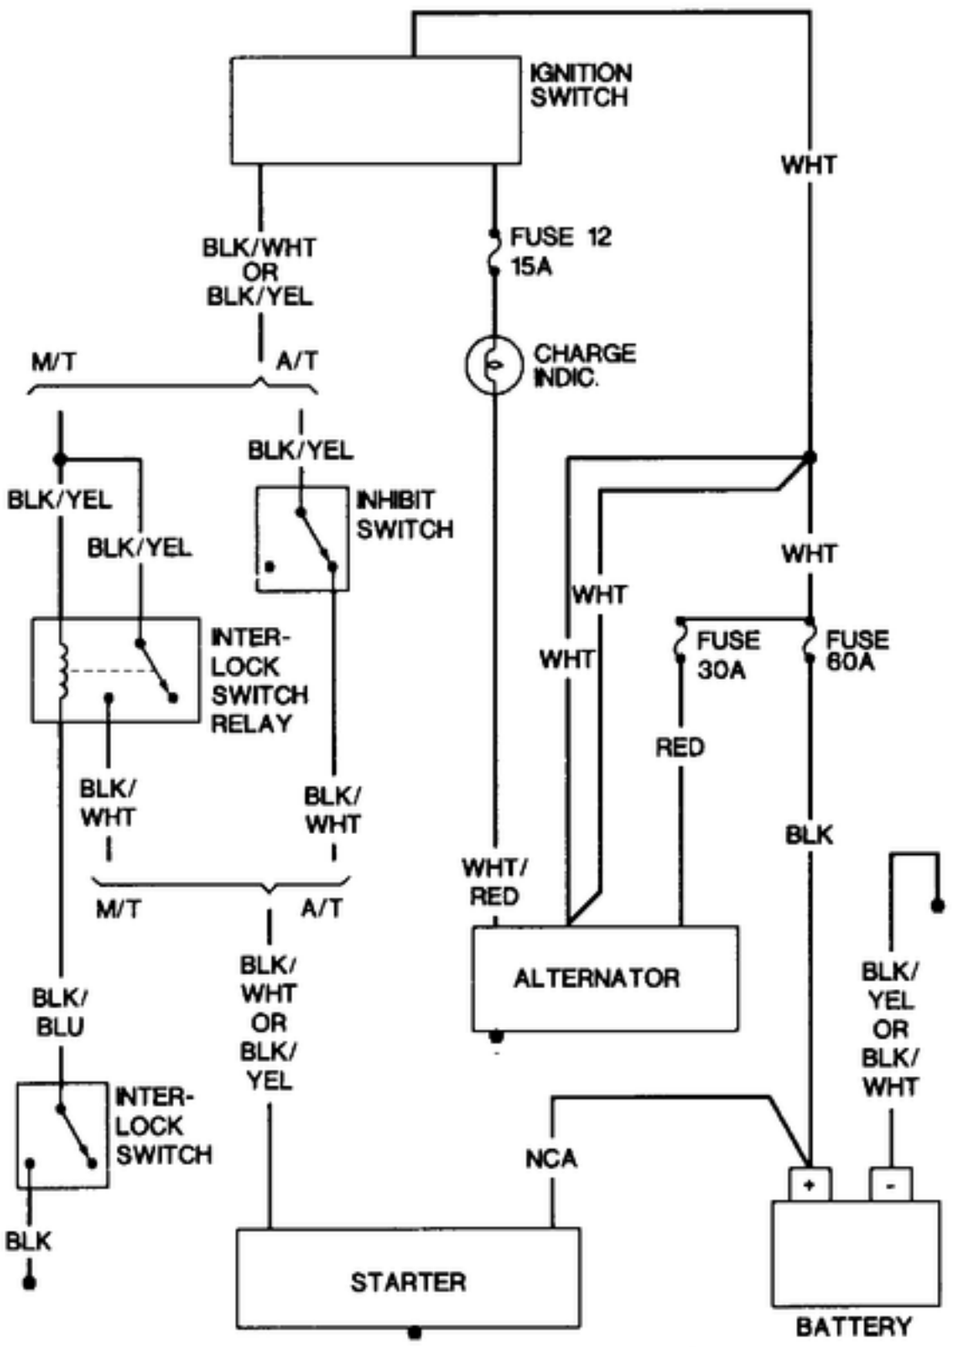
IGNITION SWITCH
WHT
BLK/WHT OR BLK/YEL
FUSE 12 15A
M/T
A/T
CHARGE INDIC.
BLK/YEL
BLK/YEL
INHIBIT SWITCH
BLK/YEL
WHT
WHT
WHT
INTER-LOCK SWITCH RELAY
FUSE 30A
FUSE 60A
RED
BLK
BLK/ WHT
BLK/ WHT
M/T
A/T
WHT/ RED
BLK/ WHT OR BLK/ YEL
ALTERNATOR
BLK/ YEL OR BLK/ WHT
BLK/ BLU
INTER-LOCK SWITCH
NCA
BLK
STARTER
BATTERY

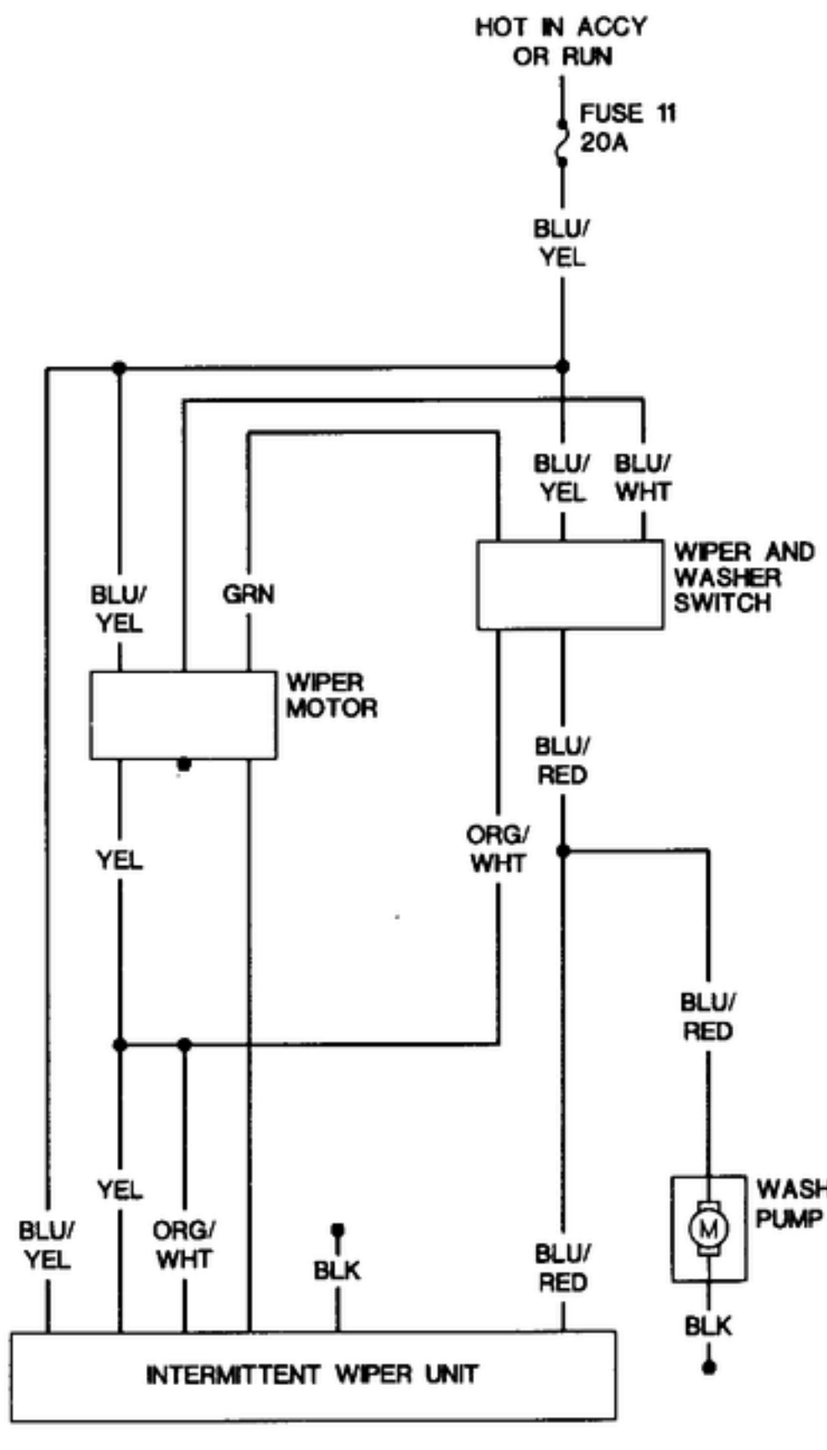
HOT IN ACCY OR RUN
FUSE 11 20A
BLU/ YEL
BLU/ YEL
BLU/ WHT
WIPER AND WASHER SWITCH
BLU/ YEL
GRN
WIPER MOTOR
BLU/ RED
YEL
ORG/ WHT
BLU/ RED
WASHER PUMP
M
BLK
YEL
BLU/ YEL
ORG/ WHT
BLK
BLU/ RED
INTERMITTENT WIPER UNIT

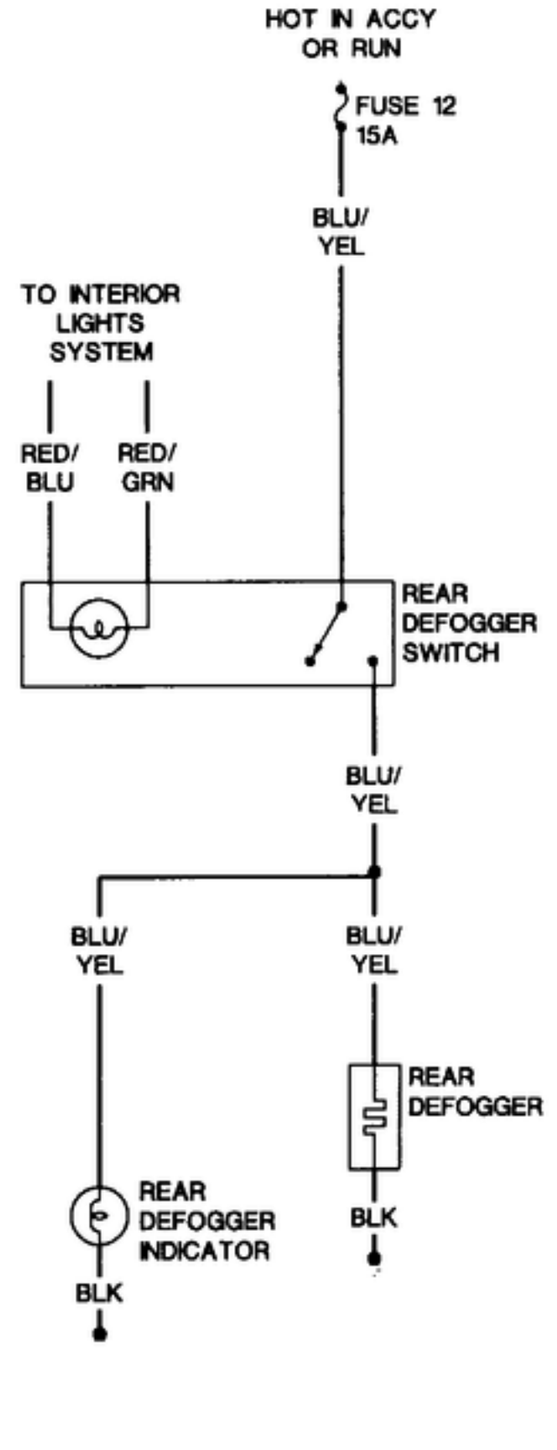
HOT IN ACCY OR RUN
FUSE 12 15A
BLU/ YEL
TO INTERIOR LIGHTS SYSTEM
RED/ BLU
RED/ GRN
REAR DEFOGGER SWITCH
BLU/ YEL
BLU/ YEL
BLU/ YEL
REAR DEFOGGER
REAR DEFOGGER INDICATOR
BLK
BLK

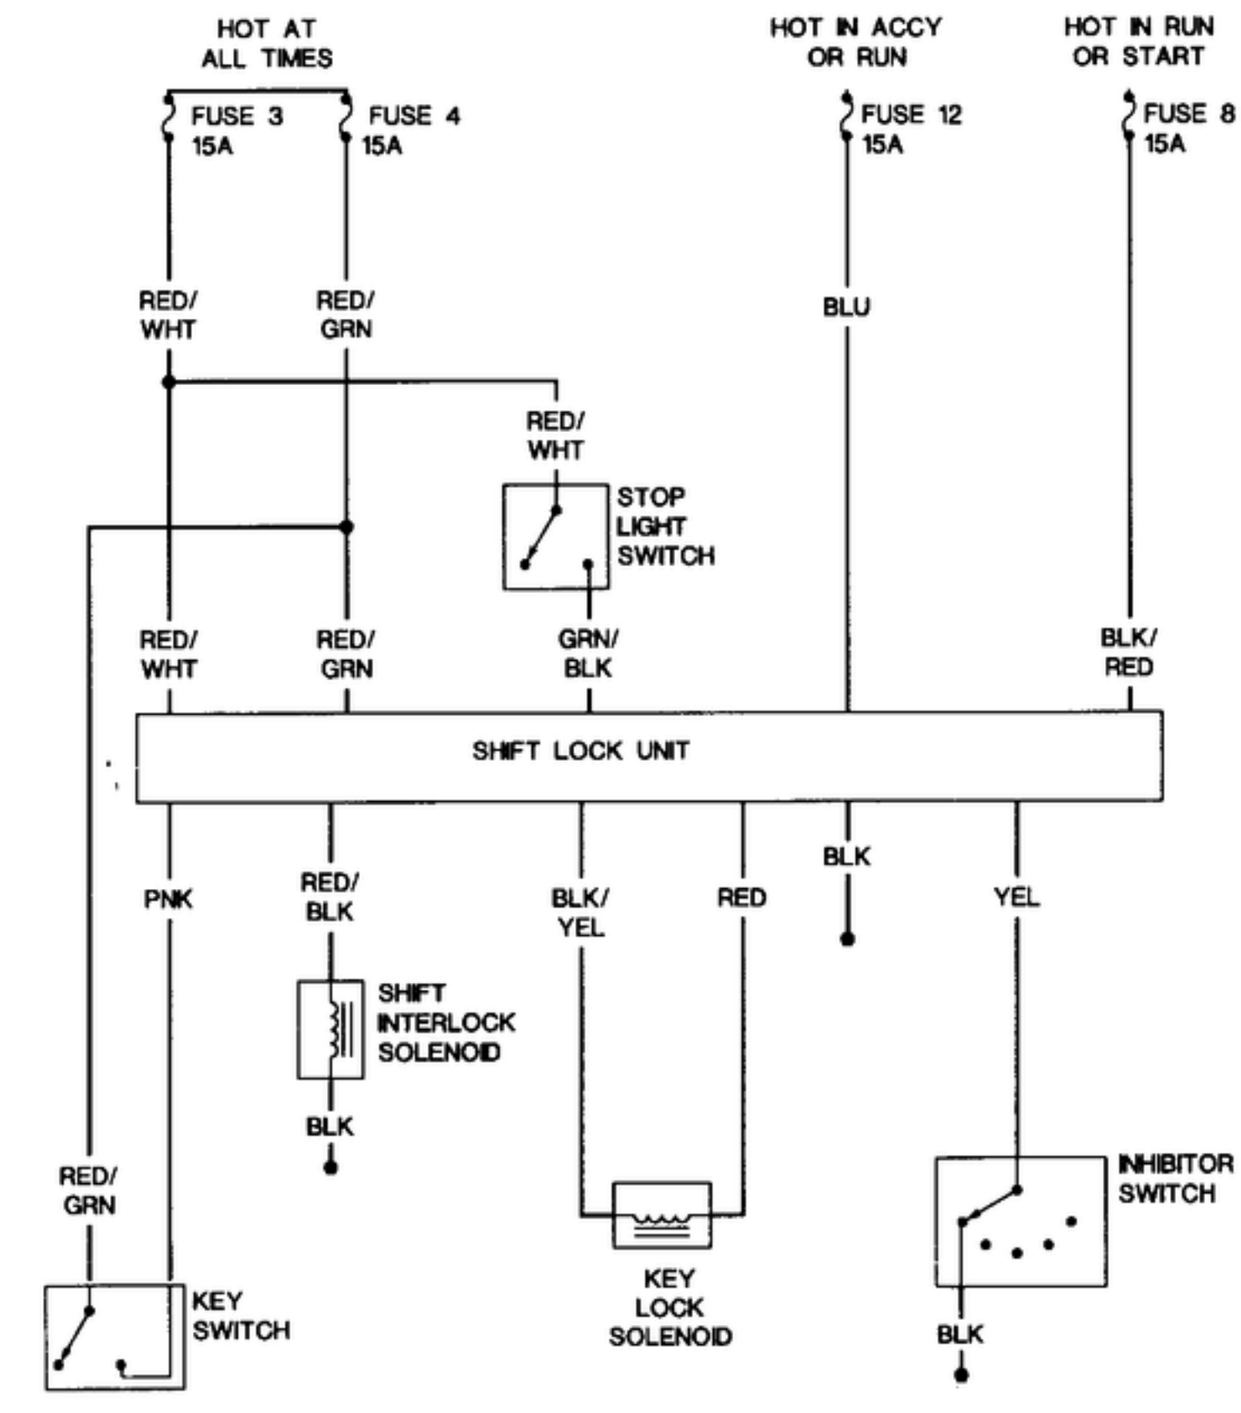
HOT AT ALL TIMES
FUSE 3 15A
FUSE 4 15A
RED/ WHT
RED/ GRN
RED/ WHT
STOP LIGHT SWITCH
RED/ WHT
RED/ GRN
GRN/ BLK
BLK/ RED
SHIFT LOCK UNIT
PNK
RED/ BLK
BLK/ YEL
RED
BLK
YEL
SHIFT INTERLOCK SOLENOID
BLK
RED/ GRN
KEY SWITCH
KEY LOCK SOLENOID
INHIBITOR SWITCH
BLK

HOT IN ACCY OR RUN
FUSE 12 15A
BLU

HOT IN RUN OR START
FUSE 8 15A

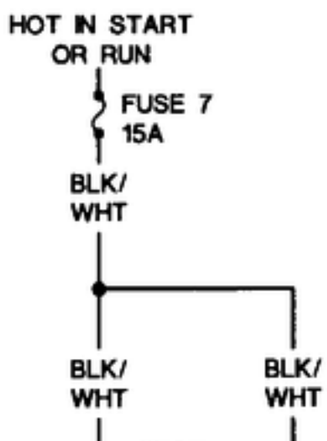
HOT IN START OR RUN
FUSE 7 15A
BLK/ WHT
BLK/ WHT
BLK/ WHT
SEAT BELT WARNING INDIC.
WHT
WHT

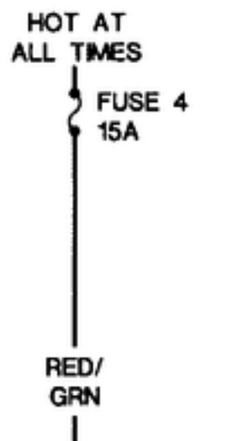
HOT AT ALL TIMES
FUSE 4 15A
RED/ GRN
GRN

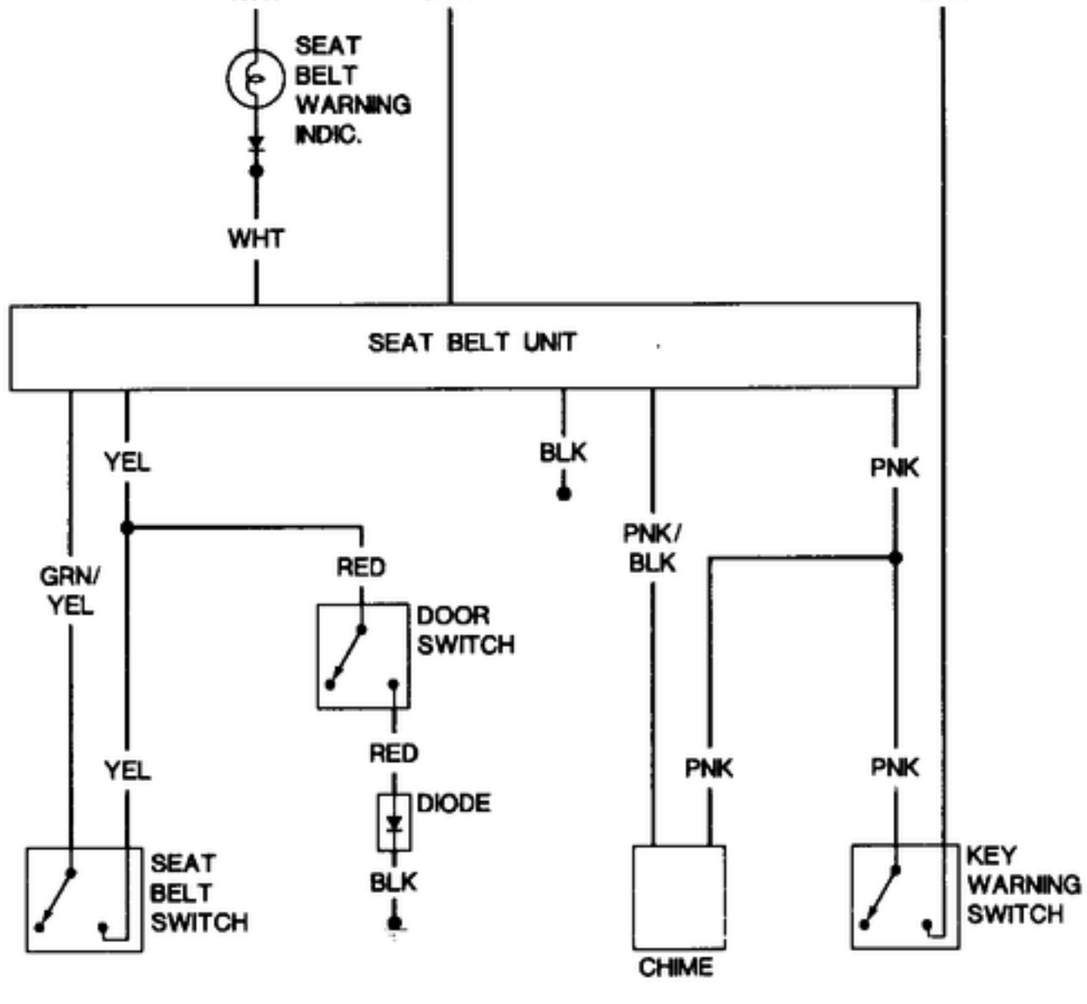
SEAT BELT UNIT
YEL
BLK
PNK
GRN/ YEL
RED
DOOR SWITCH
PNK/ BLK
YEL
RED
DIODE
PNK
PNK
KEY WARNING SWITCH
SEAT BELT SWITCH
BLK
CHIME