

59.Rear Wiring Harness

A: LOCATION

1. SEDAN MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	20	★	C-3	B97	Bulkhead wiring harness
R2	16	★	B-2	B98	
R8	4	★	C-3		Front seat belt switch LH
R9	3	★	C-4		Front door switch LH
R10	8	★	B-3	D22	Rear door cord RH
R12	3	★	B-3		Front door switch RH
R13	8	★	C-4	D28	Rear door cord LH
R15	8	★	B-4	R213	Fuel cord
R16	3	★	B-4		Rear door switch RH
R41	4	★	C-4		Seat heater LH
R43	22	★	C-3		Adapter code (Console)
R44	4	★	C-2		Seat heater RH
R46	6	★	B-4	R67	Fuel cord
R50	16	★	B-2	B90	Bulkhead wiring harness
R51	2	Black	B-3		Vanity mirror illumination RH
R52	3	★	B-3		Room light
R54	2	Black	B-4		Vanity mirror illumination LH
R55	10	Gray	A-3		Sunroof control unit
R56	2	★	A-3		Spot map light
R57	3	★	B-3		Shade mirror
R72	2	Gray	B-4		Rear ABS wheel speed sensor RH
R73	2	Gray	B-4		Rear ABS wheel speed sensor LH
R98	18	★	B-1	i53	Instrument panel wiring harness RH
R99	12	★	C-4	i54	Instrument panel wiring harness LH2
R109	4	Black	C-3		Power seat LH
R128	5	★	A-3		Sunroof switch
R142	2	Black	C-5		Fuel pump condenser (Without fuel pump control unit)
R150	6	Gray	B-2		Seat belt & airbag warning light
R167	16	★	C-3	i102	Instrument panel wiring harness LH
R168	20	★	C-3		Fuse & relay box (F/B)
R169	8	★	B-3		Impact sensor
R188	2	Black	C-3		Power seat RH
R211	12	★	C-4		TPM control module
R226	10	★	C-4		Navigation control module
R242	5	Black	A-4		Sunroof tilt switch


★ : White or natural color

Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	20	Yellow	C-2		Airbag control module LH
AB18	20	Yellow	C-2		Airbag control module RH
AB19	2	Yellow	C-3	AB20	Inflator (Side) LH
AB21	2	Black	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	2	Yellow	B-3	AB25	Inflator (Side) RH
AB26	2	Black	B-3		Pretensioner RH
AB28	4	Yellow	B-3		Side airbag sensor RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH
AB35	2	Black	C-3		Fuse & relay box (F/B)
AB51	2	Yellow	C-3		Buckle switch
AB52	2	Yellow	C-3		Seat position sensor LH
AB53	6	Gray	C-3		Occupant detection control module
AB56	3	Brown	B-3		Belt tensioner sensor

WIRING SYSTEM



Rear Wiring Harness

WIRING SYSTEM

2. WAGON MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	20	★	C-3	B97	Bulkhead wiring harness
R2	16	★	B-1	B98	
R8	4	★	C-3		Front seat belt switch LH
R9	3	★	C-4		Front door switch LH
R10	8	★	B-2	D22	Rear door cord RH
R12	3	★	B-2		Front door switch RH
R13	8	★	C-4	D28	Rear door cord LH
R15	8	★	B-4	R213	Fuel cord
R16	3	★	A-3		Rear door switch RH
R41	4	★	C-3		Seat heater LH
R43	22	★	B-4		Adapter code (Console)
R44	4	★	C-2		Seat heater RH
R46	6	★	B-5	R67	Fuel cord
R50	16	★	B-1	B90	Bulkhead wiring harness
R51	2	Black	A-2		Vanity mirror illumination RH
R52	3	★	A-3		Room light
R54	2	Black	B-3		Vanity mirror illumination LH (Without home link)
	3	★	B-3		Vanity mirror illumination LH (With home link)
R55	2	★	A-2		Sunroof cord
R56	2	★	A-2		Spot map light
R57	3	★	A-3		Shade mirror
R72	2	Gray	B-4		Rear ABS wheel speed sensor RH
R73	2	Gray	B-4		Rear ABS wheel speed sensor LH
R74	2	★	A-2	R55	Roof cord
R75	6	★	A-4		Sunroof motor assembly
R98	18	★	B-1	i53	Instrument panel wiring harness RH
R99	12	★	C-3	i54	Instrument panel wiring harness LH2
R109	4	Black	C-3		Power seat LH
R142	2	Black	C-4		Fuel pump condenser (Without fuel pump control unit)
R150	6	Gray	A-3		Seat belt & airbag warning light
R167	16	★	C-3	i102	Instrument panel wiring harness LH
R168	20	★	C-3		Fuse & relay box (F/B)
R169	8	★	B-2		Impact sensor
R188	2	Black	C-4		Power seat RH
R211	12	★	C-4		TPM control module
R226	10	★	C-3		Navigation control module

★ : White or natural color


Rear Wiring Harness

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	20	Yellow	C-2		Airbag control module LH
AB18	20	Yellow	C-2		Airbag control module RH
AB19	2	Yellow	C-3	AB20	Inflator (Side) LH
AB21	2	Black	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	2	Yellow	C-2	AB25	Inflator (Side) RH
AB26	2	Black	B-2		Pretensioner RH
AB28	4	Yellow	B-3		Side airbag sensor RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH
AB35	2	Black	C-3		Fuse & relay box (F/B)
AB51	2	Yellow	C-3		Buckle switch
AB52	2	Yellow	C-3		Seat position sensor LH
AB53	6	Gray	C-2		Occupant detection control module
AB56	3	Brown	B-3		Belt tensioner sensor

Rear Wiring Harness

WIRING SYSTEM

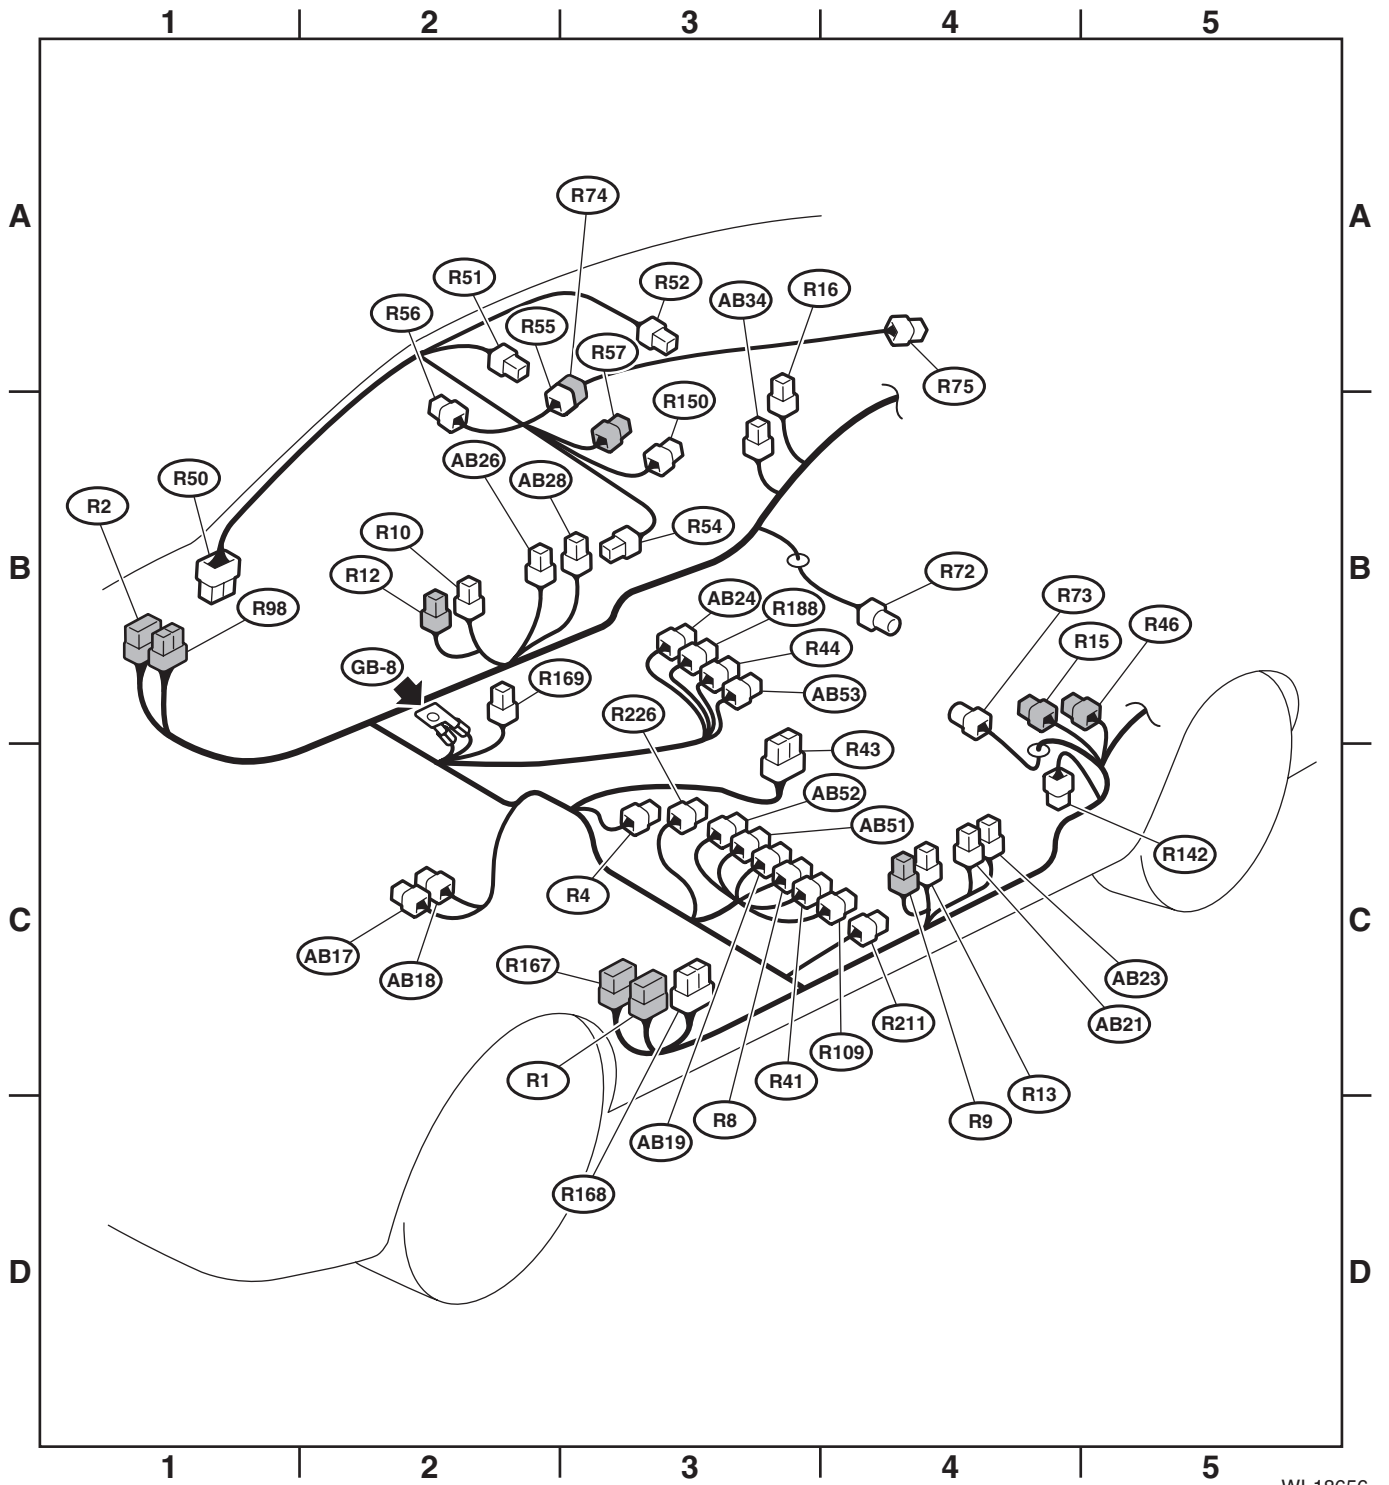

WI-18656