

60. Door Cord


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D2	2	★	C-4		Front door speaker LH
D3	2	Gray	C-4		Front power window motor LH
D5	6	★	B-4		Outer mirror assembly LH (Without turn signal light)
	8	★	B-4		Outer mirror assembly LH (With turn signal light)
D7	14	★	B-4		Power window main switch
D10	2	★	C-4		Front step light LH
D12	2	★	C-2		Front door speaker RH
D13	2	Gray	C-2		Front power window motor RH
D15	6	★	B-2		Outer mirror assembly RH (Without turn signal light)
	8	★	B-2		Outer mirror assembly RH (With turn signal light)
D17	5	★	B-2		Front power window sub-switch
D18	2	Gray	B-3		Front door lock actuator RH
D20	2	★	B-3		Front step light RH
D22	8	★	B-3	R10	Rear wiring harness RH
D23	2	Black	C-5		Rear door speaker LH
D24	2	Green	B-4		Rear power window motor LH
D25	5	★	B-5		Rear power window sub-switch LH
D26	2	Gray	B-5		Rear door lock actuator LH
D28	8	★	C-4	R13	Rear wiring harness LH
D29	2	Black	B-3		Rear door speaker RH
D30	2	Green	B-3		Rear power window motor RH
D31	5	★	B-3		Rear power window sub-switch RH
D32	2	Gray	B-4		Rear door lock actuator RH
D72	2	Gray	C-4		Front door lock actuator LH
D82	3	Brown	C-4		Door key switch
D83	25	★	C-3	i76	Instrument panel wiring harness
D84	25	★	B-1	i101	
D93	2	★	C-3		Front door tweeter LH
D97	2	★	B-2		Front door tweeter RH
D125	5	Black	B-2		Passenger's seat door lock switch

★ : White or natural color

Door Cord

WIRING SYSTEM

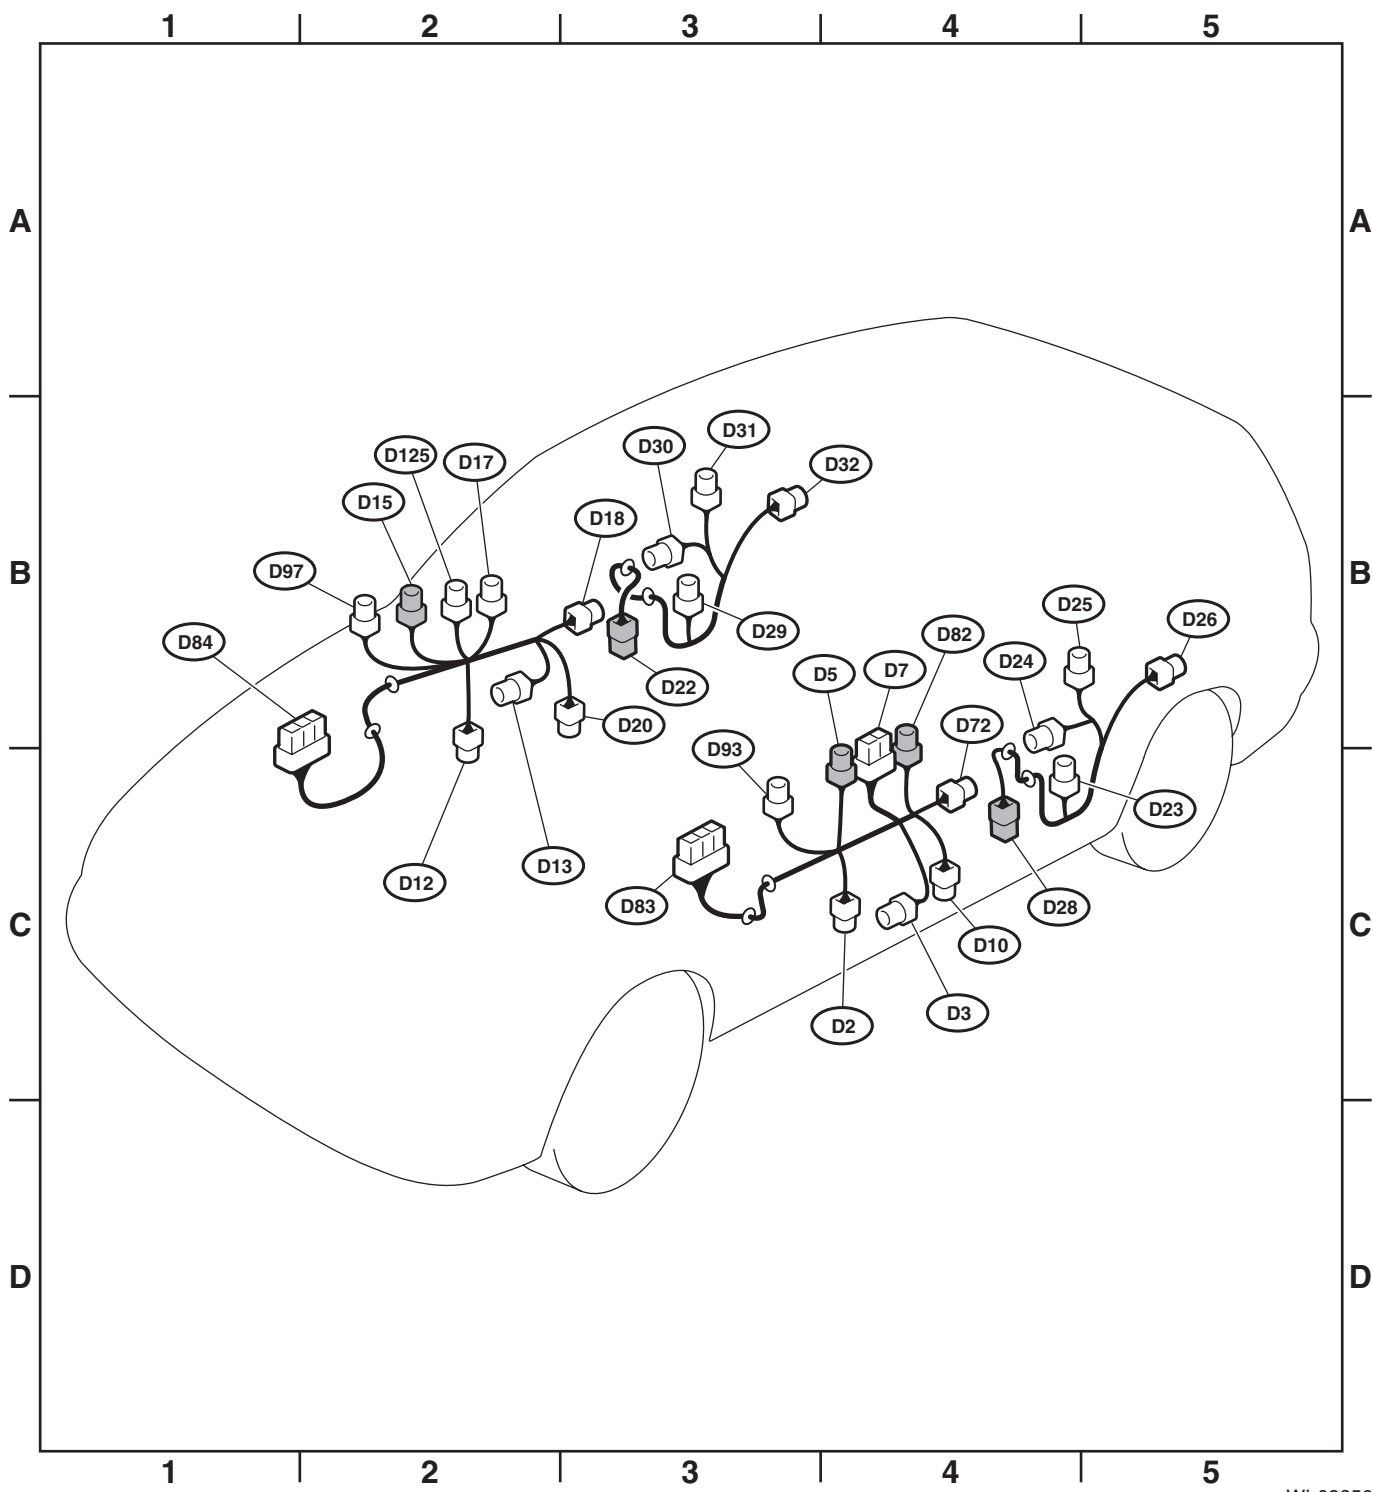

WI-09856