

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

62.Rear Wiring Harness and Trunk Lid Cord

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R16	3	★	B-3		Rear door switch RH
R19	2	★	B-2		High-mounted stop light
R20	2	★	B-5		Trunk room light
R22	3	★	B-1		Rear door switch LH
R24	10	★	B-4	R60	Trunk lid cord
R26	6	★	B-5		Rear combination light RH
R28	6	★	C-3		Rear combination light LH
R60	10	★	B-5	R24	Rear wiring harness
R66	2	★	B-4		High-mounted stop light (with rear spoiler)
R72	2	Light gray	C-3		Rear ABS wheel speed sensor RH
R73	2	Light gray	C-2		Rear ABS wheel speed sensor LH
R76	2	★	C-4		License plate light LH
R77	2	★	C-4		License plate light RH
R97	2	★	B-2		Antenna amplifier
R117	4	★	B-4		Woofer
R122	10	★	B-5		Fuel pump CM
R144	2	Black	C-2		Drain valve
R174	2	★	B-4		Rear defogger
R186	3	★	C-4		Trunk lid lock actuator & switch
R221	12	★	B-3		TPMS & keyless entry CM (with TPMS)
R330	4	★	C-4		Rearview camera
R336	4	★	B-4		J/C
R345	8	★	B-3		Keyless entry CM (without TPMS)
R350	3	★	C-4		Rear finisher light LH (tail light)
R351	3	★	C-5		Rear finisher light RH (tail light)

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB31	2	Black	B-2		Curtain airbag module LH
AB32	4	Yellow	C-1		Curtain airbag sensor LH
AB33	2	Black	B-4		Curtain airbag module RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH

Rear Wiring Harness and Trunk Lid Cord

WIRING SYSTEM

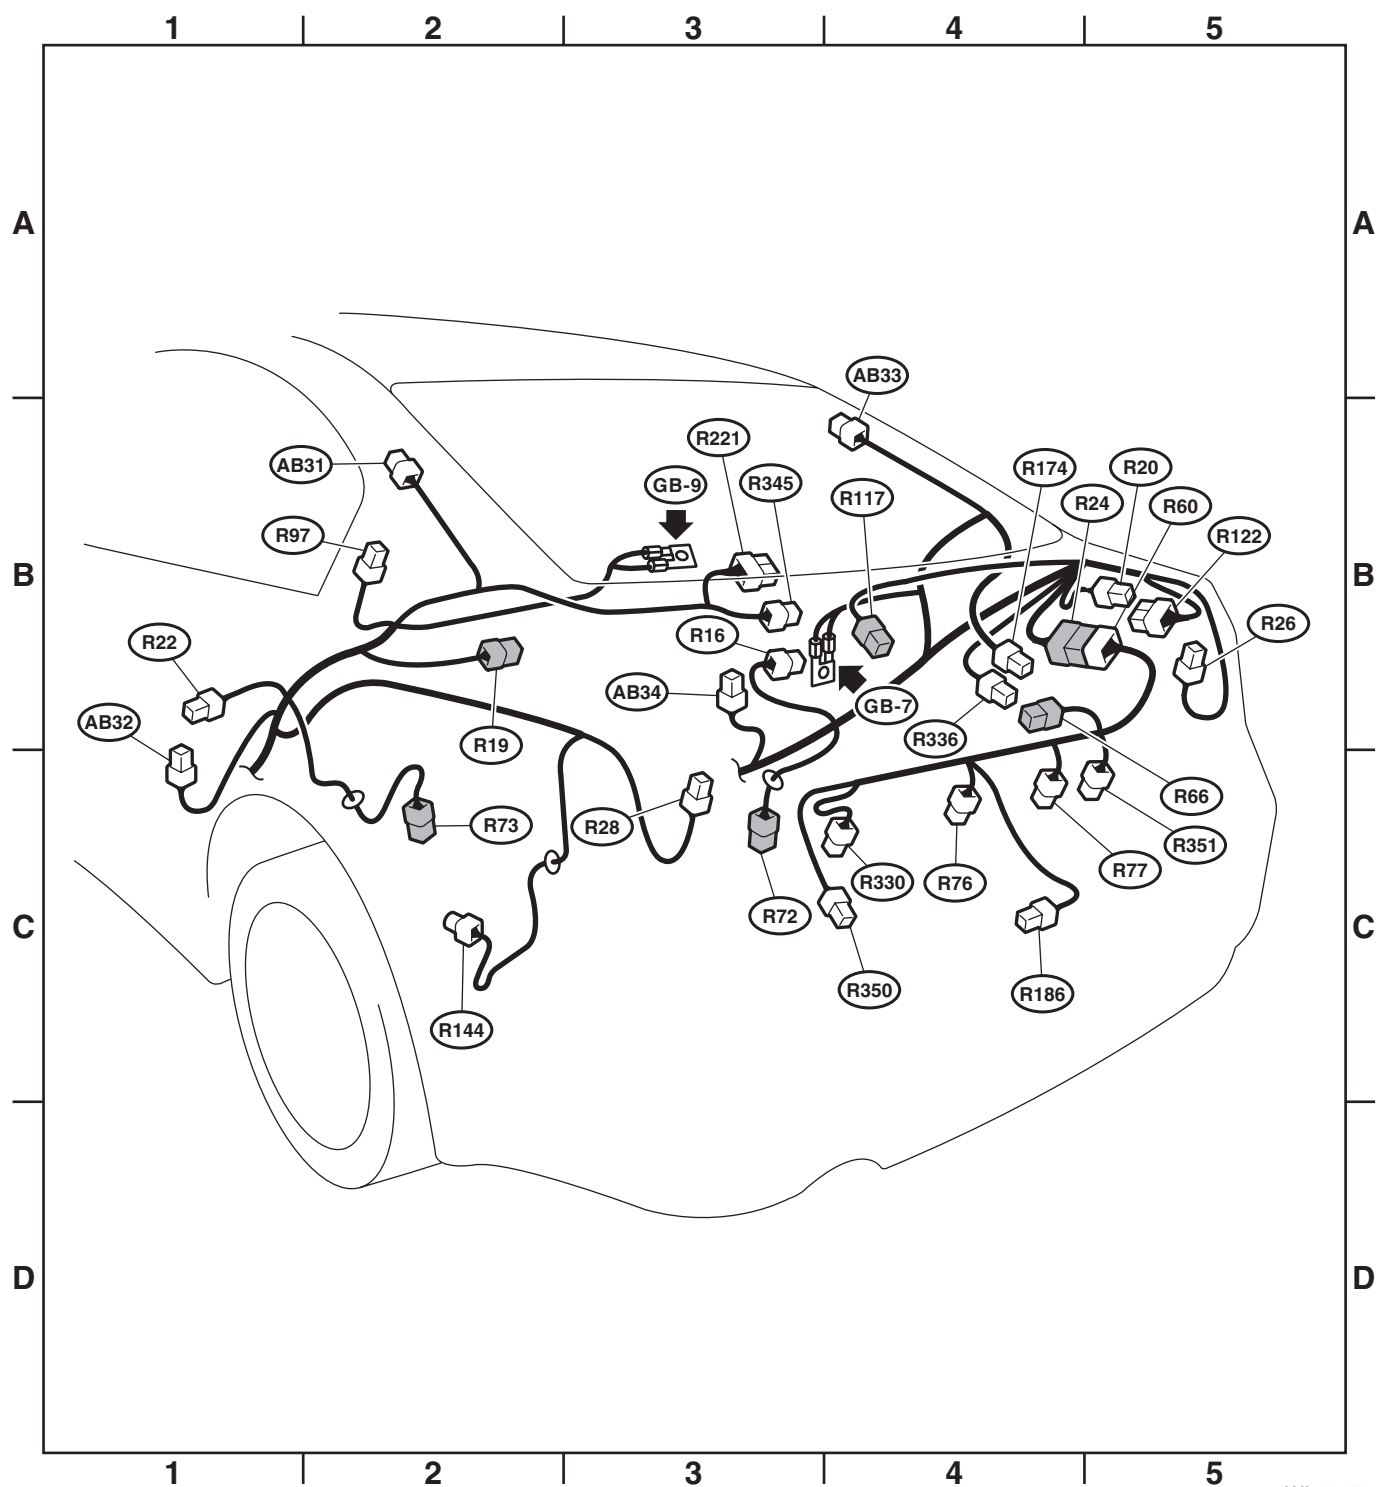

WI-29442