

QUARTER PANEL REAR EXTENSION (CUT)

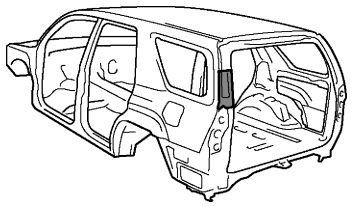

F14065-A

REMOVAL
With the back door opening trough removed.

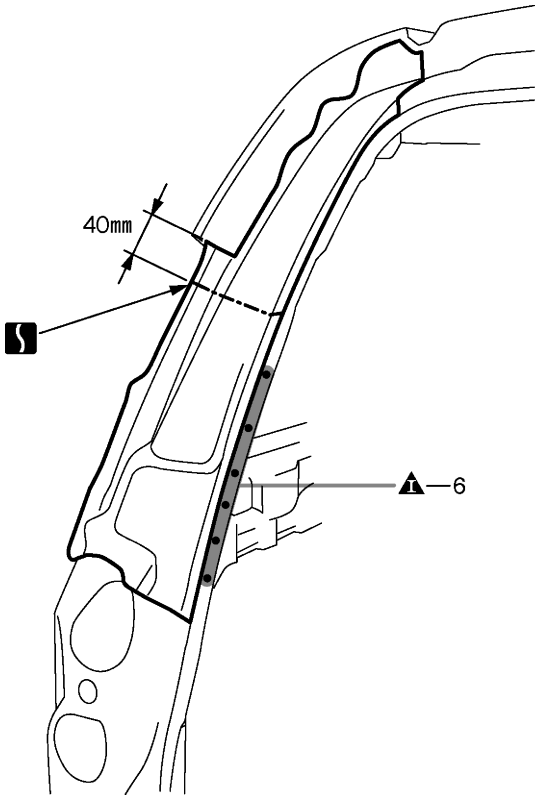


F14065

40mm (1.57in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

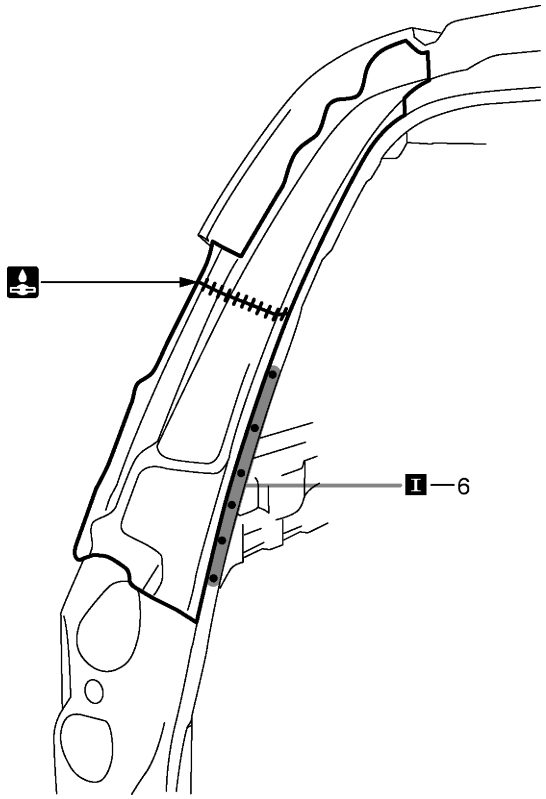

F14066

POINT

1 Inspect the fitting of the quarter panel, bark door and rear combination light, etc., before welding, since this affects the appearance of the finish.