

ROOF SIDE INNER REAR PANEL (ASSY)

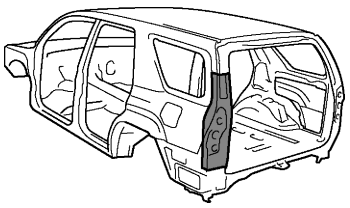

F14067-A


REMOVAL
With the quarter panel rear extension removed.

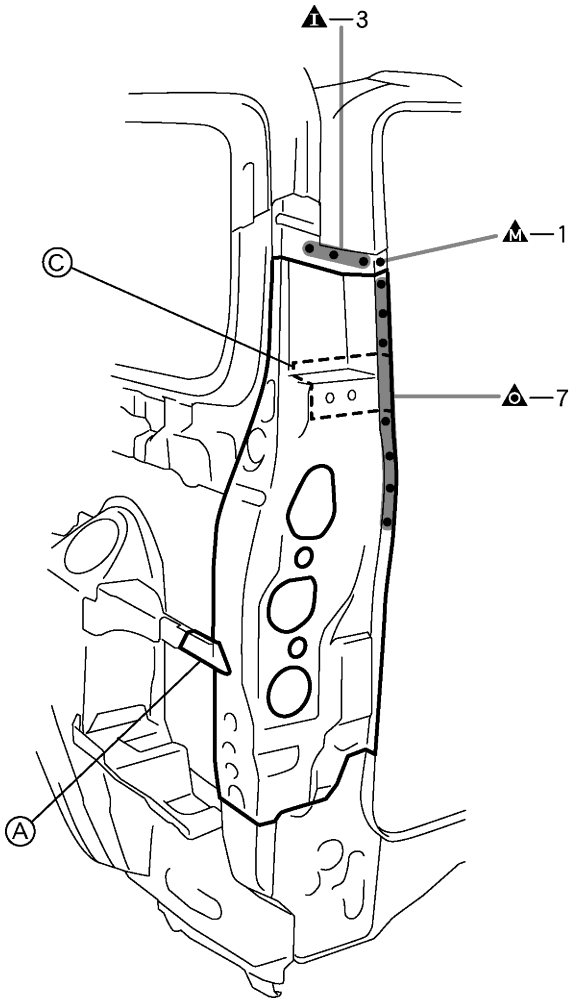

F14067

POINT
1 Remove the Ⓐ at the same time.

PART NAME
Ⓐ Roof Side To Wheel House Brace (LH Only)

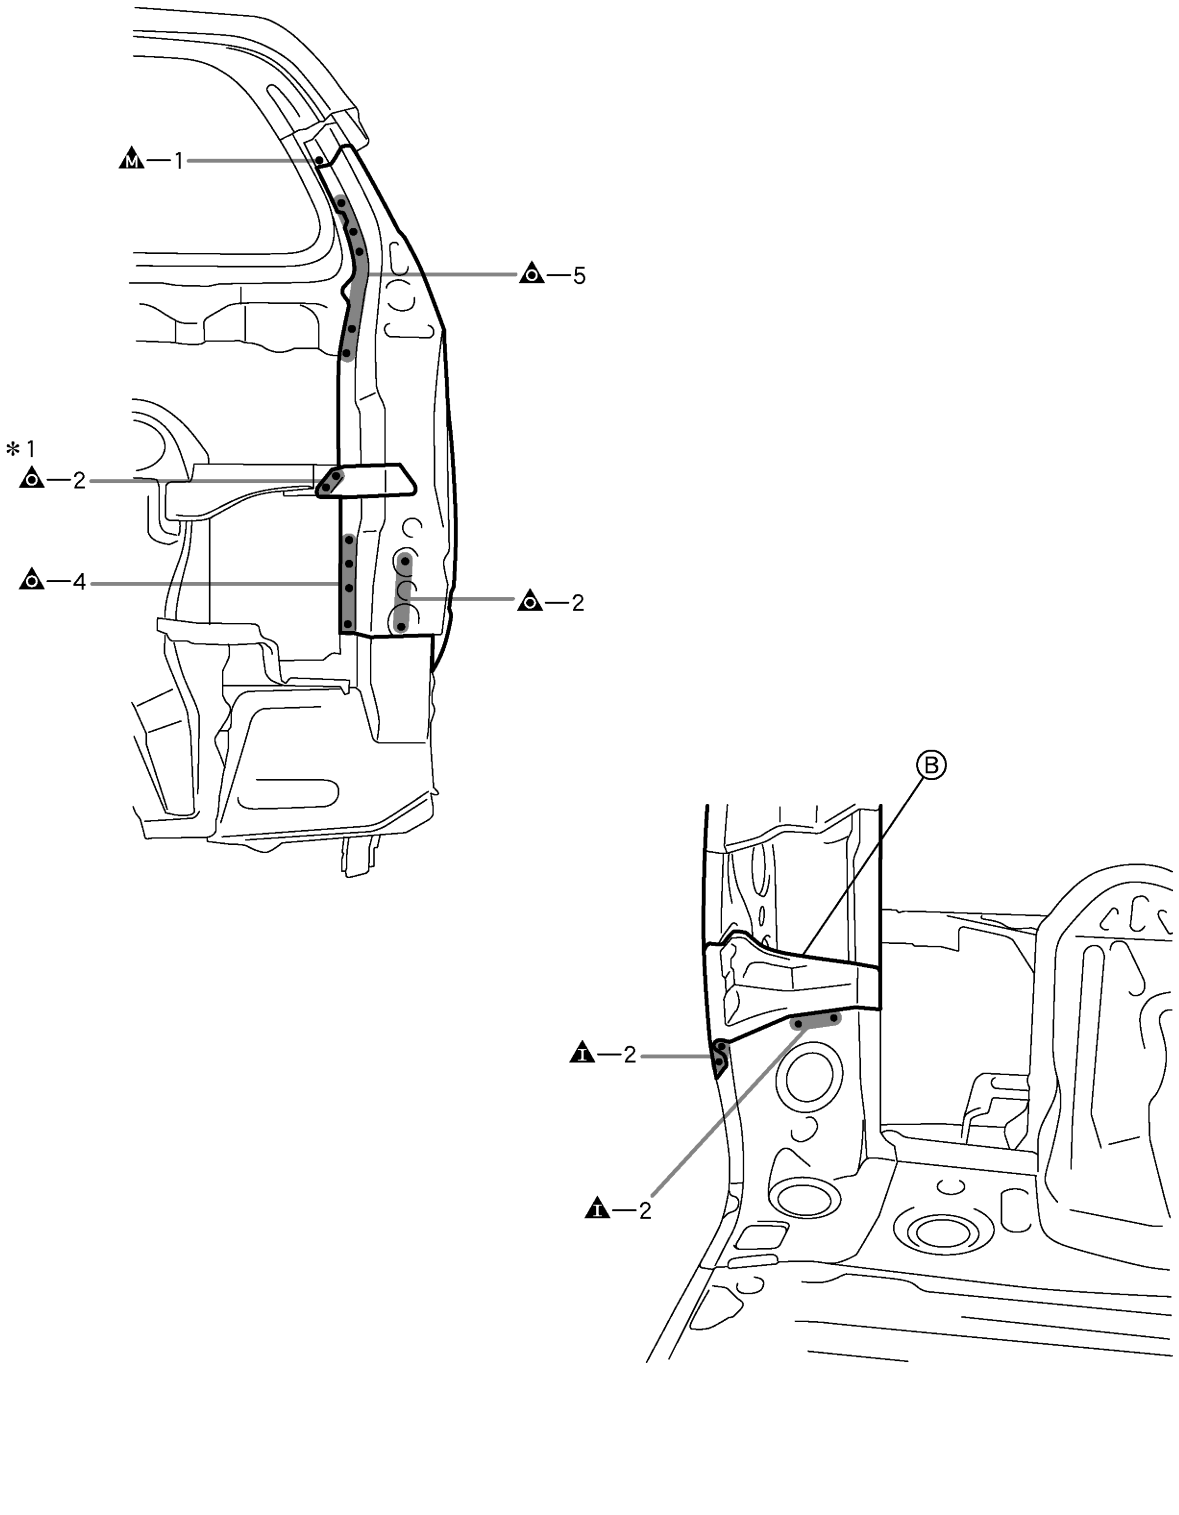

POINT


2 *1 : LH Only

PART NAME

Ⓑ Back Door Opening Lower Reinforcement

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

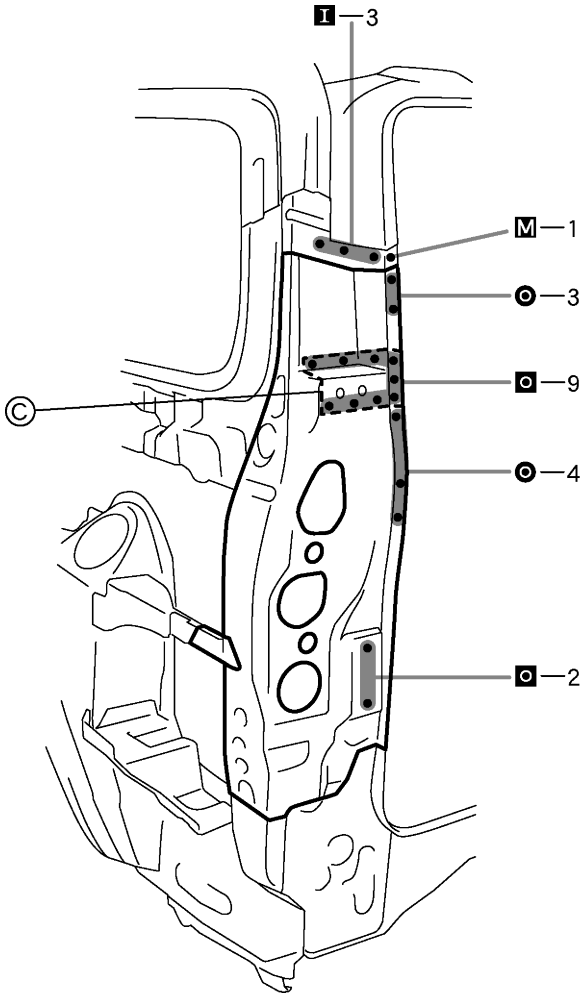


F14069

POINT

1 Inspect the fitting of the quarter panel, bark door and rear combination light, etc., before welding, since this affects the appearance of the finish.

PART NAME

Ⓒ Back Door Opening Upper Patch

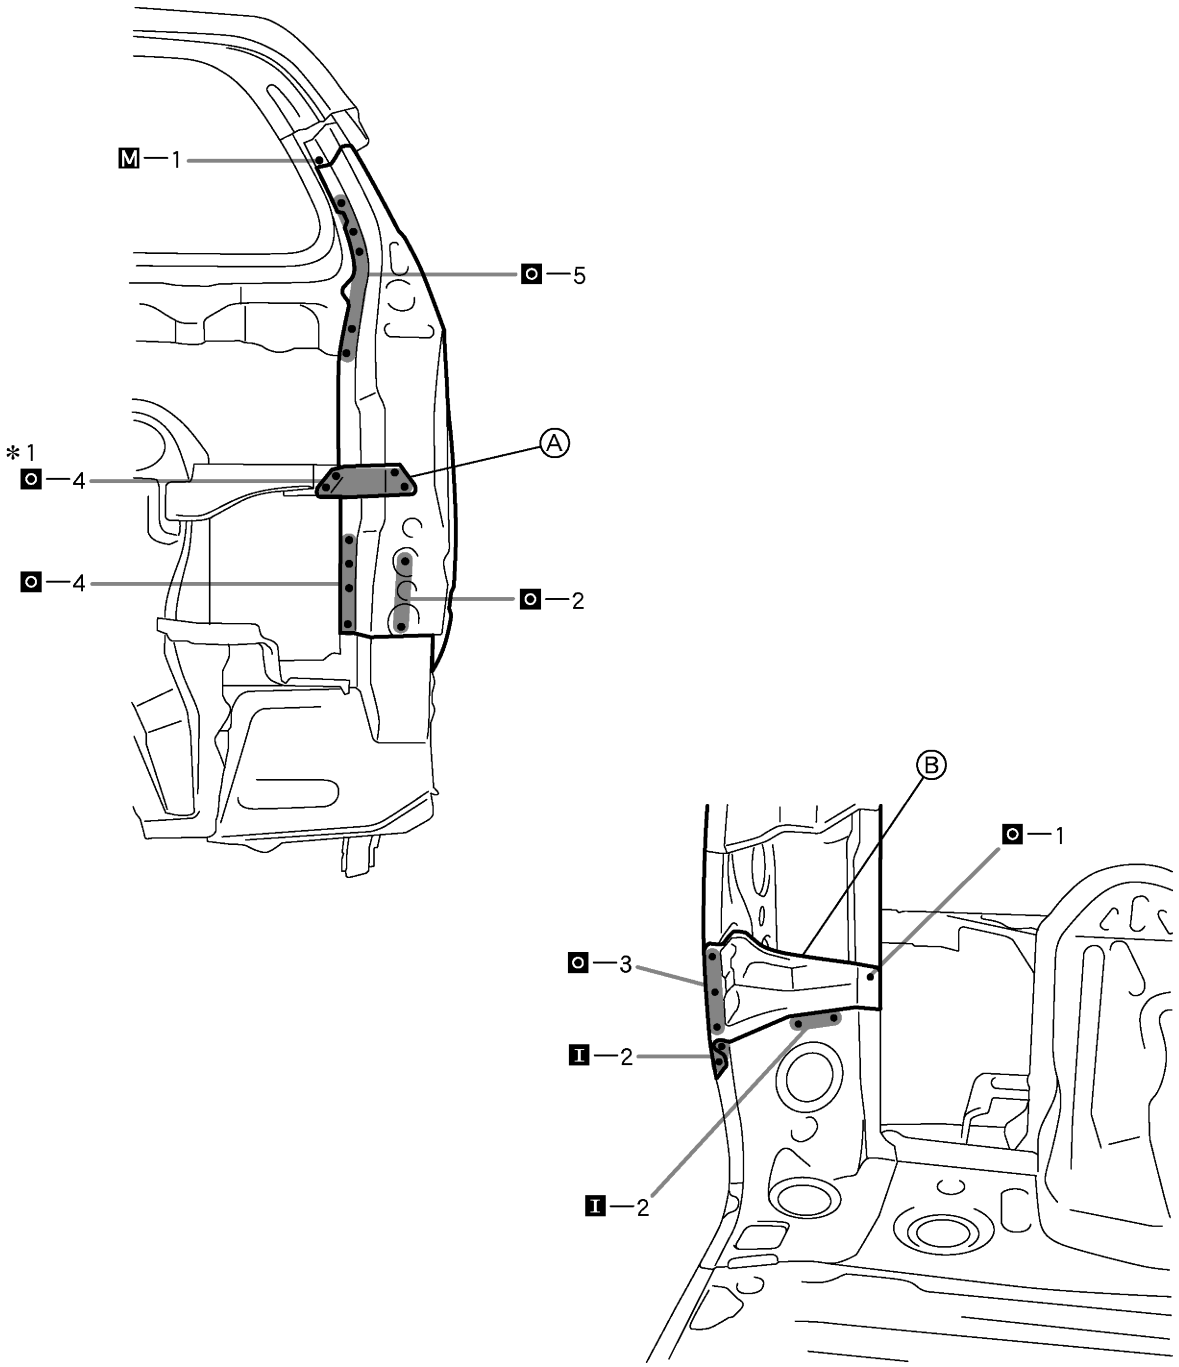

POINT

2 *1 : LH Only

PART NAME

Ⓐ Roof Side To Wheel House Brace (LH Only) Ⓑ Back Door Opening Lower Reinforcement