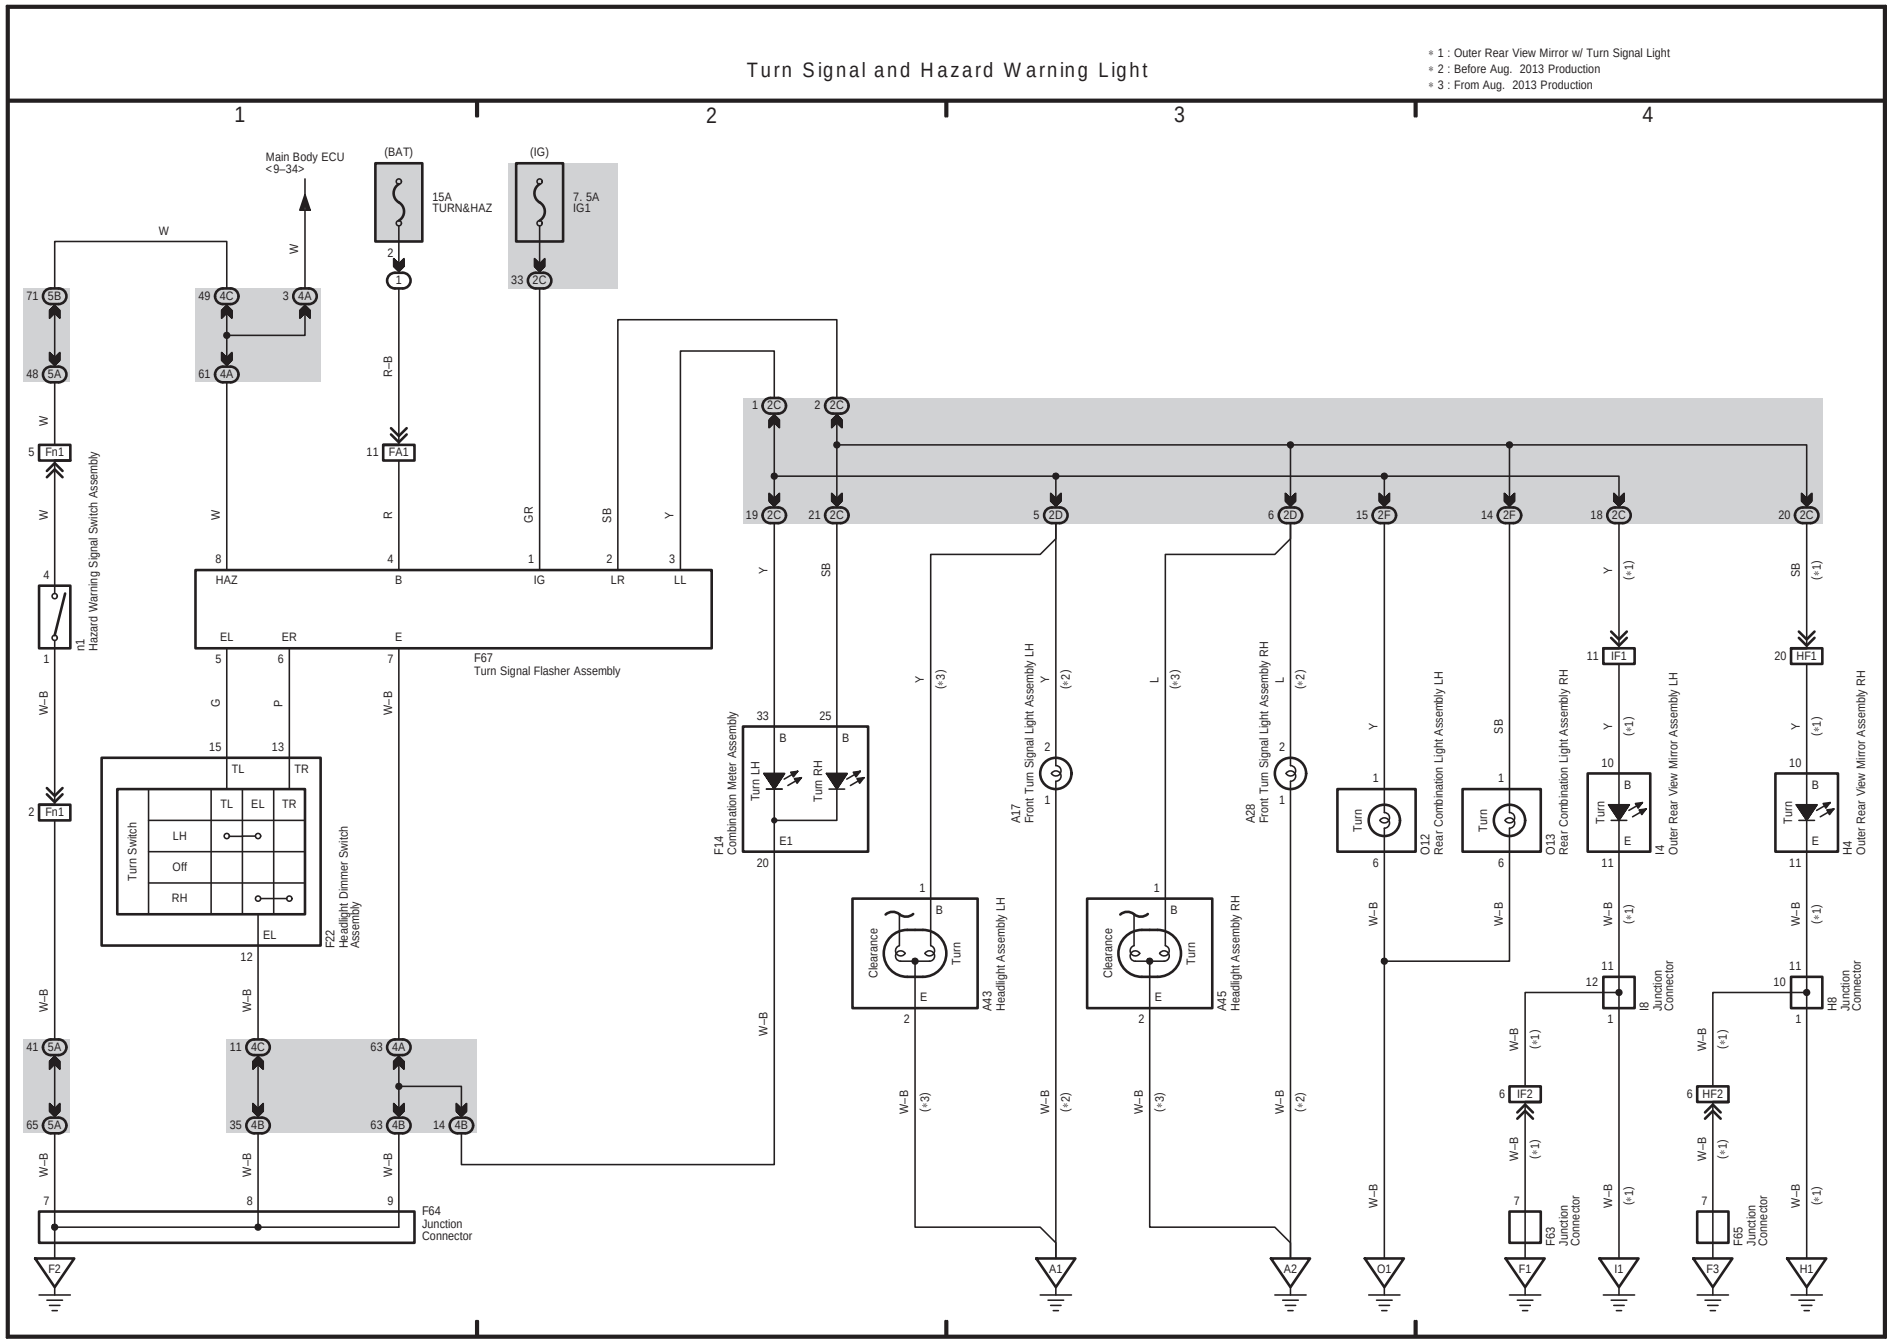

Turn Signal and Hazard Warning Light
∗ 1 : Outer Rear View Mirror w/ Turn Signal Light
∗ 2 : Before Aug. 2013 Production
∗ 3 : From Aug. 2013 Production
1
2
3
4
Main Body ECU <9–34>
(BAT)
(IG)
15A TURN&HAZ
7. 5A IG1
n1 Hazard Warning Signal Switch Assembly
F67 Turn Signal Flasher Assembly
HAZ
B
IG
LR
LL
EL
ER
E
TL
TR
Turn Switch
LH
Off
RH
F22 Headlight Dimmer Switch Assembly
F64 Junction Connector
F14 Combination Meter Assembly
Turn LH
Turn RH
E1
A17 Front Turn Signal Light Assembly LH
A28 Front Turn Signal Light Assembly RH
A43 Headlight Assembly LH
A45 Headlight Assembly RH
Clearance
Turn
O12 Rear Combination Light Assembly LH
O13 Rear Combination Light Assembly RH
I4 Outer Rear View Mirror Assembly LH
H4 Outer Rear View Mirror Assembly RH
I8 Junction Connector
H8 Junction Connector
F63 Junction Connector
F65 Junction Connector
F2
A1
A2
O1
F1
I1
F3
H1