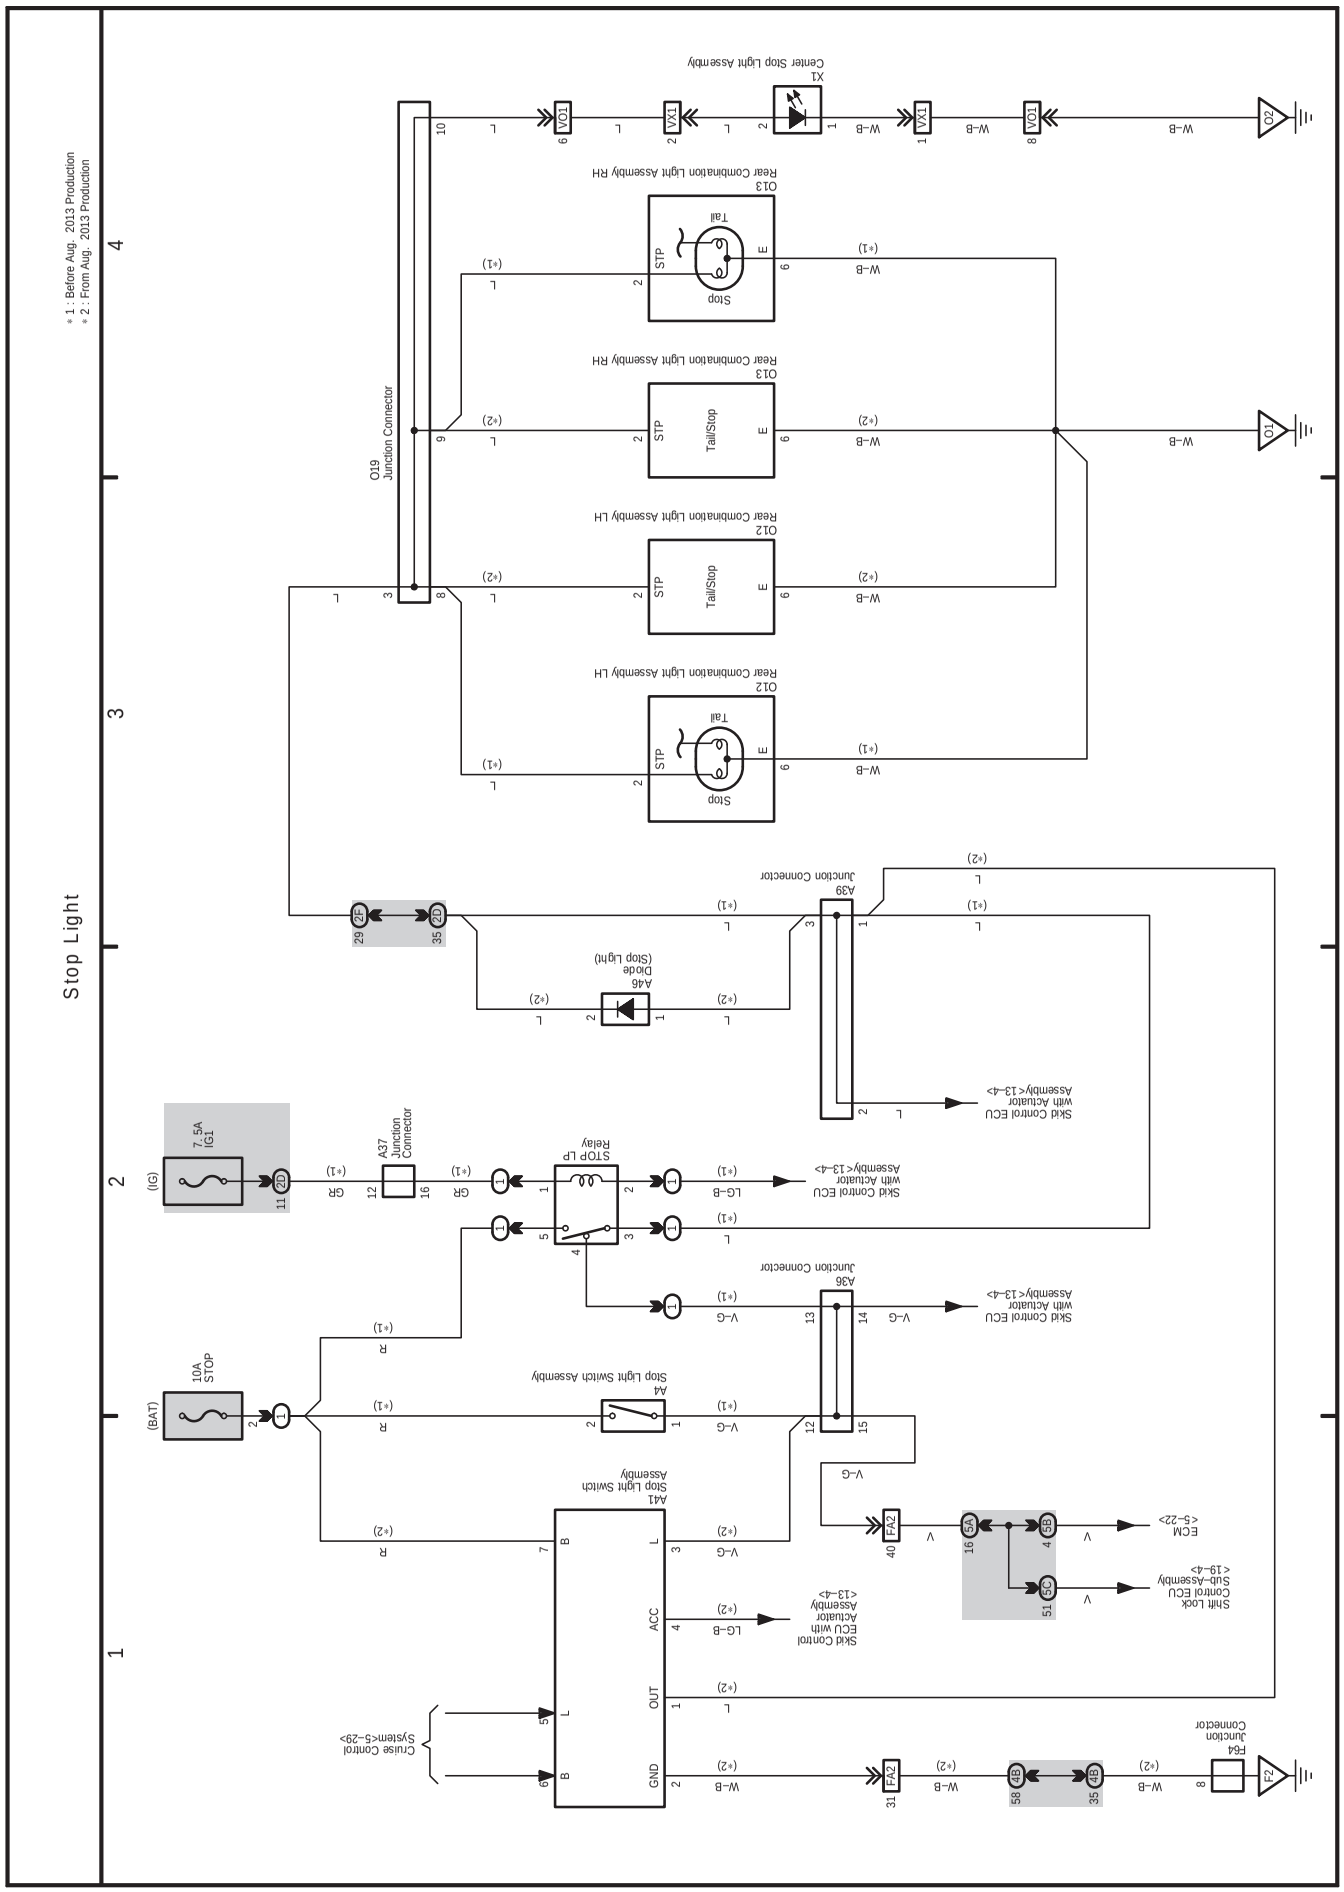

11 4RUNNER
Stop Light
1
2
3
4
* 1 : Before Aug. 2013 Production
* 2 : From Aug. 2013 Production
Center Stop Light Assembly
X1
Rear Combination Light Assembly RH
O13
Rear Combination Light Assembly LH
O12
O19
Junction Connector
Stop
Tail
Tail/Stop
STP
Junction Connector
A39
A36
A46
Diode
(Stop Light)
Skid Control ECU
with Actuator
Assembly< 13–4>
STOP LP
Relay
A37
Junction
Connector
7.5A
IG1
(IG)
10A
STOP
(BAT)
Stop Light Switch Assembly
A4
A41
Stop Light Switch
Assembly
Skid Control
ECU with
Actuator
Assembly
<13–4>
Cruise Control
System<5–29>
ECM
<5–22>
Shift Lock
Control ECU
Sub–Assembly
<19–4>
Junction
Connector
F64