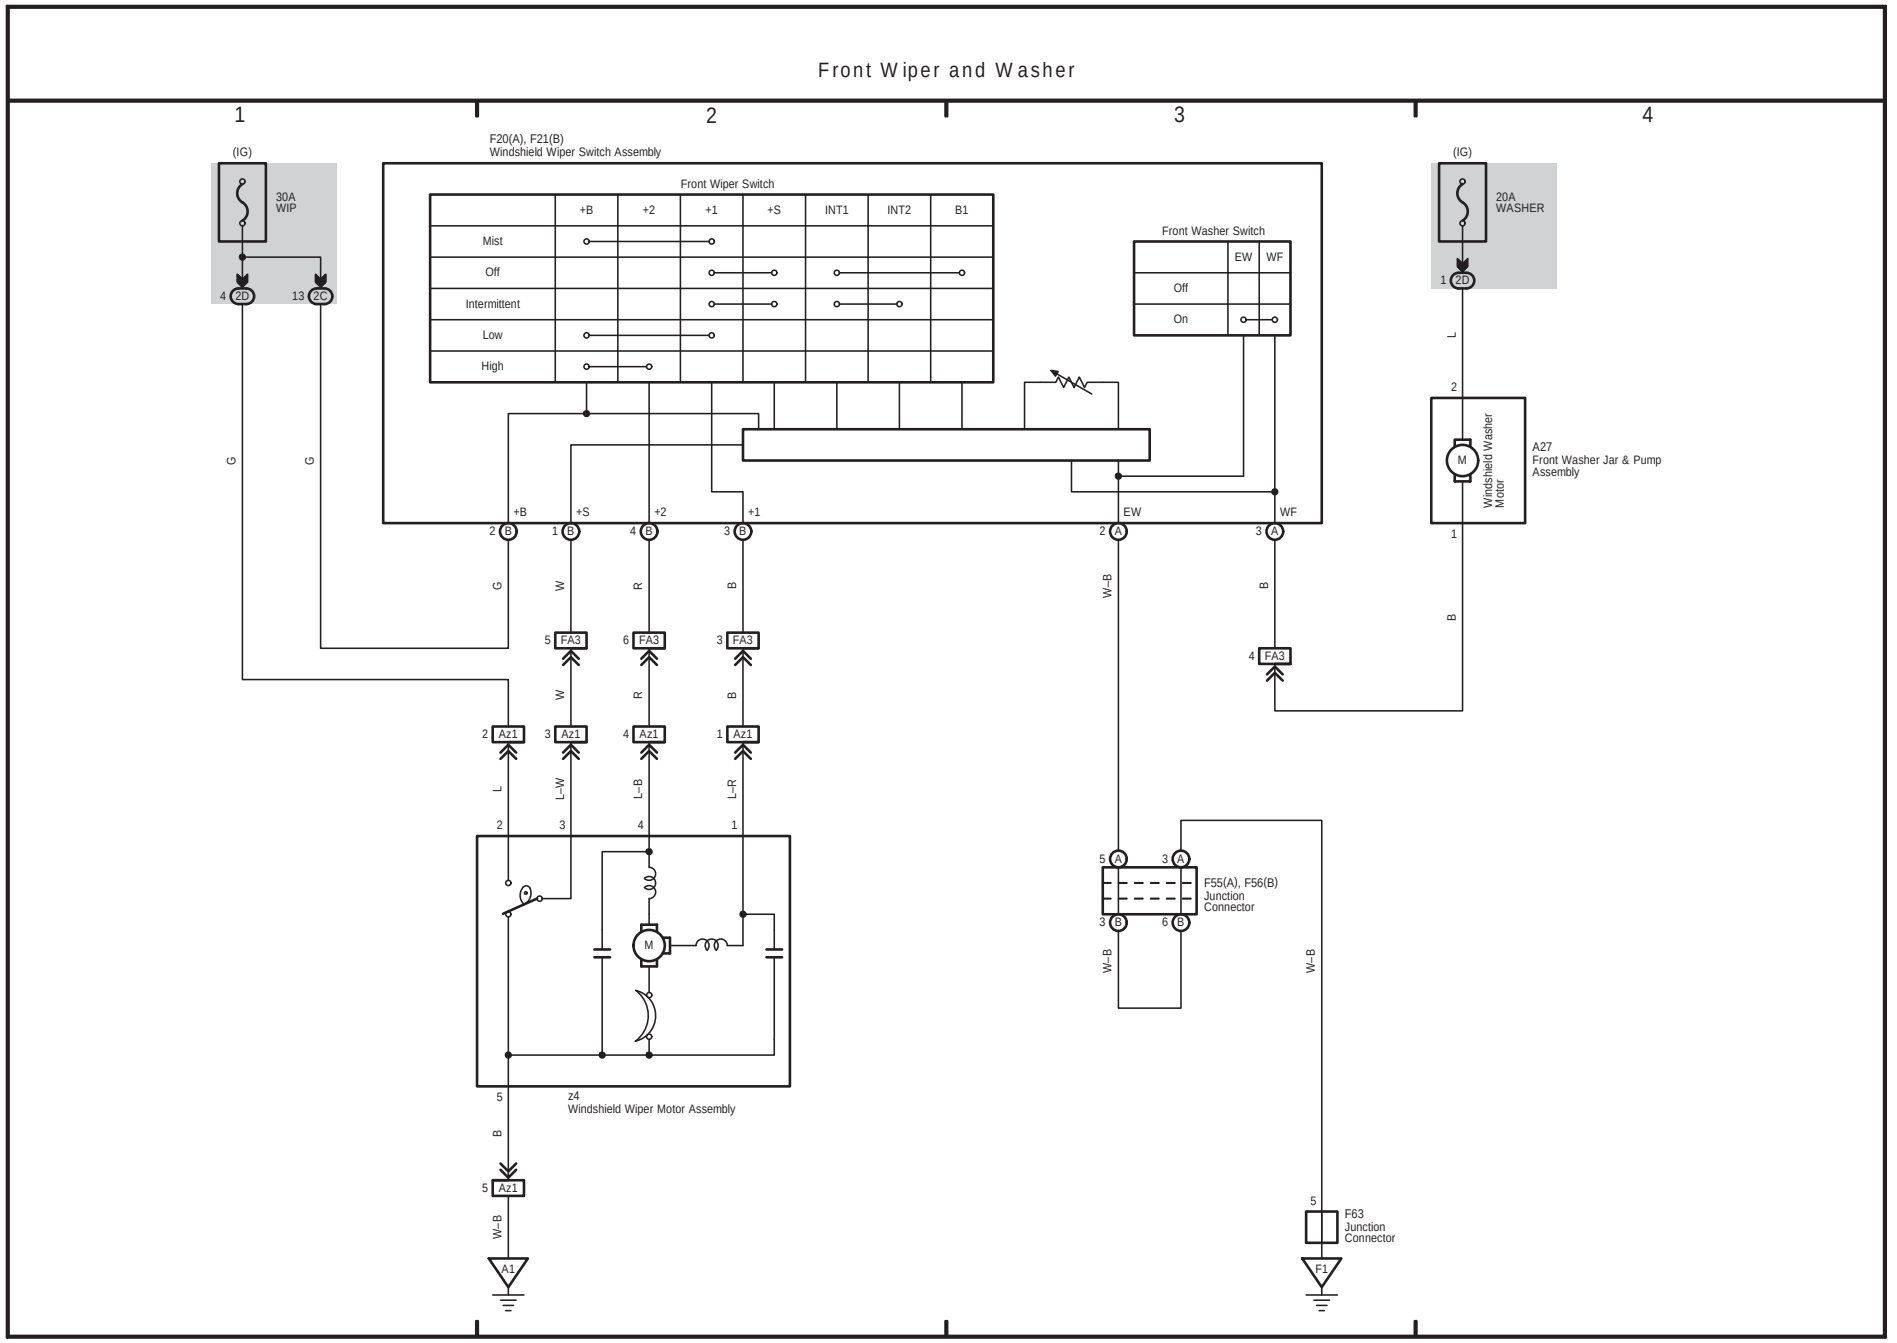

Front Wiper and Washer
1
2
3
4
(IG)
30A
WIP
4 2D
13 2C
F20(A), F21(B)
Windshield Wiper Switch Assembly
Front Wiper Switch
+B
+2
+1
+S
INT1
INT2
B1
Mist
Off
Intermittent
Low
High
Front Washer Switch
EW
WF
Off
On
(IG)
20A
WASHER
1 2D
A27
Front Washer Jar & Pump
Assembly
Windshield Washer
Motor
G
W
R
B
L
L–W
L–B
L–R
W–B
FA3
Az1
F55(A), F56(B)
Junction
Connector
z4
Windshield Wiper Motor Assembly
F63
Junction
Connector
A1
F1