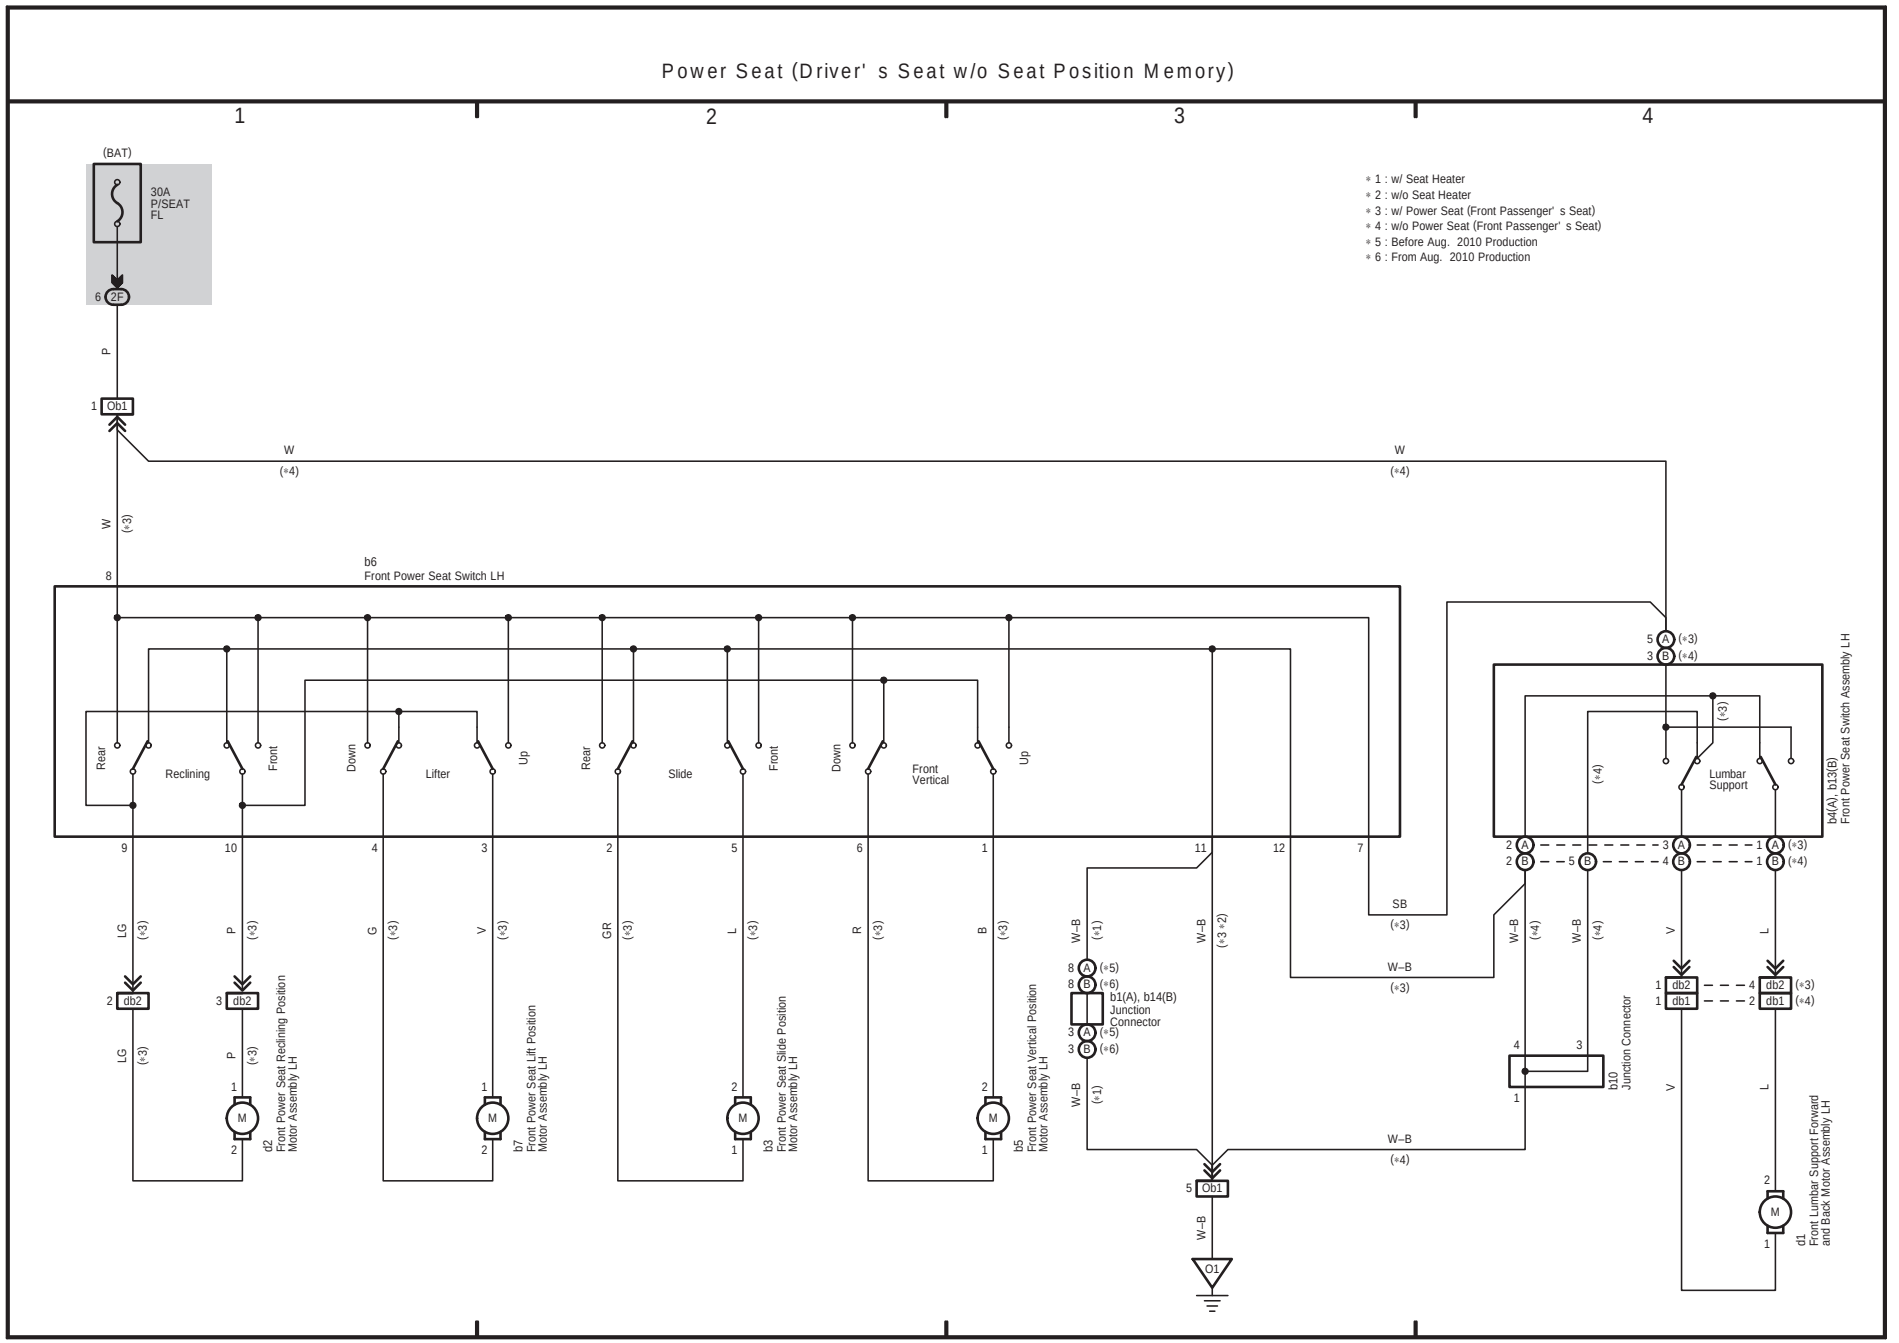

Power Seat (Driver' s Seat w/o Seat Position Memory)
1
2
3
4
(BAT)
30A
P/SEAT
FL
6 2F
P
1 Ob1
W
(*4)
W
(*4)
W
(*3)
8
b6
Front Power Seat Switch LH
Rear
Reclining
Front
Down
Lifter
Up
Rear
Slide
Front
Down
Front
Vertical
Up
9
10
4
3
2
5
6
1
11
12
7
LG
(*3)
P
(*3)
G
(*3)
V
(*3)
GR
(*3)
L
(*3)
R
(*3)
B
(*3)
W-B
(*1)
W-B
(*3 *2)
SB
(*3)
W-B
(*3)
W-B
(*4)
W-B
(*4)
V
L
2 db2
3 db2
d2
Front Power Seat Reclining Position
Motor Assembly LH
b7
Front Power Seat Lift Position
Motor Assembly LH
b3
Front Power Seat Slide Position
Motor Assembly LH
b5
Front Power Seat Vertical Position
Motor Assembly LH
8 (*5)
8 (*6)
b1(A), b14(B)
Junction
Connector
3 (*5)
3 (*6)
5 Ob1
W-B
O1
5 (*3)
3 (*4)
(*3)
(*4)
Lumbar
Support
b4(A), b13(B)
Front Power Seat Switch Assembly LH
b10
Junction Connector
1 db2
1 db1
4 db2 (*3)
2 db1 (*4)
d1
Front Lumbar Support Forward
and Back Motor Assembly LH
* 1 : w/ Seat Heater
* 2 : w/o Seat Heater
* 3 : w/ Power Seat (Front Passenger' s Seat)
* 4 : w/o Power Seat (Front Passenger' s Seat)
* 5 : Before Aug. 2010 Production
* 6 : From Aug. 2010 Production