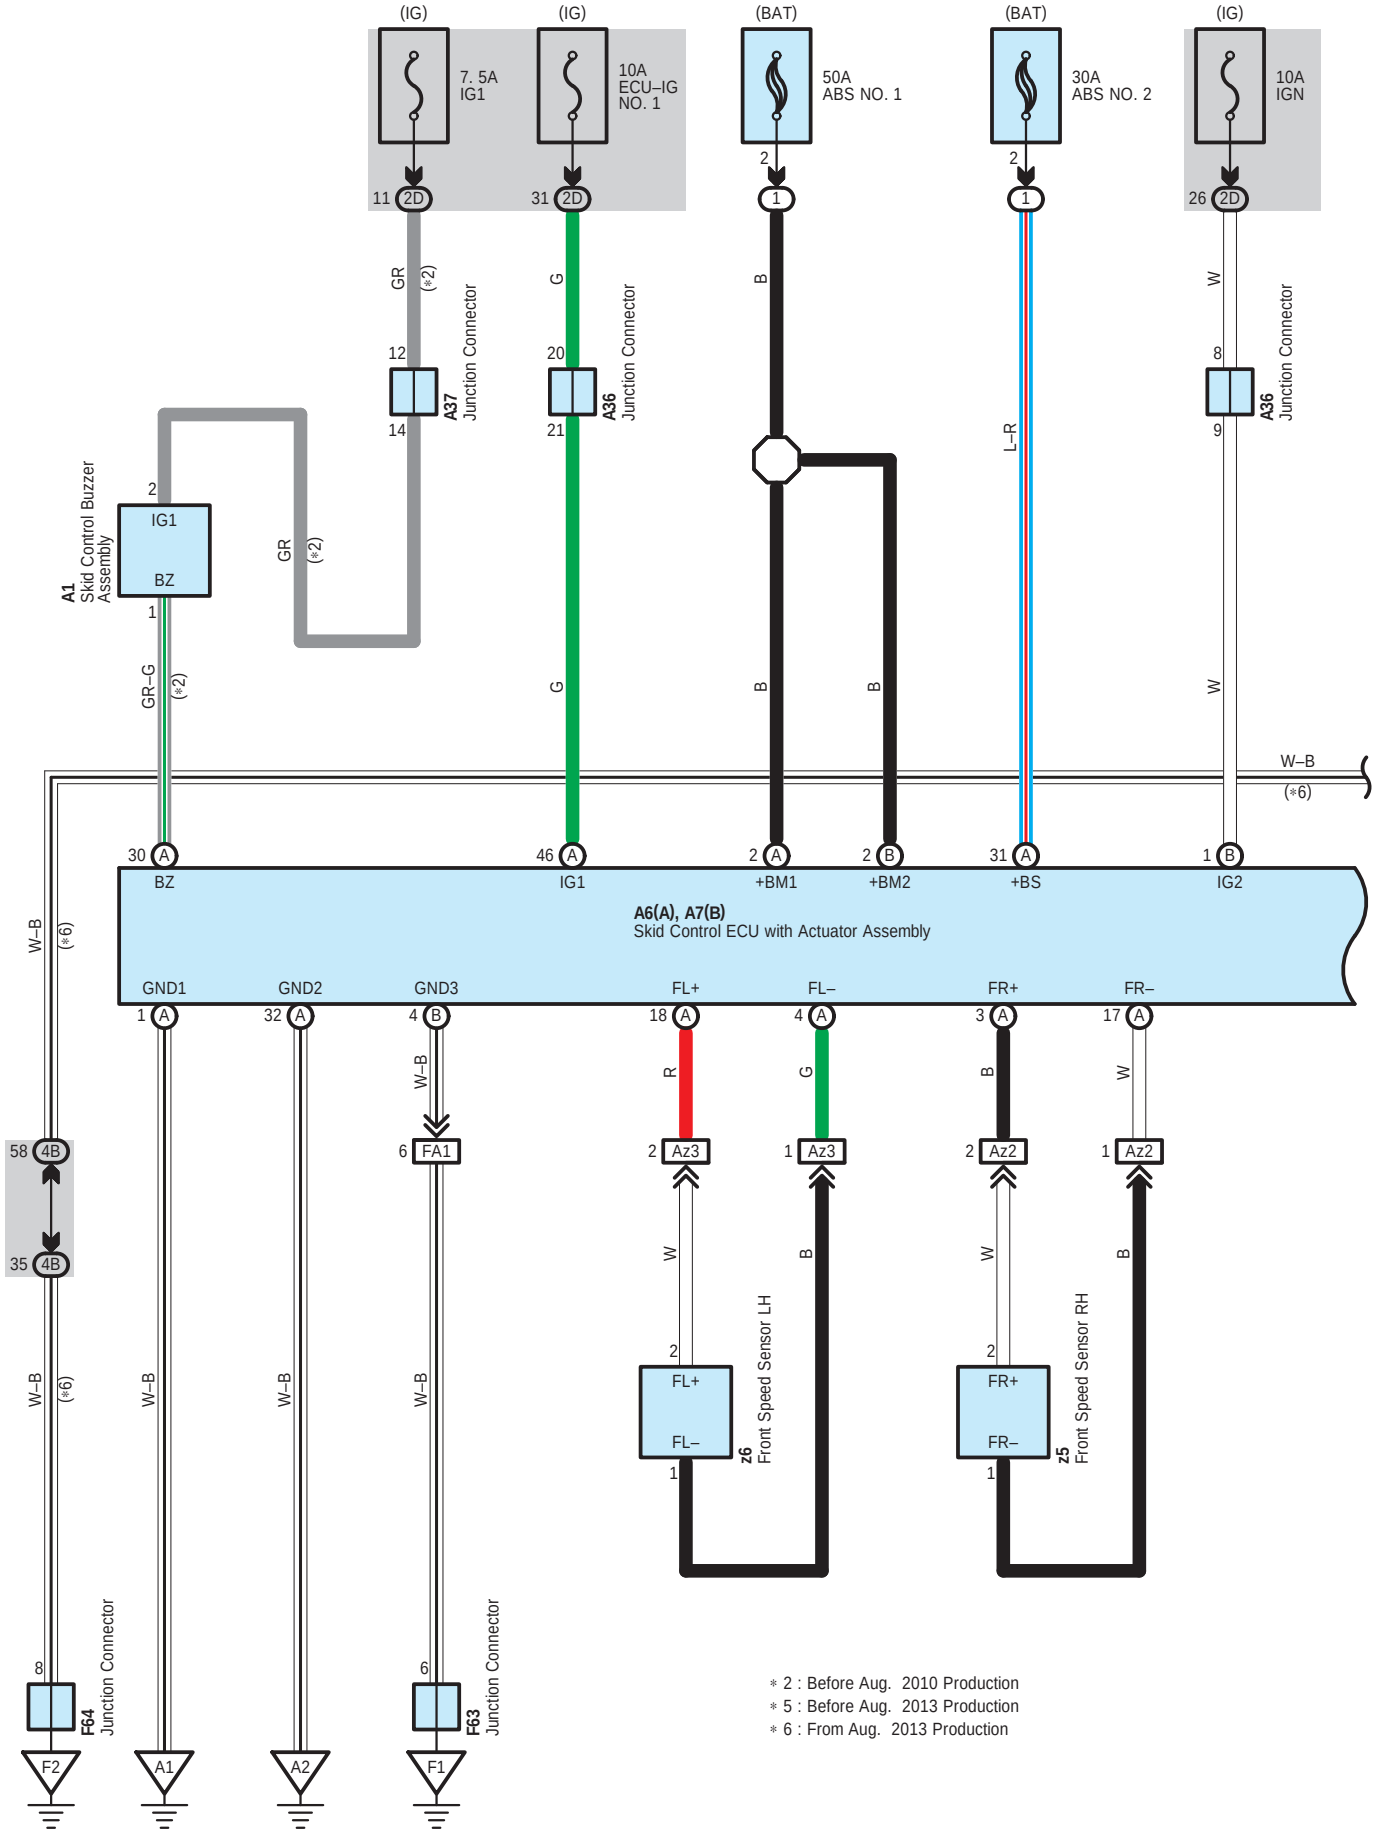
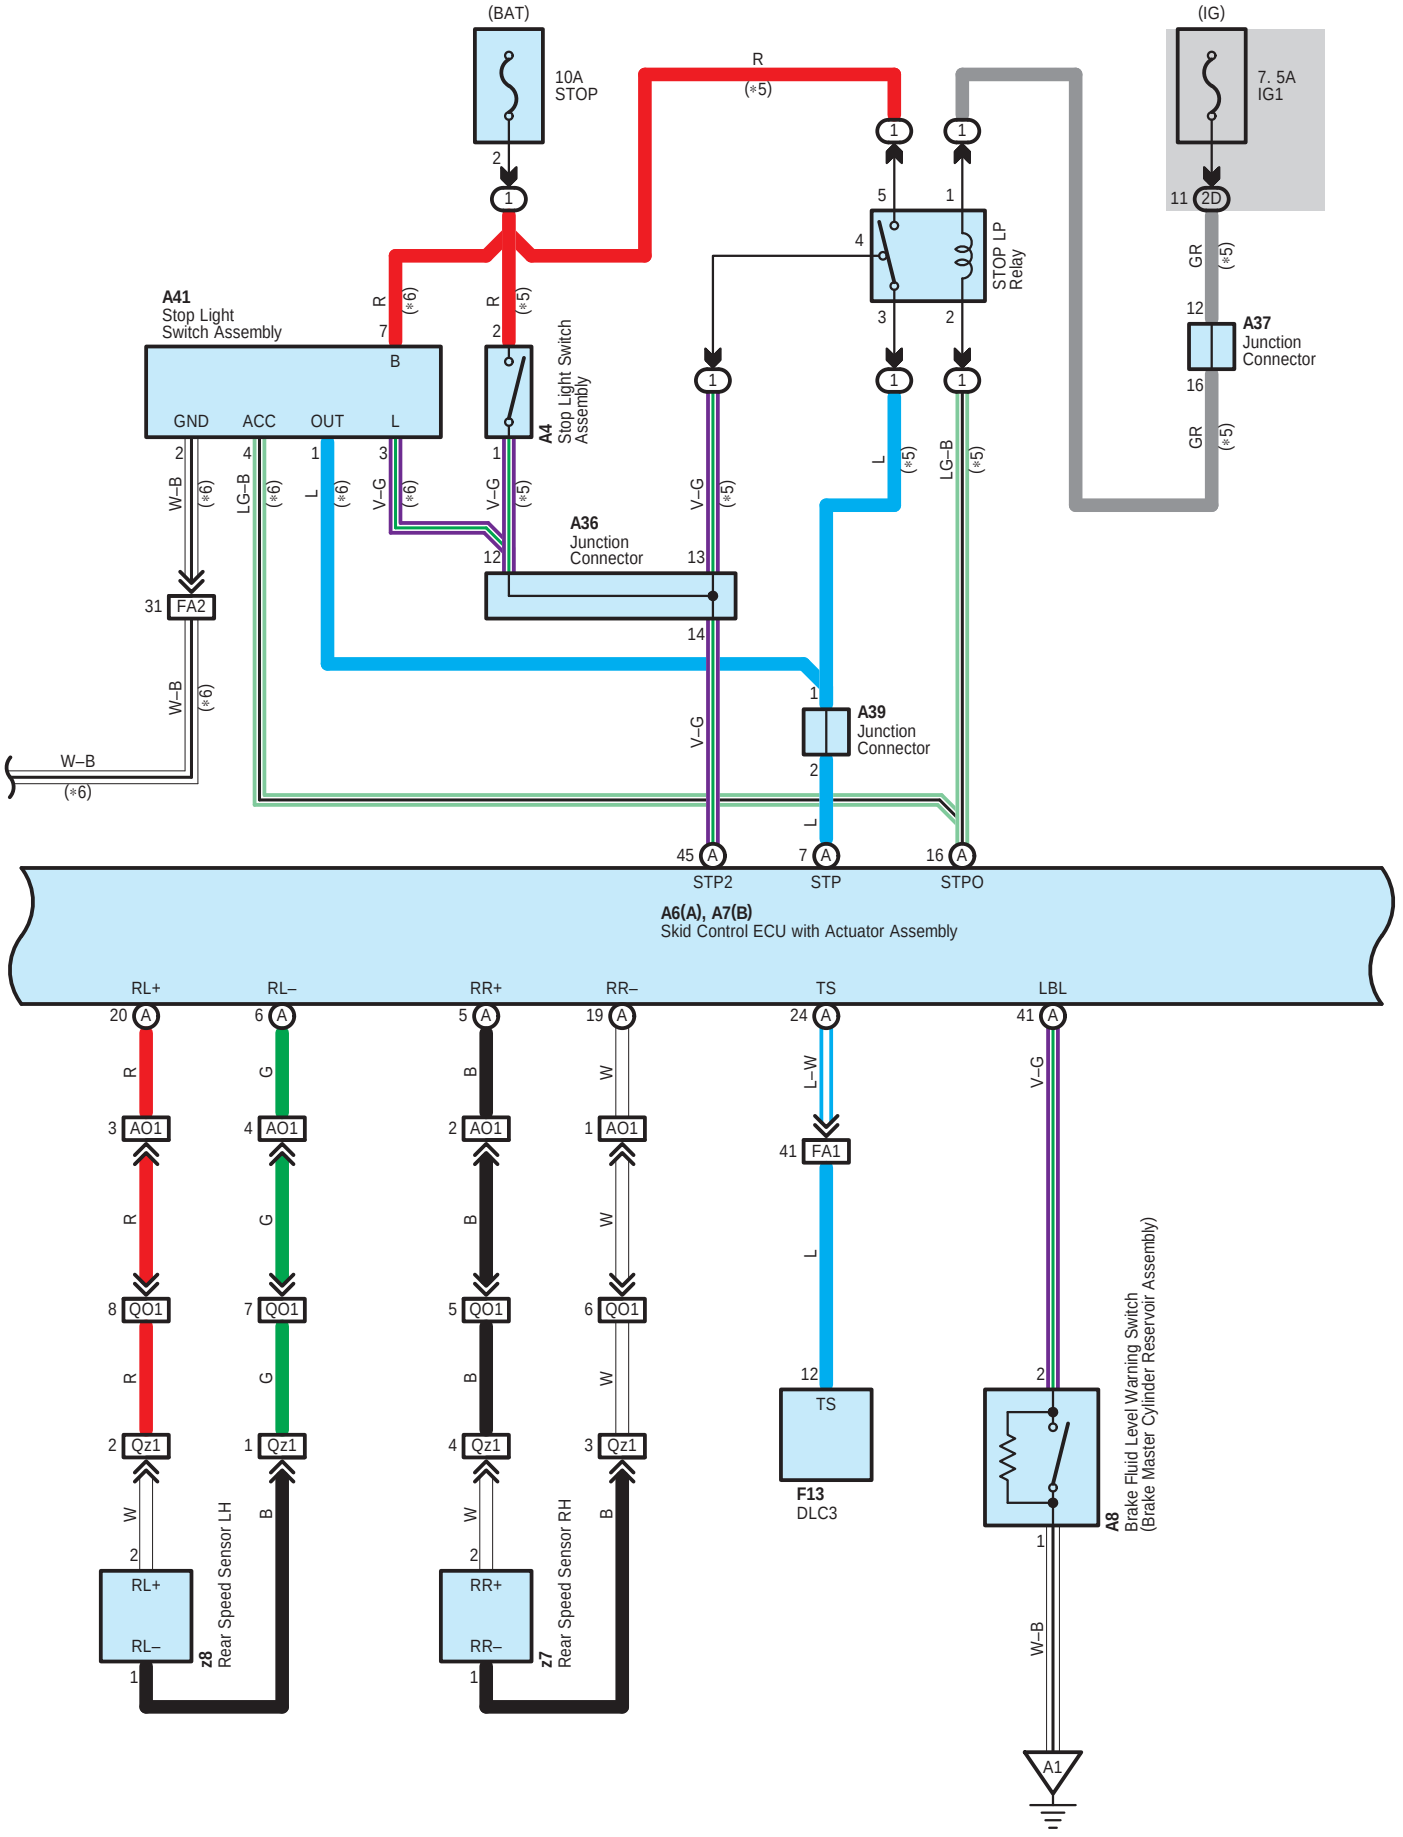
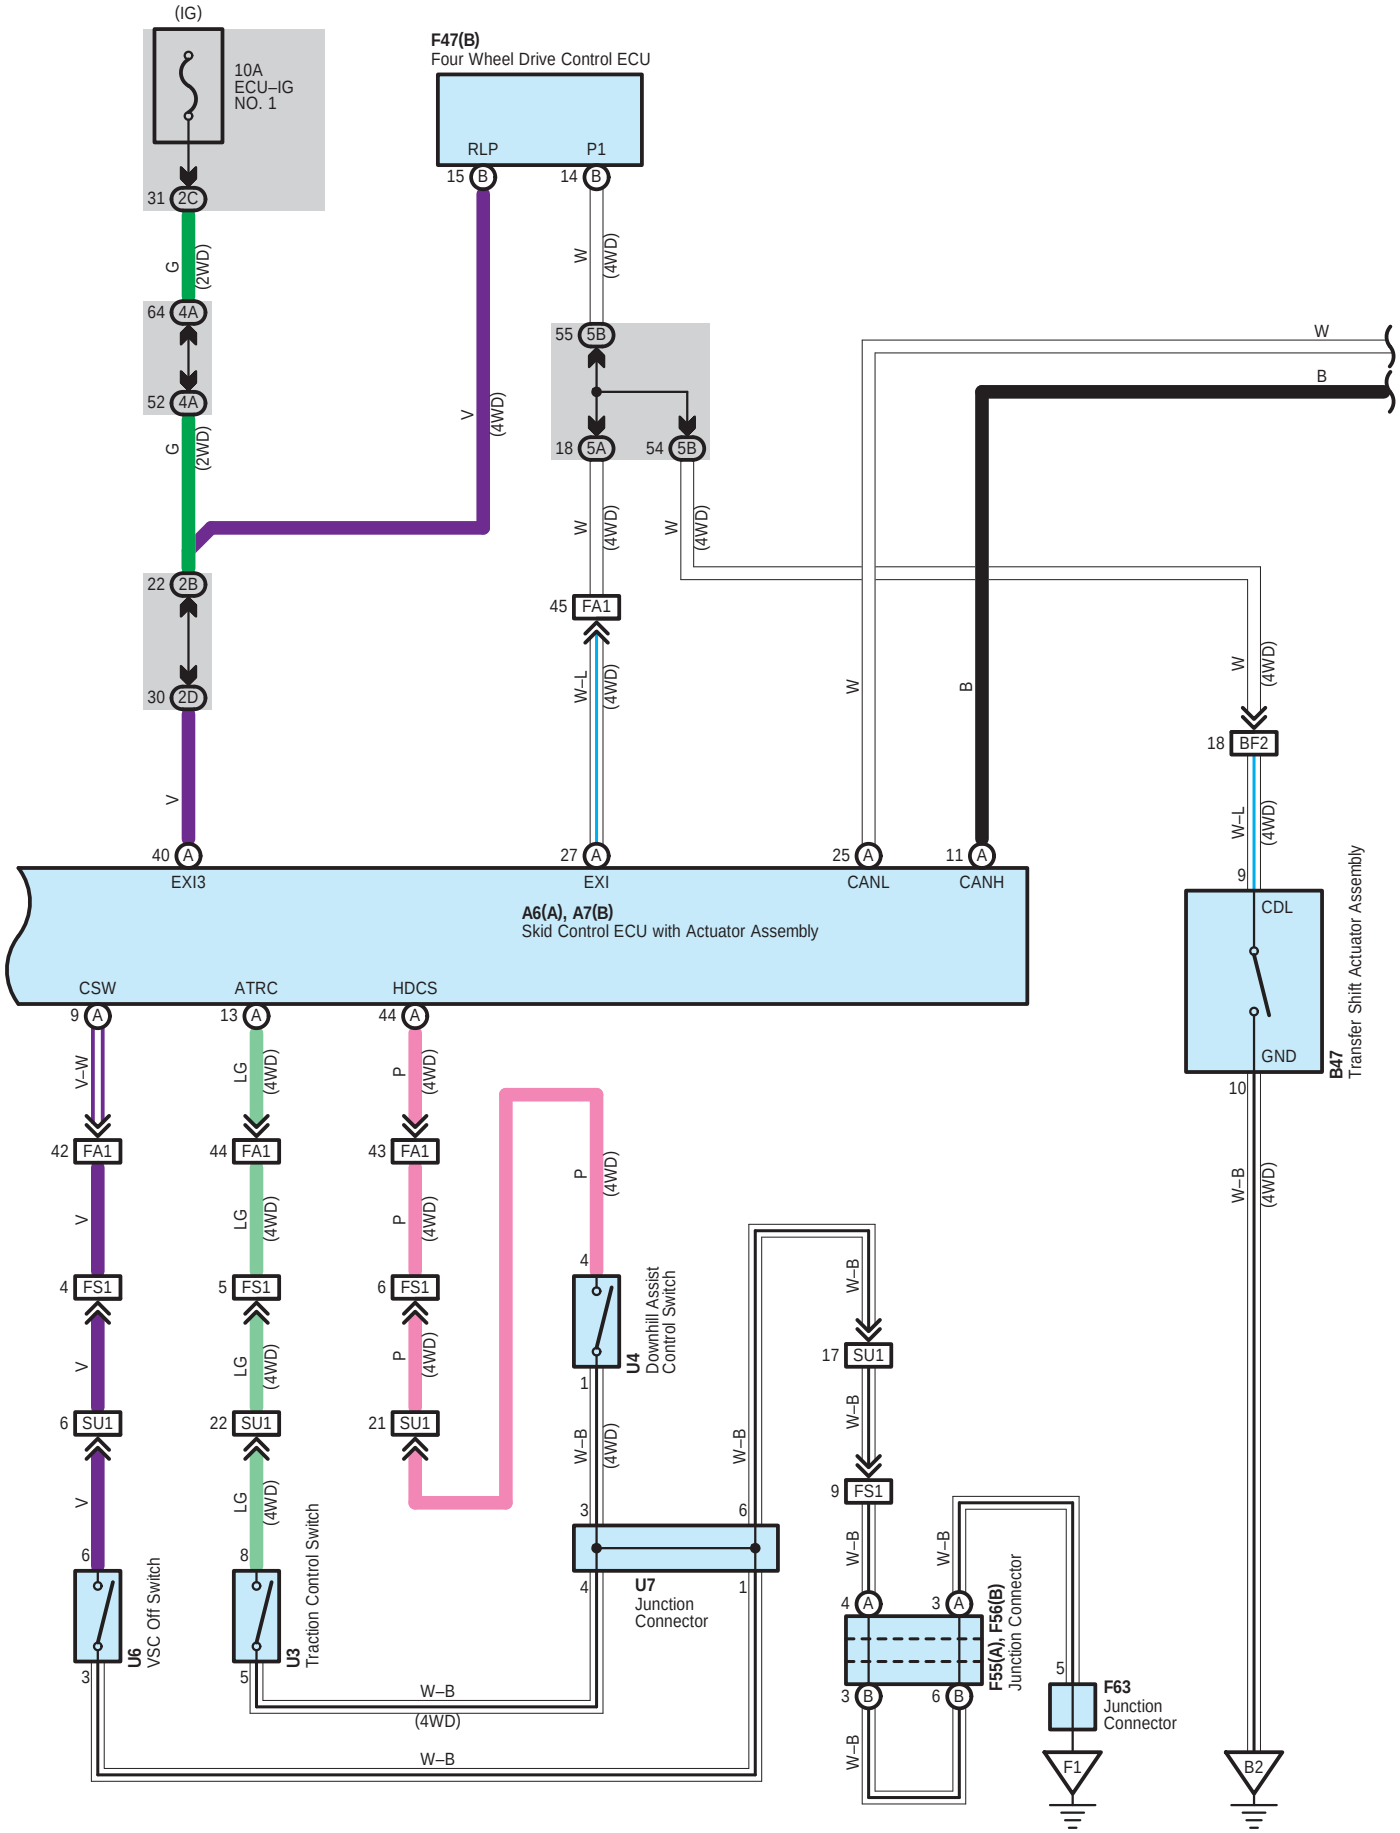
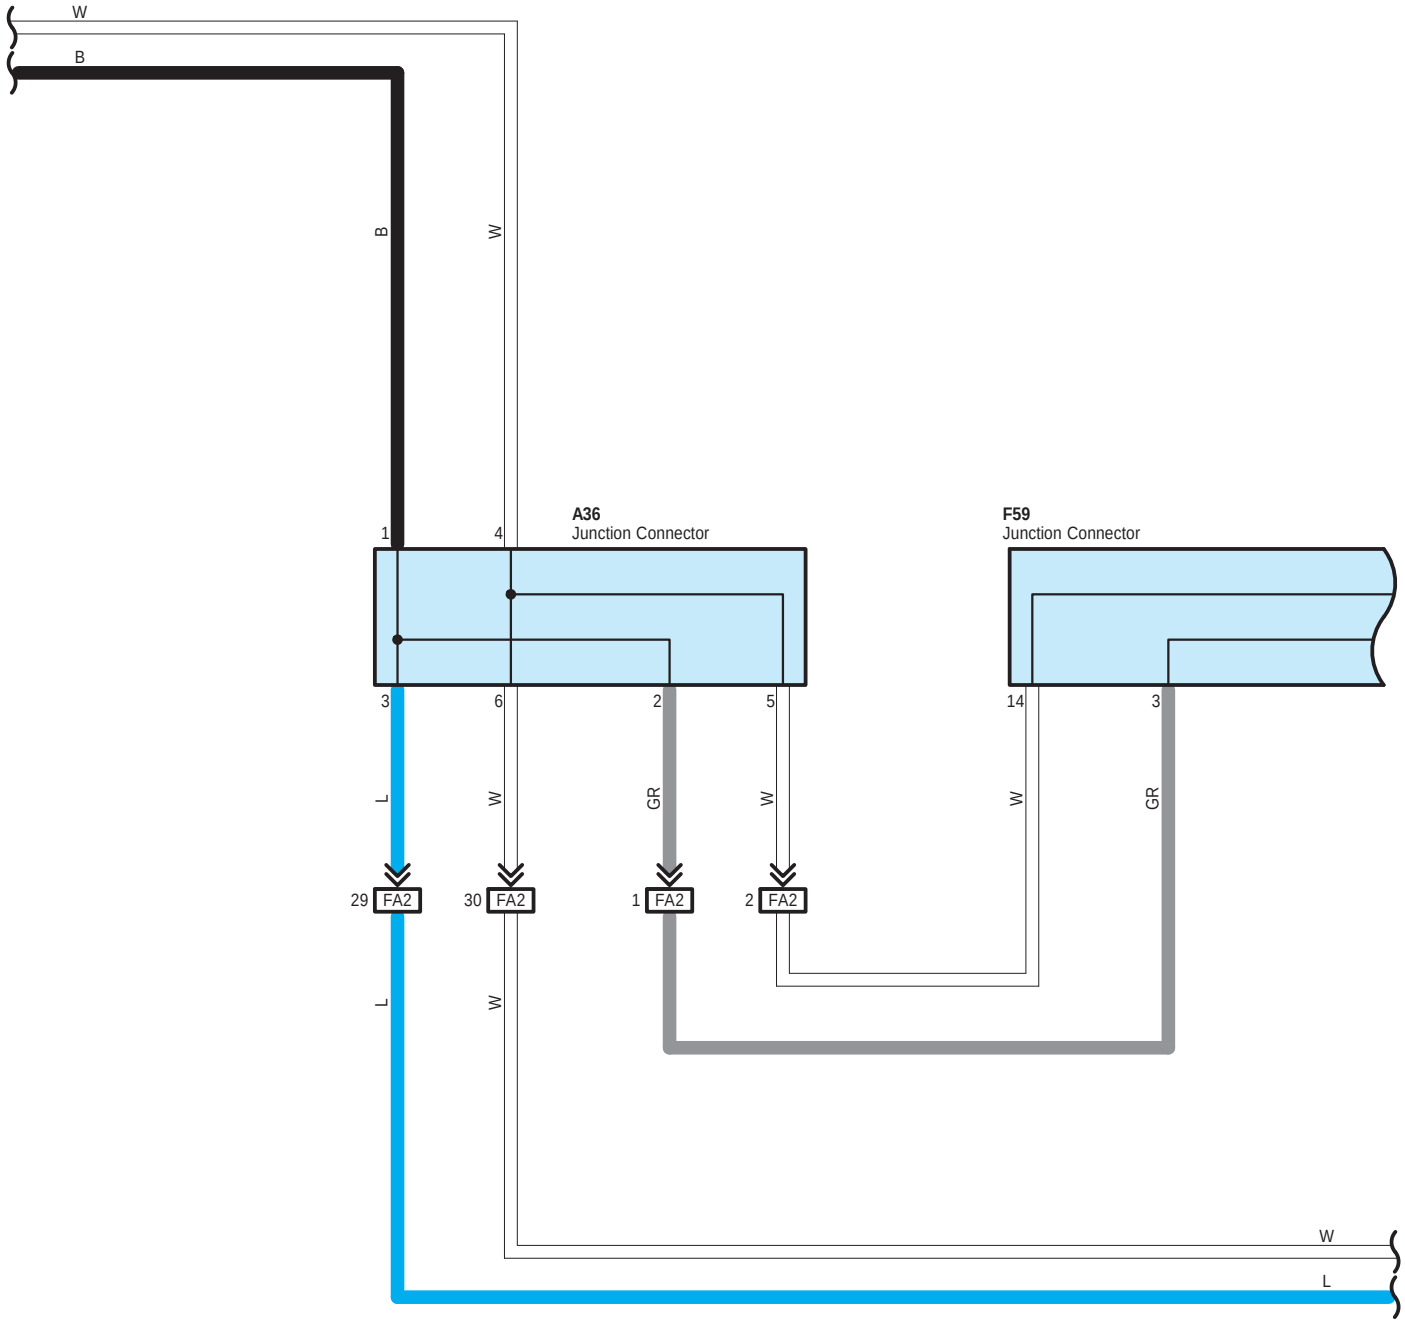
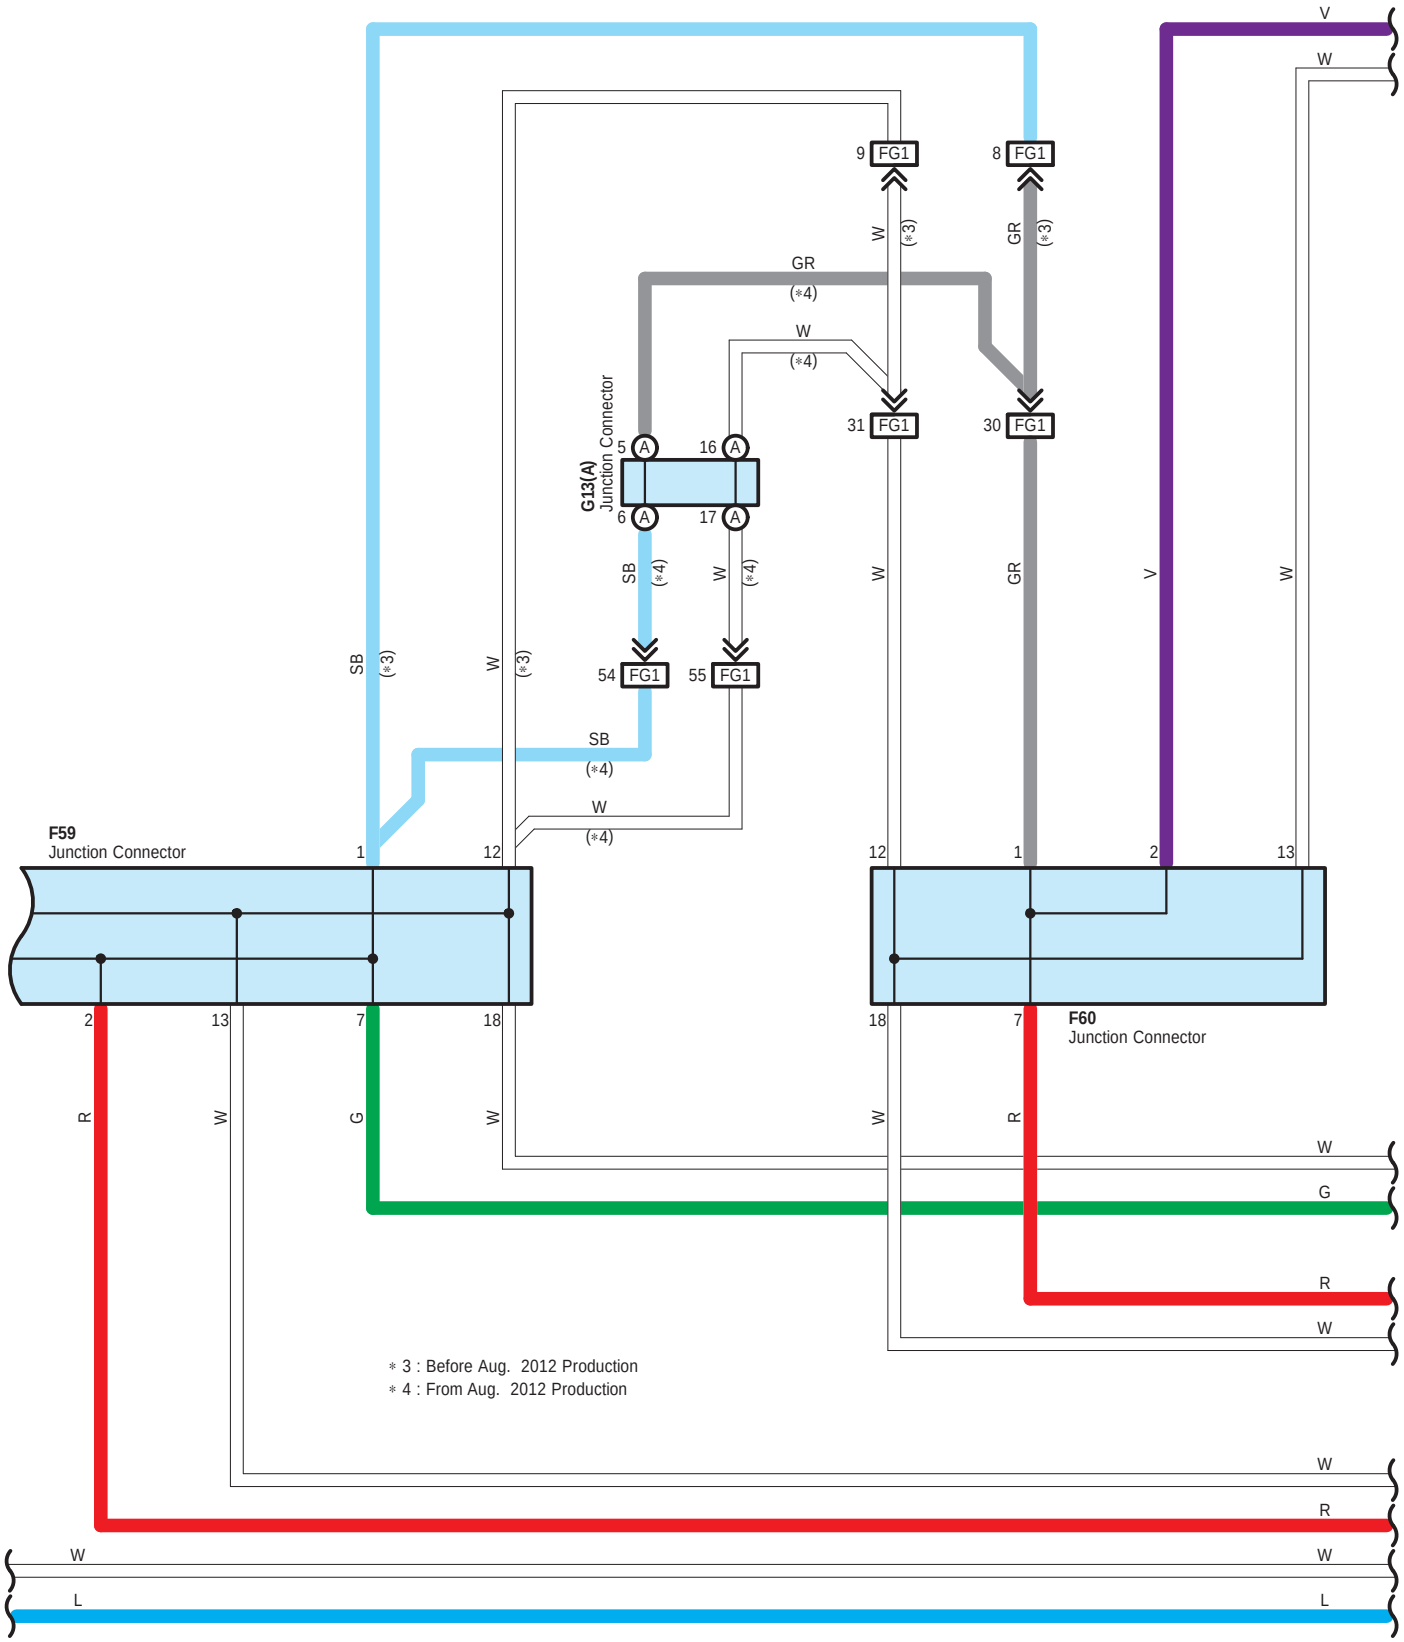



∗ 2 : Before Aug. 2010 Production
∗ 5 : Before Aug. 2013 Production
∗ 6 : From Aug. 2013 Production



(BAT)
10A
STOP
R
(*5)
(IG)
7. 5A
IG1
STOP LP
Relay
A41
Stop Light
Switch Assembly
GND
ACC
OUT
L
A4
Stop Light Switch
Assembly
A36
Junction
Connector
A37
Junction
Connector
A39
Junction
Connector
W–B
LG–B
V–G
L
GR
FA2
STP2
STP
STPO
A6(A), A7(B)
Skid Control ECU with Actuator Assembly
RL+
RL–
RR+
RR–
TS
LBL
AO1
QO1
Qz1
FA1
TS
F13
DLC3
A8
Brake Fluid Level Warning Switch
(Brake Master Cylinder Reservoir Assembly)
z8
Rear Speed Sensor LH
z7
Rear Speed Sensor RH
A1



(IG)
10A
ECU–IG
NO. 1
31 2C
64 4A
52 4A
22 2B
30 2D
40 A
EXI3
F47(B)
Four Wheel Drive Control ECU
RLP
P1
15 B
14 B
55 5B
18 5A
54 5B
45 FA1
27 A
EXI
25 A
CANL
11 A
CANH
A6(A), A7(B)
Skid Control ECU with Actuator Assembly
18 BF2
9
CDL
GND
10
B47
Transfer Shift Actuator Assembly
CSW
ATRC
HDCS
9 A
13 A
44 A
42 FA1
44 FA1
43 FA1
4 FS1
5 FS1
6 FS1
6 SU1
22 SU1
21 SU1
U6
VSC Off Switch
U3
Traction Control Switch
U4
Downhill Assist
Control Switch
U7
Junction
Connector
17 SU1
9 FS1
F55(A), F56(B)
Junction Connector
F63
Junction
Connector
F1
B2
G
V
W
B
W–L
W–B
LG
P
(2WD)
(4WD)



W
B
B
W
A36
Junction Connector
F59
Junction Connector
1
4
3
6
2
5
14
3
L
W
GR
W
W
GR
29 FA2
30 FA2
1 FA2
2 FA2
L
W
W
L


V
W
9 FG1
8 FG1
W (*3)
GR (*3)
GR (*4)
W (*4)
31 FG1
30 FG1
G13(A) Junction Connector
5 A
16 A
6 A
17 A
SB (*4)
W (*4)
W
GR
V
W
SB (*3)
W (*3)
54 FG1
55 FG1
SB (*4)
W (*4)
F59 Junction Connector
1
12
12
1
2
13
2
13
7
18
18
7
F60 Junction Connector
R
W
G
W
W
R
W
G
R
W
* 3 : Before Aug. 2012 Production
* 4 : From Aug. 2012 Production
W
R
W
W
L
W
L

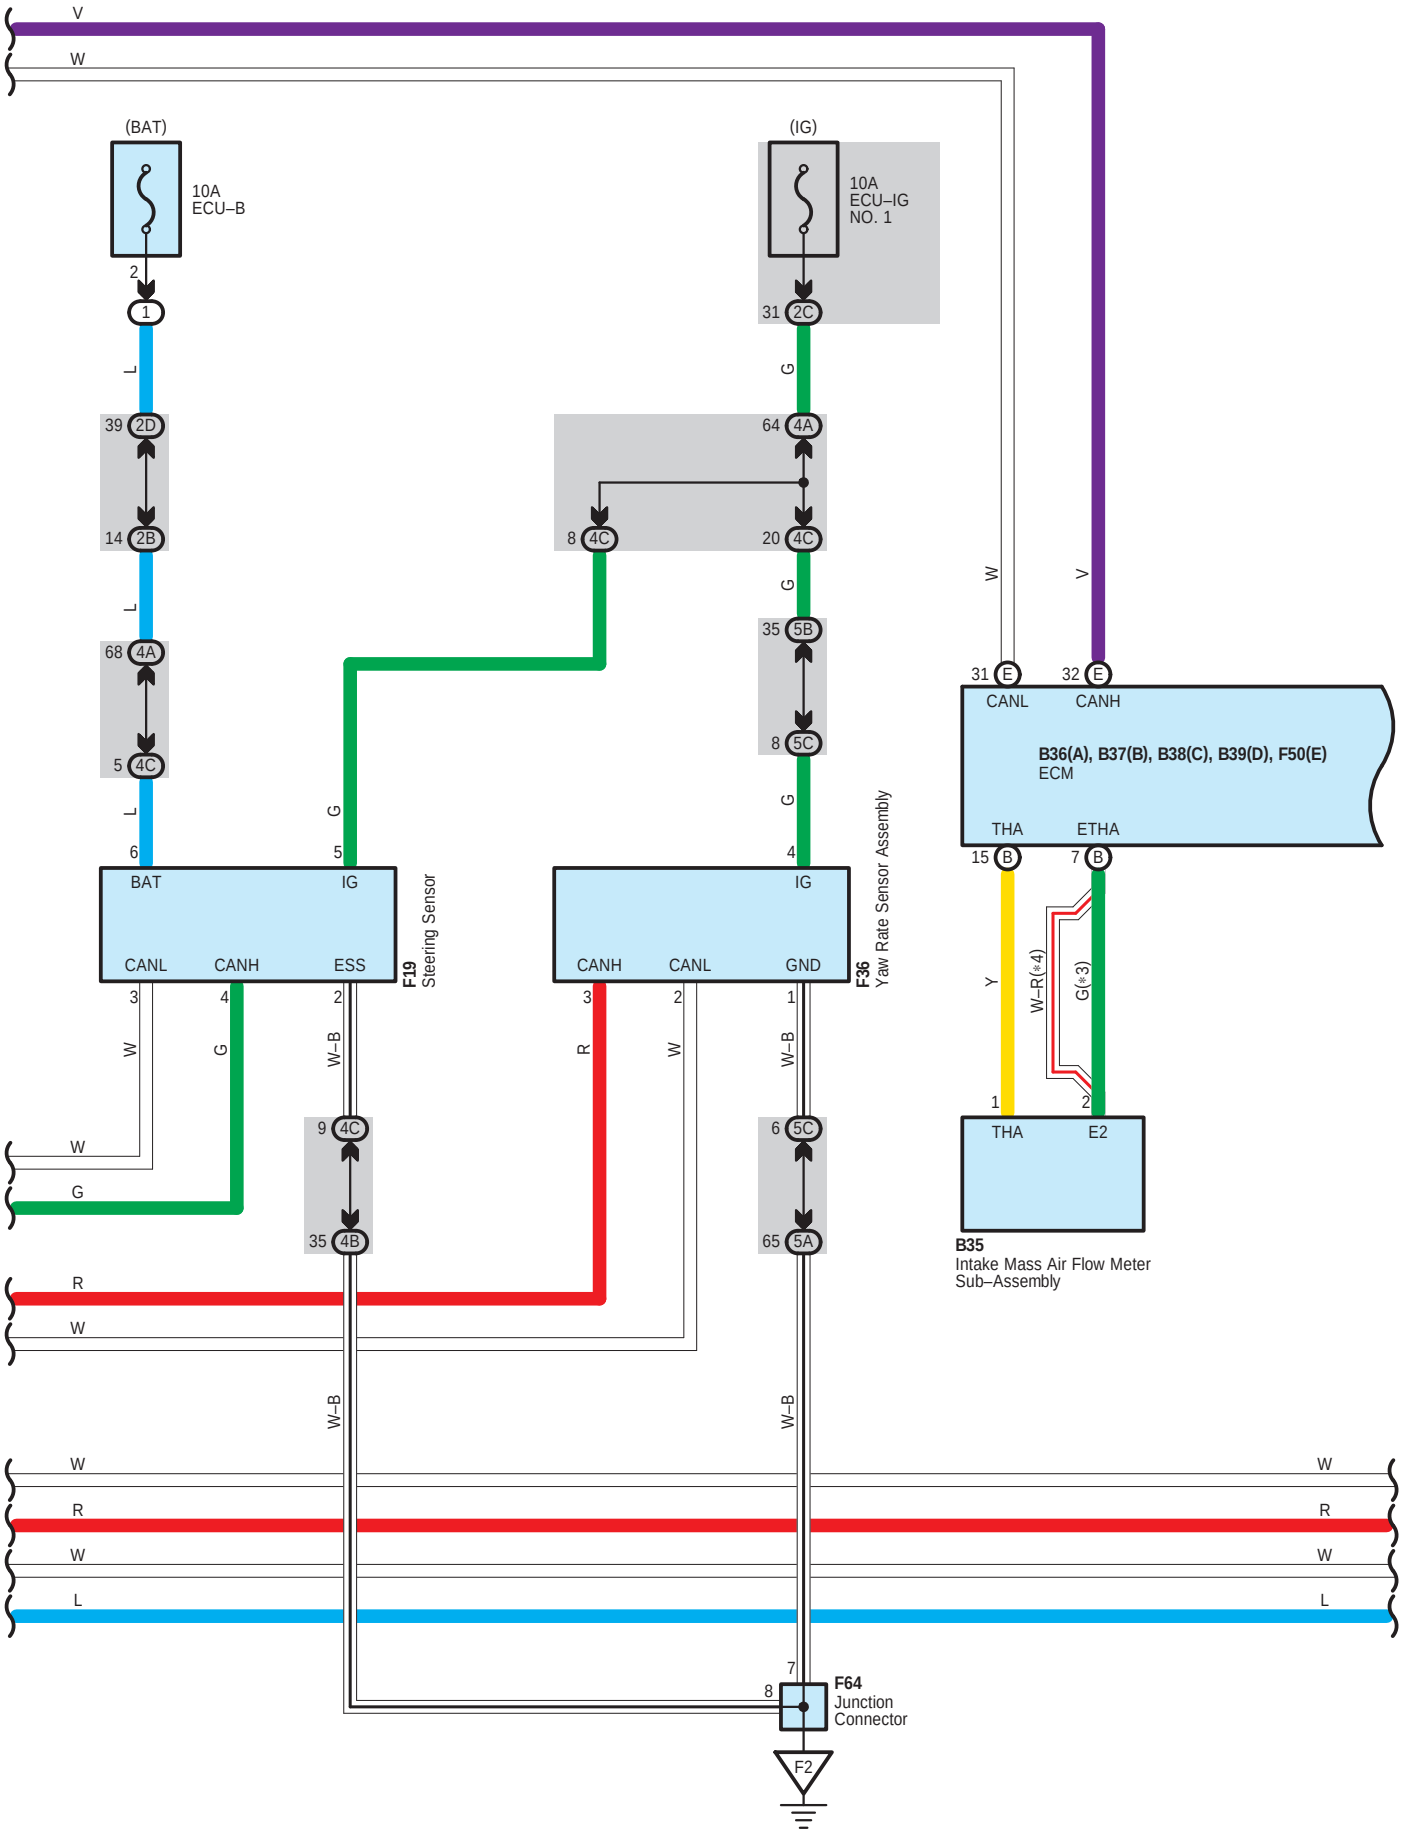

V
W
(BAT)
10A
ECU–B
2
1
L
39 2D
14 2B
L
68 4A
5 4C
L
6
BAT
(IG)
10A
ECU–IG
NO. 1
31 2C
G
64 4A
8 4C
20 4C
G
35 5B
8 5C
G
4
IG
G
5
IG
CANL
CANH
ESS
F19
Steering Sensor
3
4
2
W
G
W–B
9 4C
35 4B
W
G
CANH
CANL
GND
F36
Yaw Rate Sensor Assembly
3
2
1
R
W
W–B
6 5C
65 5A
R
W
W–B
W
R
W
L
W
R
W
L
7
8
F64
Junction
Connector
F2
W
V
31 E
32 E
CANL
CANH
B36(A), B37(B), B38(C), B39(D), F50(E)
ECM
THA
ETHA
15 B
7 B
Y
W–R(*4)
G(*3)
1
2
THA
E2
B35
Intake Mass Air Flow Meter
Sub–Assembly

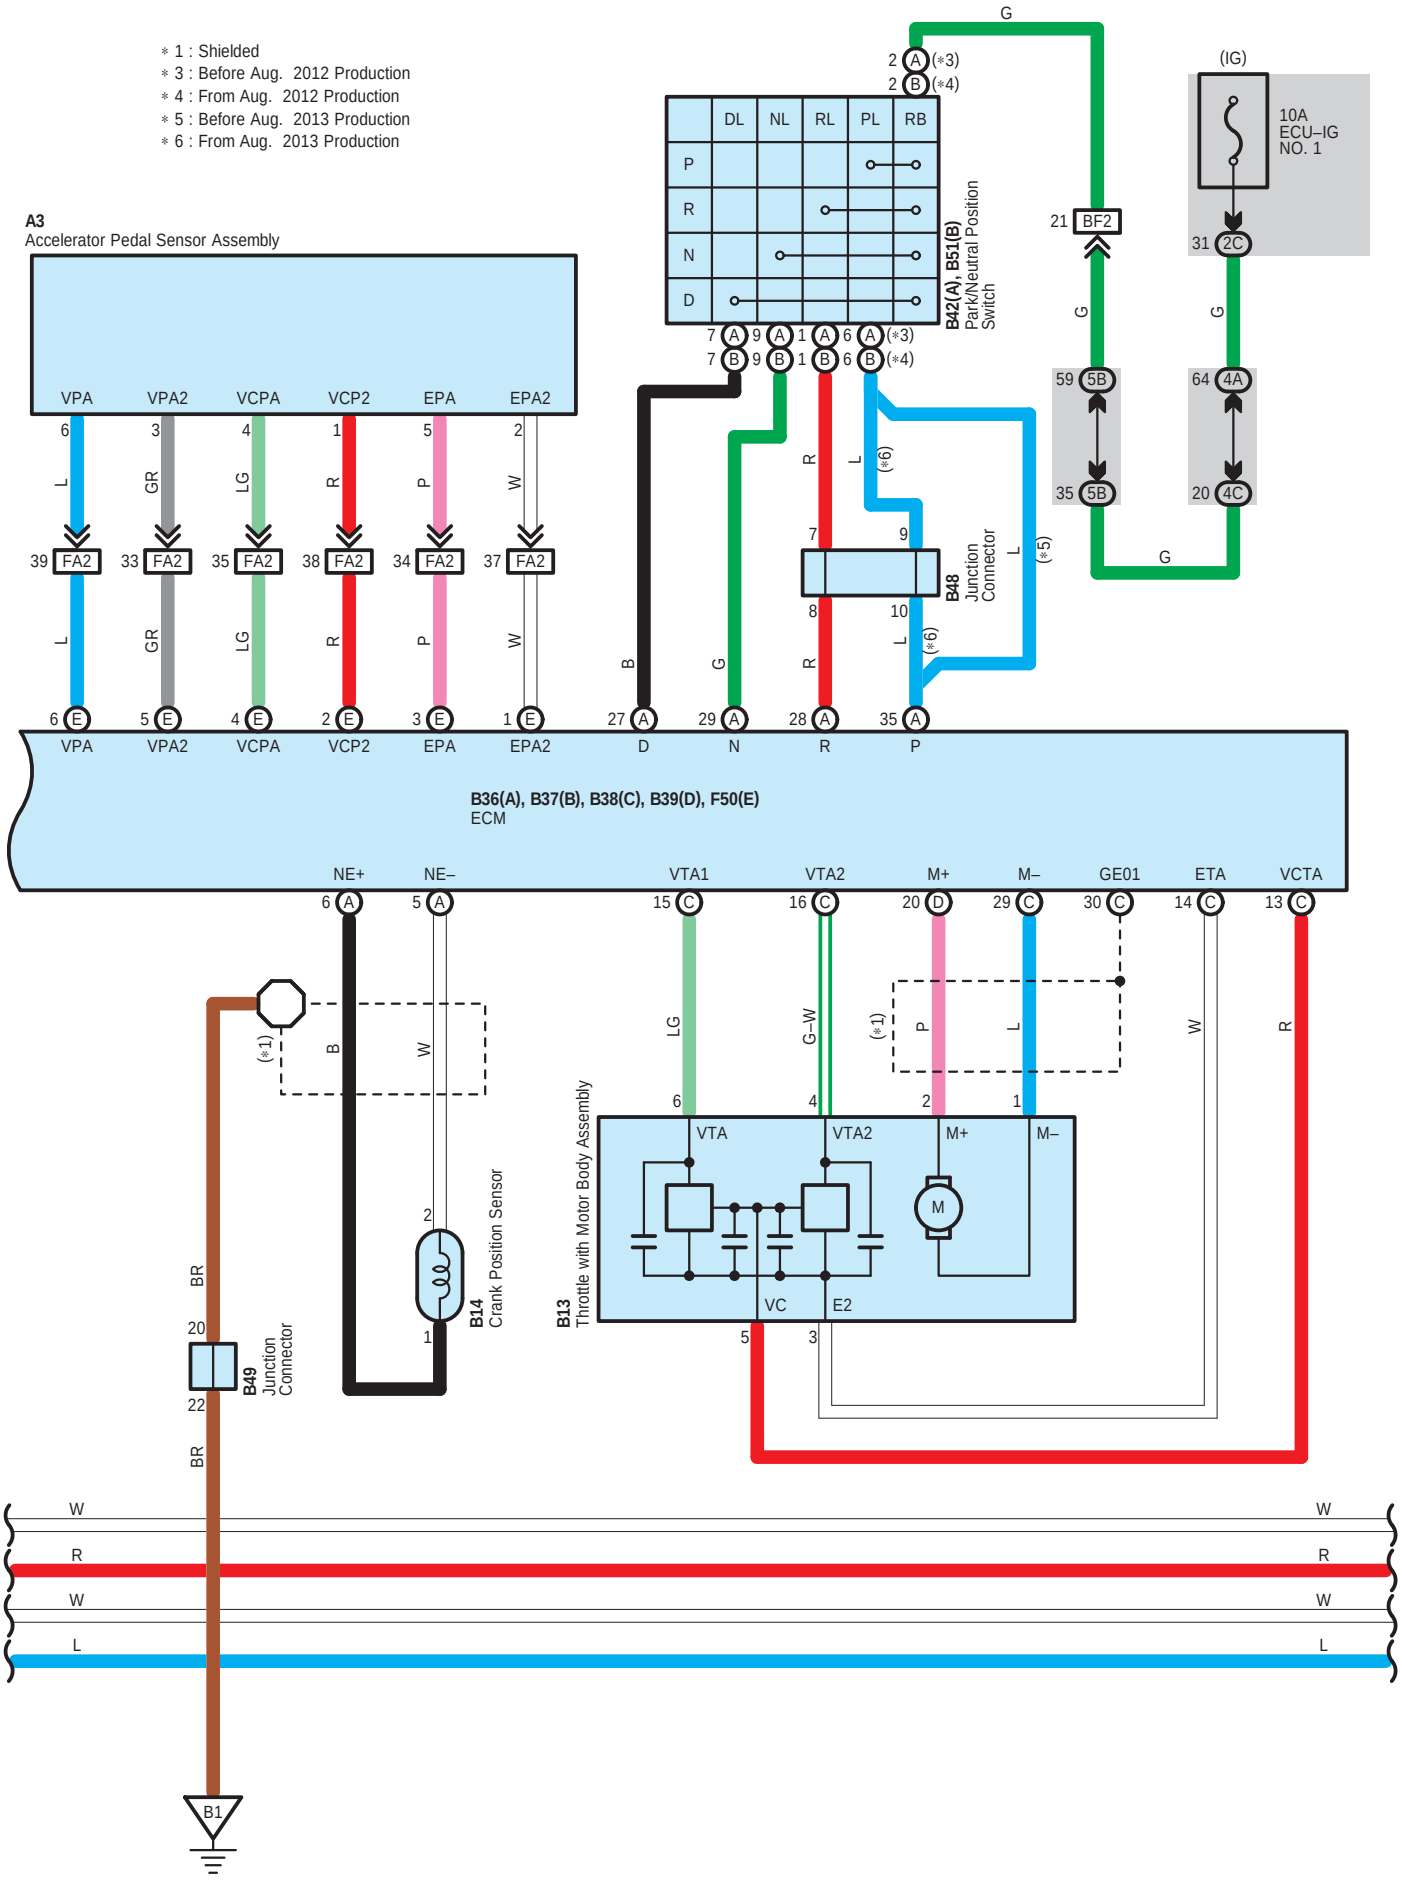
＊1 : Shielded
＊3 : Before Aug. 2012 Production
＊4 : From Aug. 2012 Production
＊5 : Before Aug. 2013 Production
＊6 : From Aug. 2013 Production
A3
Accelerator Pedal Sensor Assembly
VPA
VPA2
VCPA
VCP2
EPA
EPA2
B42(A), B51(B)
Park/Neutral Position Switch
DL
NL
RL
PL
RB
P
R
N
D
(IG)
10A
ECU–IG
NO. 1
BF2
B48
Junction Connector
B36(A), B37(B), B38(C), B39(D), F50(E)
ECM
NE+
NE–
VTA1
VTA2
M+
M–
GE01
ETA
VCTA
B14
Crank Position Sensor
B13
Throttle with Motor Body Assembly
VTA
VC
E2
B49
Junction Connector
B1

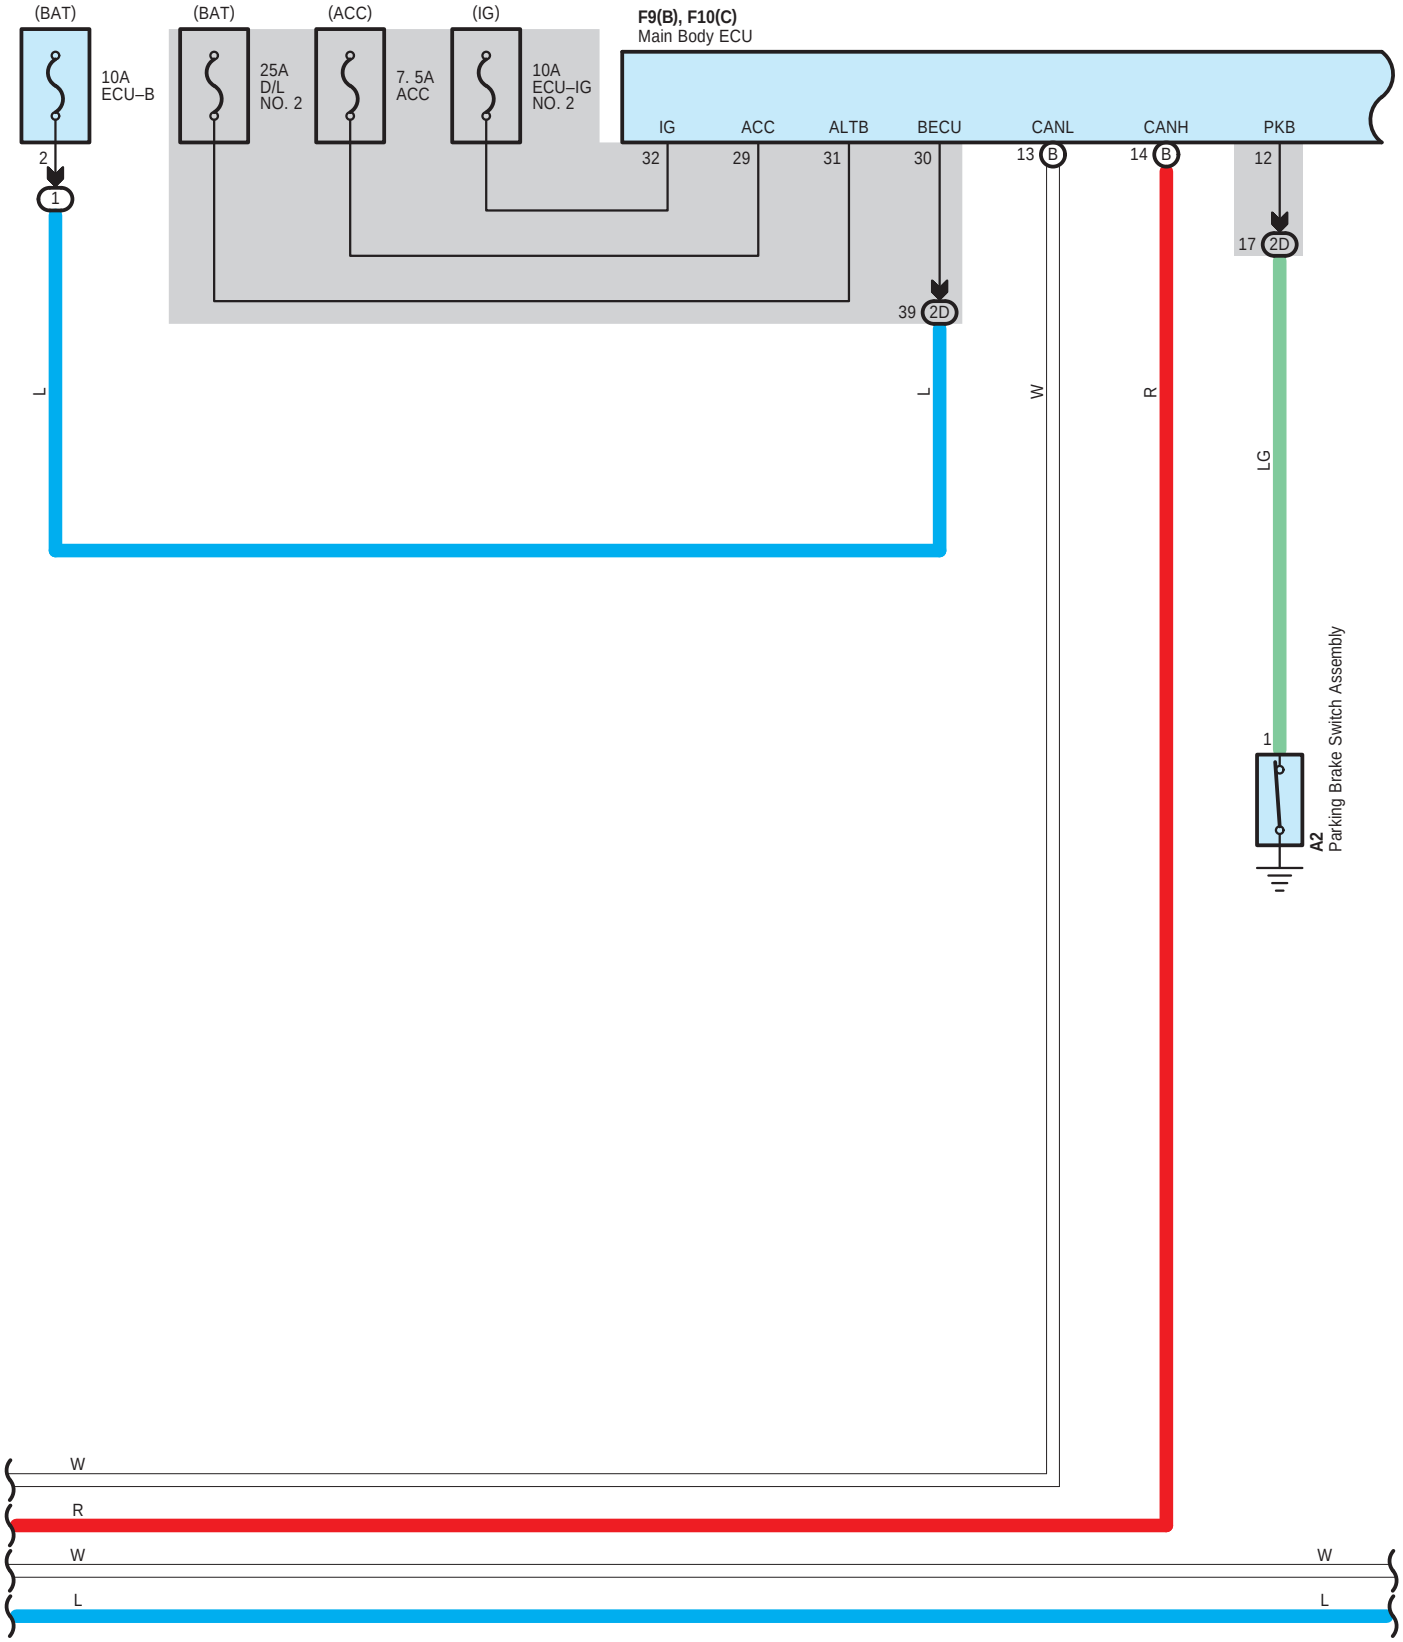

(BAT)
10A
ECU–B
2
1
(BAT)
25A
D/L
NO. 2
(ACC)
7. 5A
ACC
(IG)
10A
ECU–IG
NO. 2
F9(B), F10(C)
Main Body ECU
IG
ACC
ALTB
BECU
CANL
CANH
PKB
32
29
31
30
13 B
14 B
12
39 2D
17 2D
L
L
W
R
LG
1
A2
Parking Brake Switch Assembly
W
R
W
L
W
L

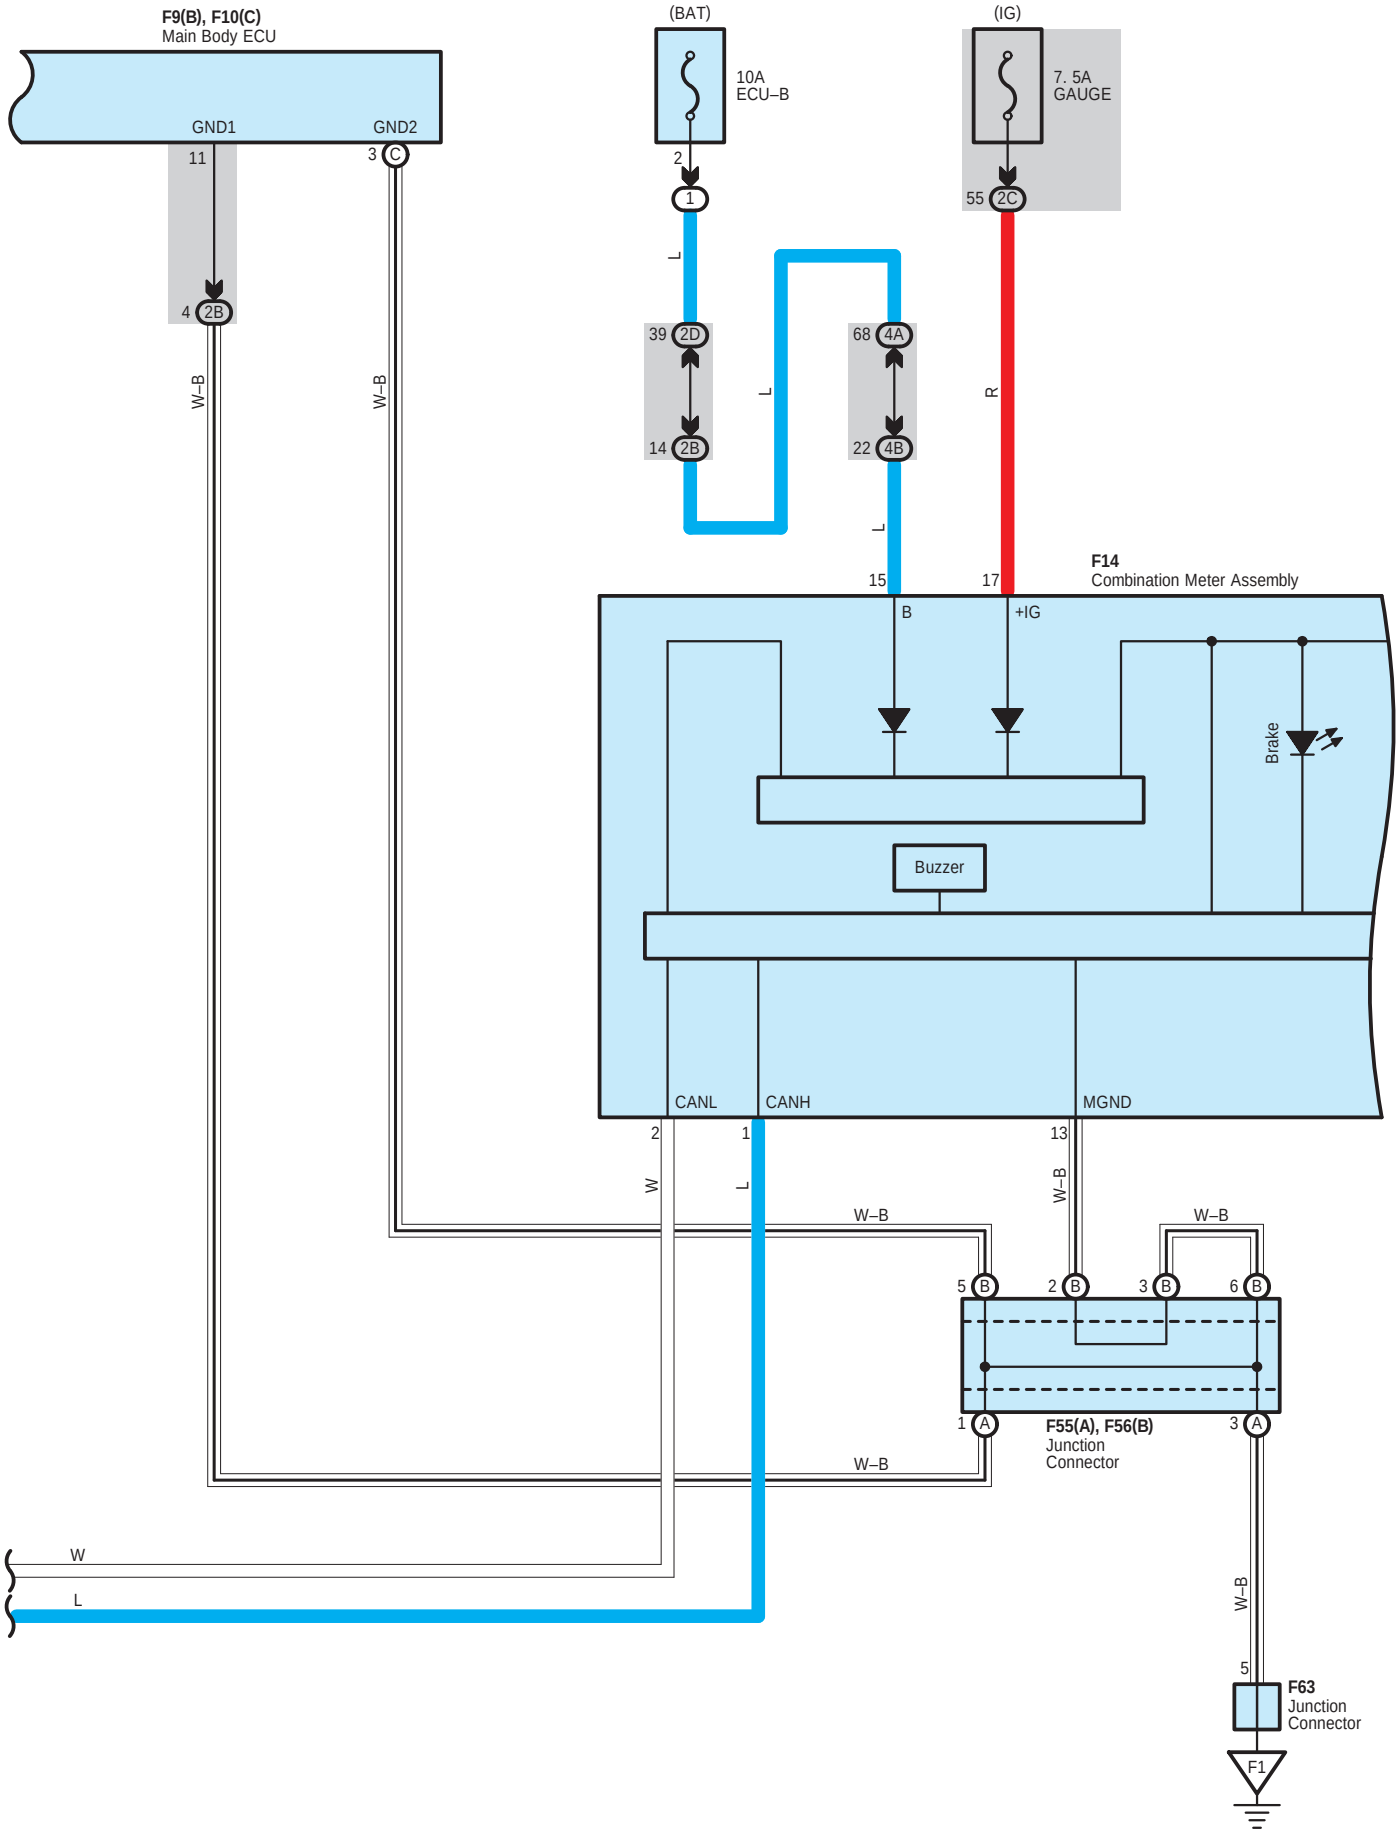
F9(B), F10(C)
Main Body ECU
GND1
GND2
11
3 C
4 2B
W–B
W–B
(BAT)
10A
ECU–B
2
1
L
39 2D
14 2B
L
68 4A
22 4B
L
(IG)
7. 5A
GAUGE
55 2C
R
15
17
F14
Combination Meter Assembly
B
+IG
Brake
Buzzer
CANL
CANH
MGND
2
1
13
W
L
W–B
W–B
W–B
5 B
2 B
3 B
6 B
1 A
3 A
F55(A), F56(B)
Junction
Connector
W–B
W
L
W–B
5
F63
Junction
Connector
F1

∗ 6 : From Aug. 2013 Production
∗ 7 : Optitron Meter

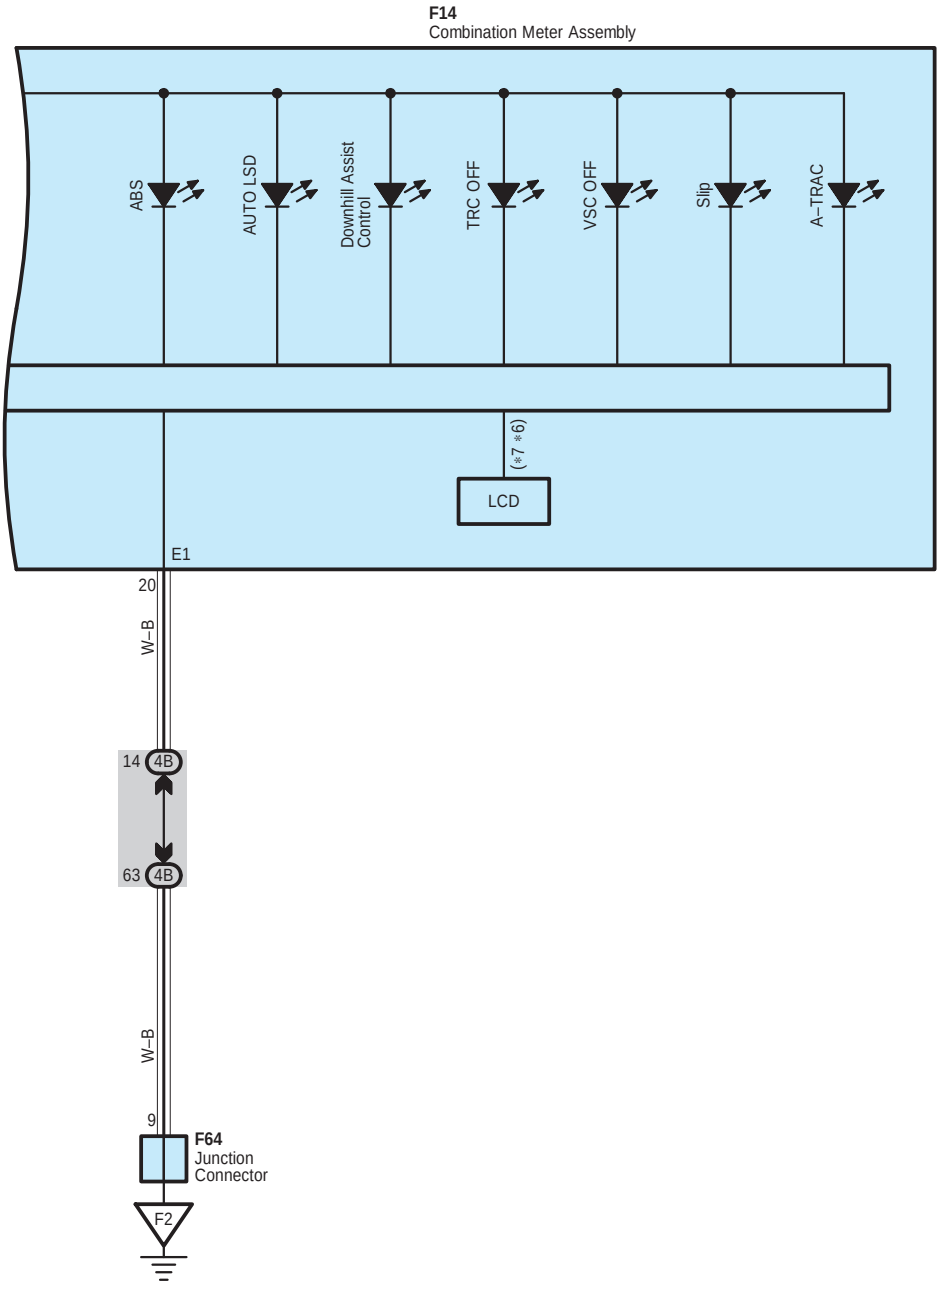


A 1
Blue




A 2
White




A 3
Black

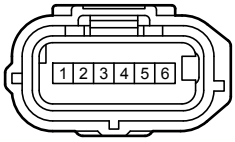


A 4
White

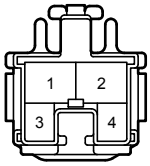


A 6
Black

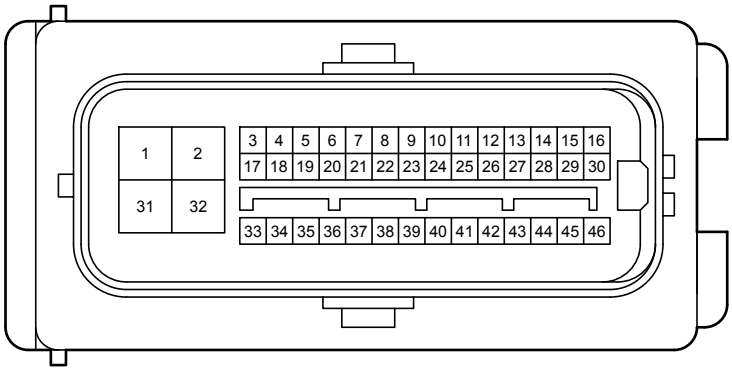


A 7
Black

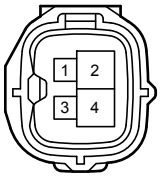


A 8
Gray

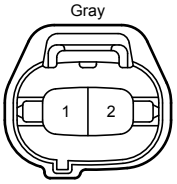


A 36
White

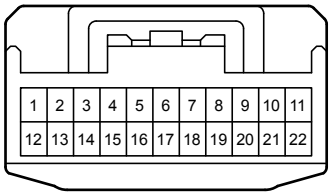


A 37
Black

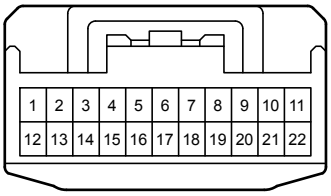


A 39
Black

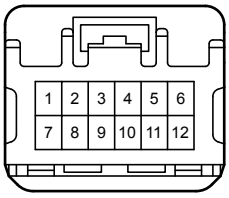


A 41
Black

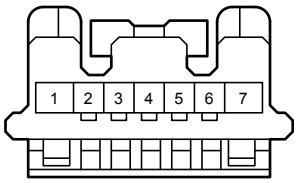


B 13
Black

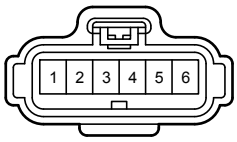


B 14
Black

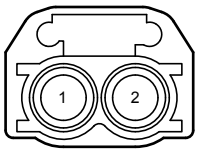


B 35
Black

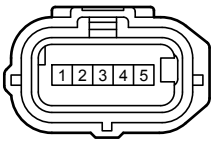


B 36
White

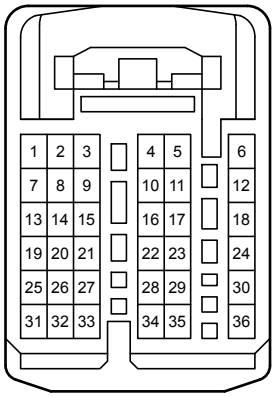


B 37
White

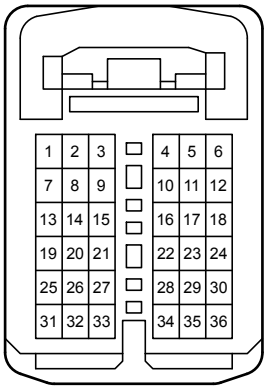


B 38
White

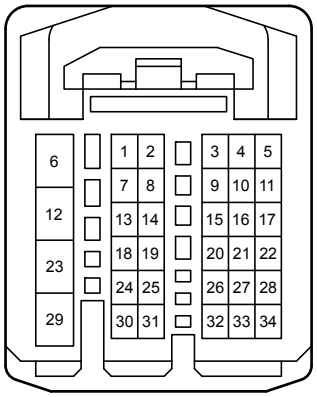


B 39
White

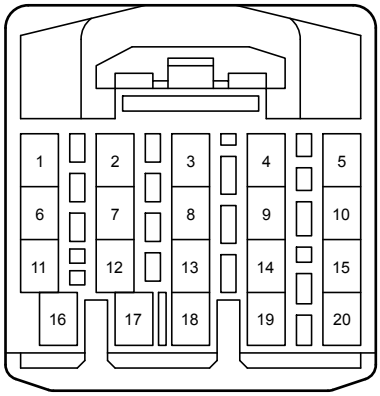


B 42
Gray

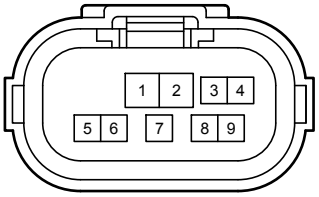


B 47
Black

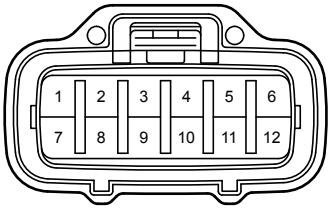


B 48
Black




B 49
Gray

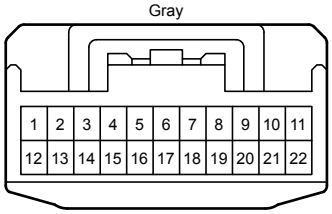


B 51
Gray

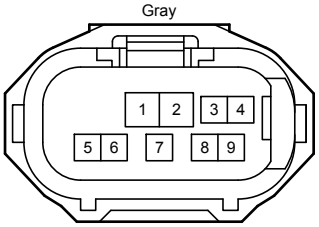


F 9
White

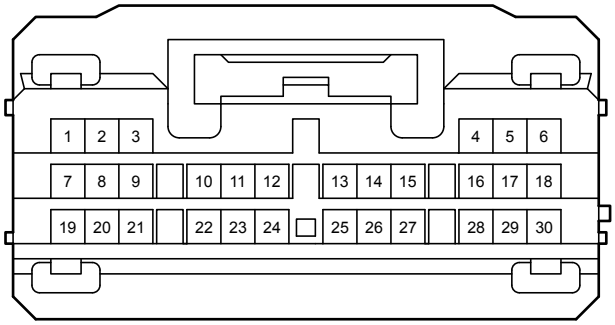


F 10
White

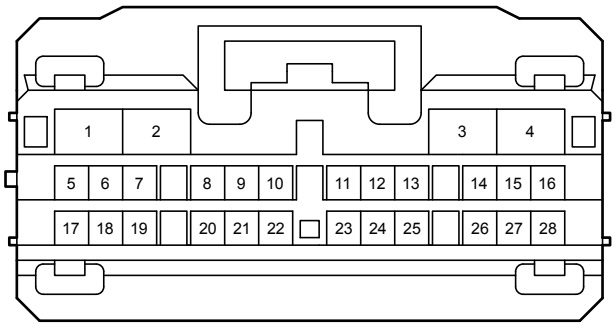


F 13
White

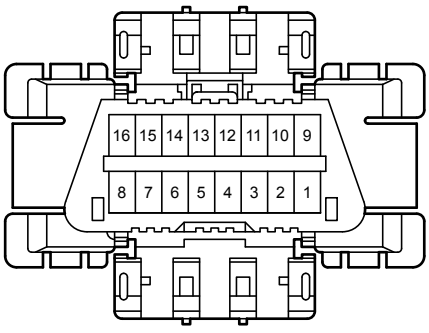


F 14
White

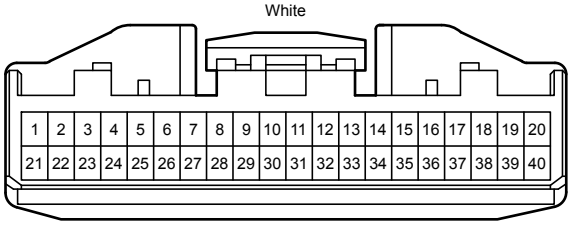


F 19
Blue

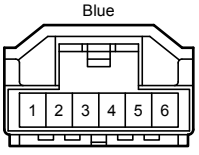


F 36
Black

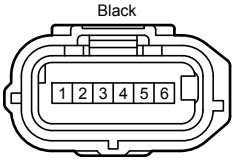


F 47
Black

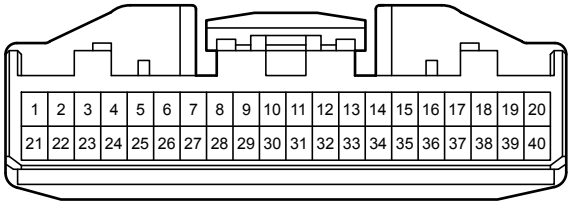


F 50
White

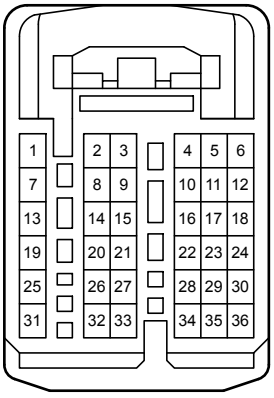


F 55
Gray

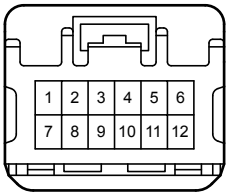


F 56
Gray

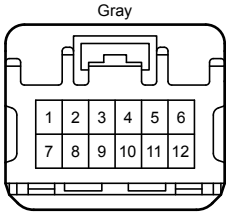


F 59
Gray

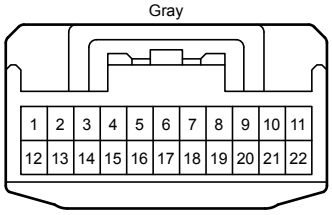


F 60
Gray

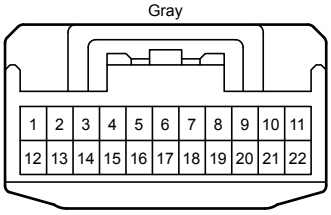


F 63
White

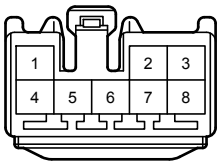


F 64
White

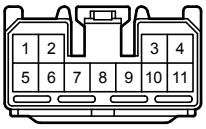


G 13
Black

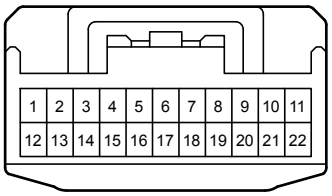


U 3
Black

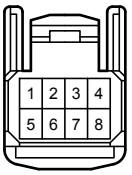


U 4
Gray

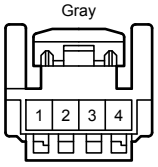

U 6
Black

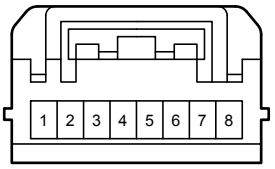

U 7
Black

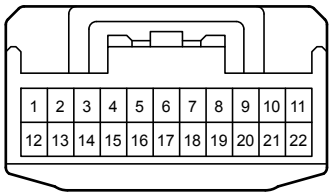

z 5
Black



z 6
Black




z 7
Black




z 8
Black




2B
White

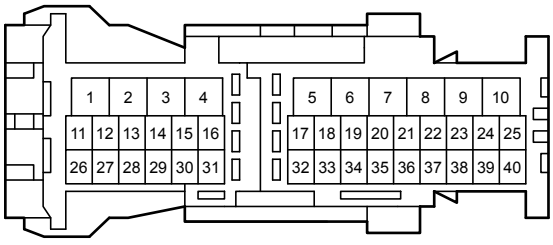


2C
White

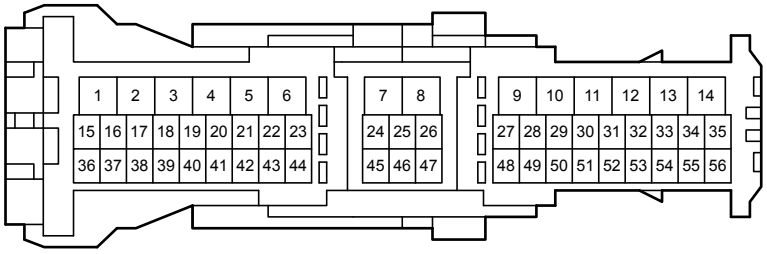


2D
White

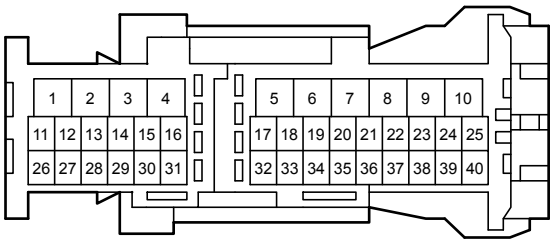


4A
White

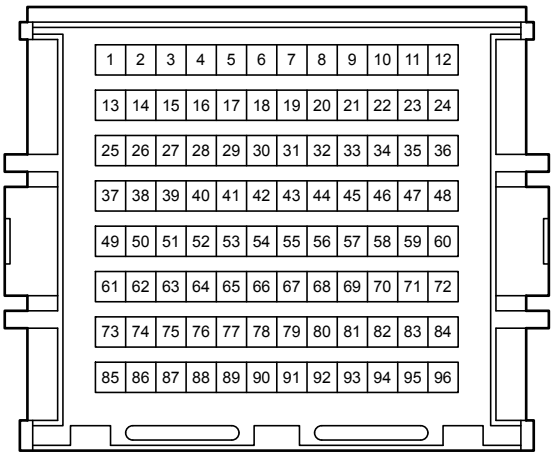


4B
White

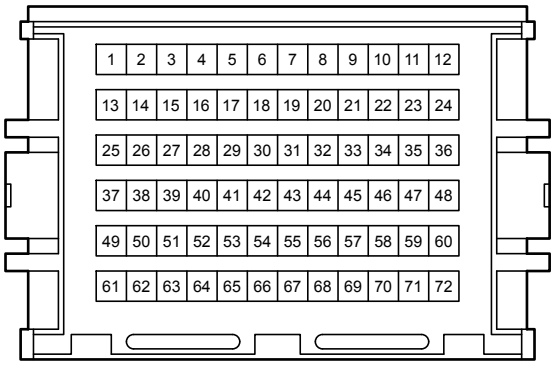


4C
White

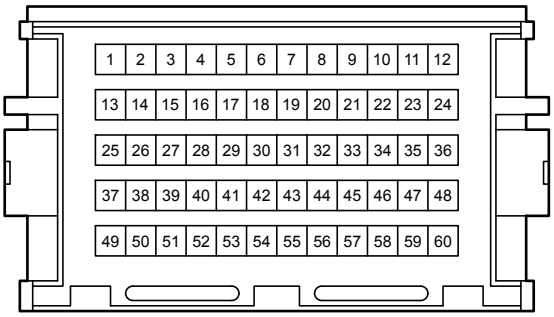


5A
White

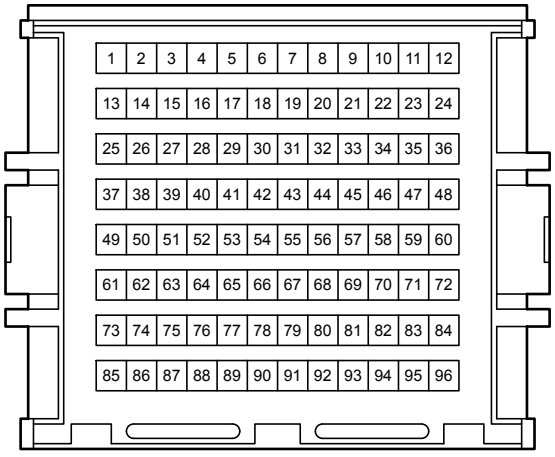


5B
White

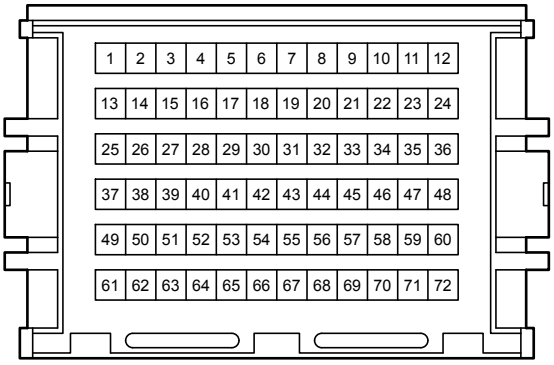


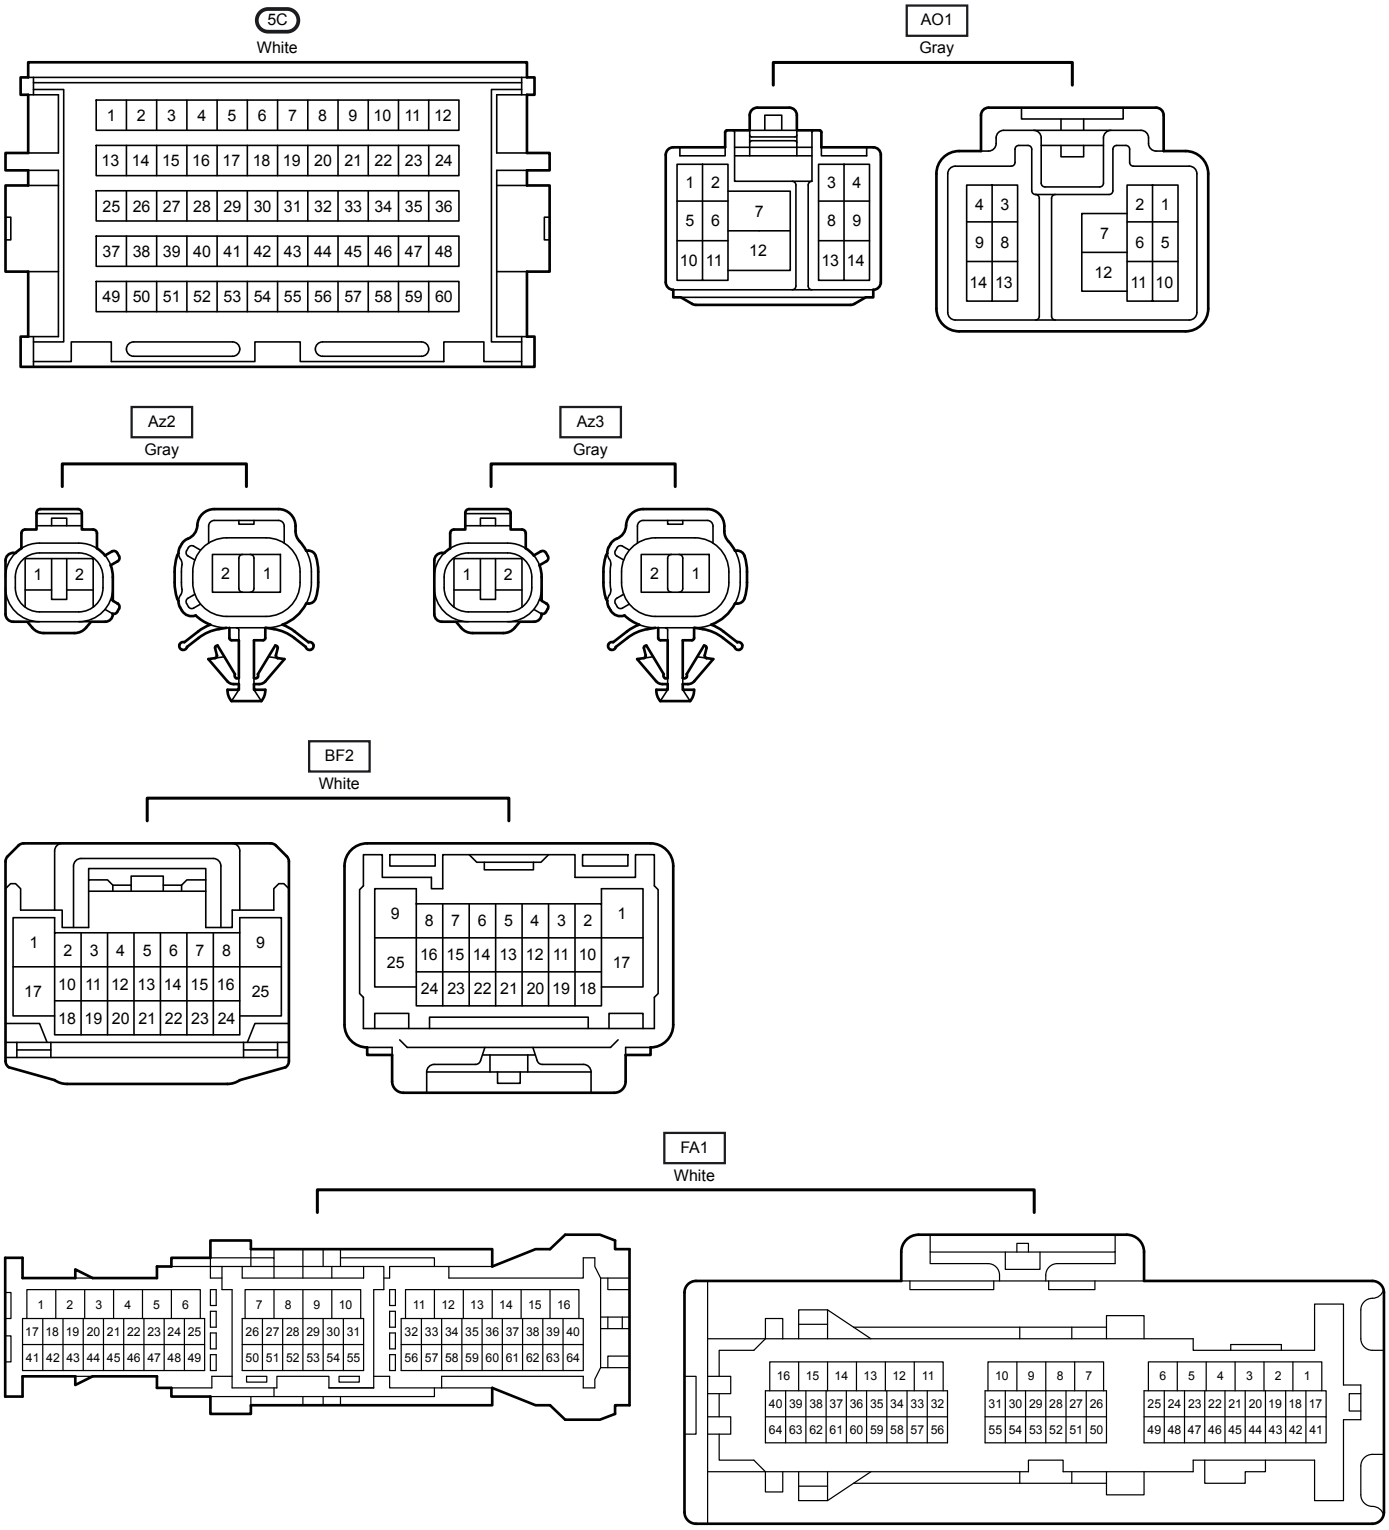
5C
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24
25 26 27 28 29 30 31 32 33 34 35 36
37 38 39 40 41 42 43 44 45 46 47 48
49 50 51 52 53 54 55 56 57 58 59 60
AO1
Gray
Az2
Gray
Az3
Gray
BF2
White
FA1
White


FA2
White

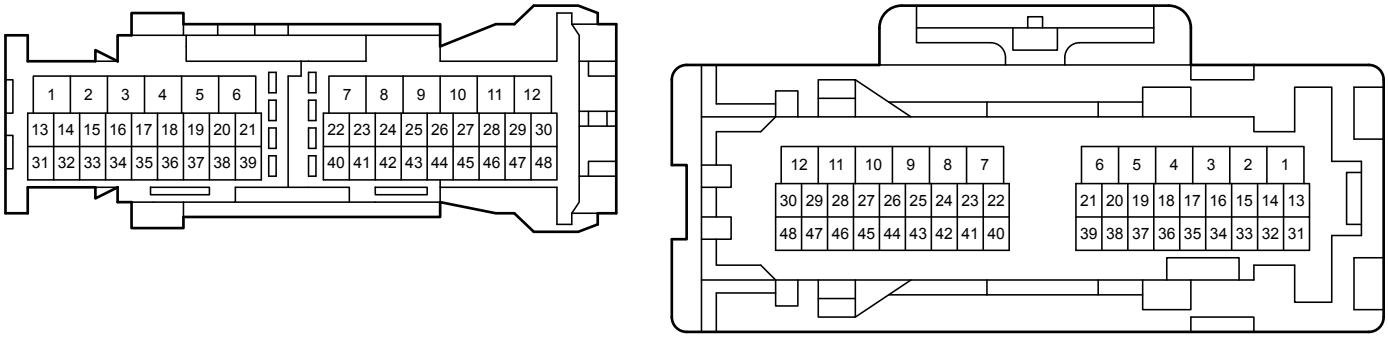


FG1
White

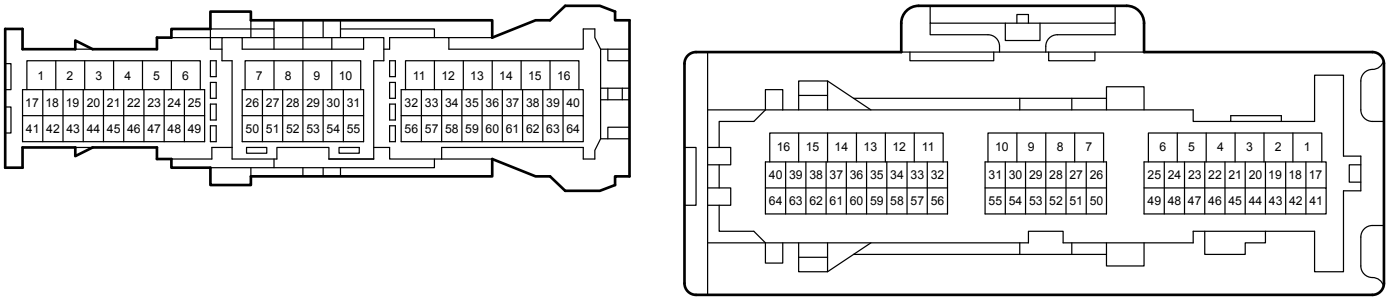


FS1
White

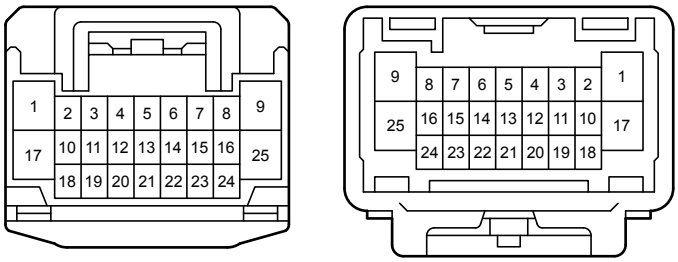


QO1
White

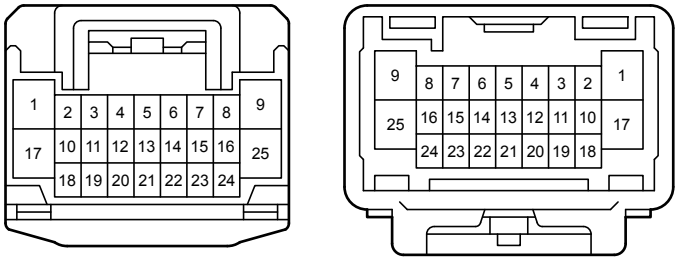

Qz1
White

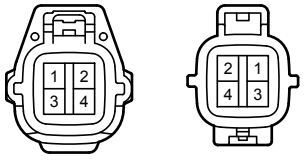

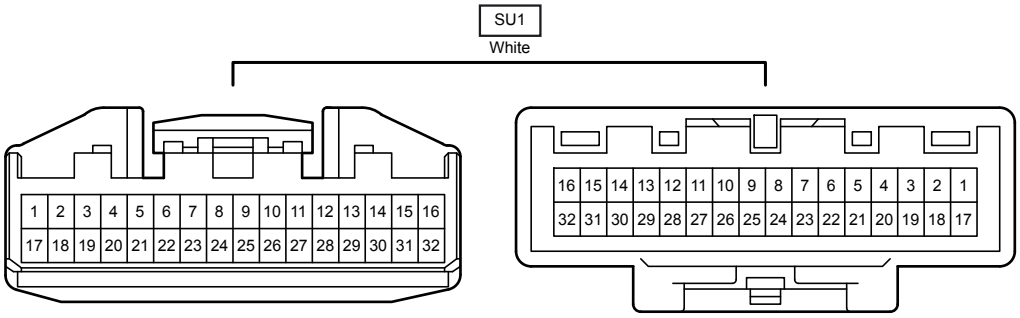
SU1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16
17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32
16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
32 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17