
# RADIATOR SIDE SUPPORT (ASSY)

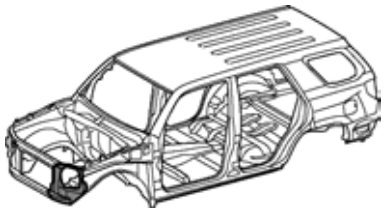

F42915A


With the radiator upper support removed.

Symbol meaning

: Remove Weld Points

F42915B

**REMOVAL**

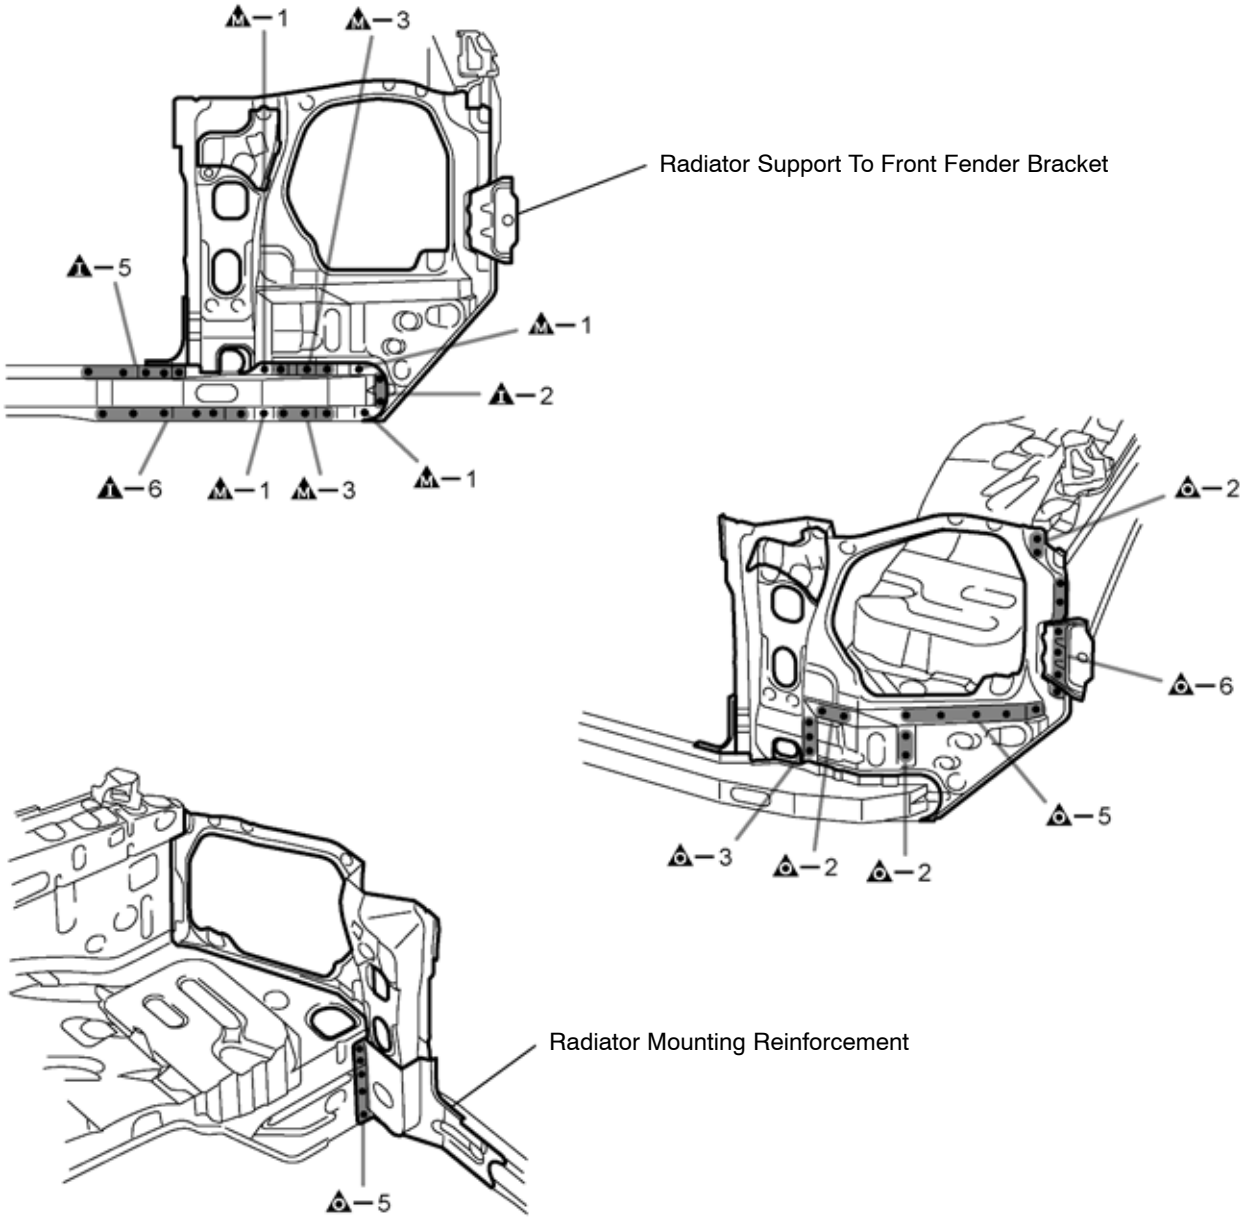


F42915

**REMOVAL POINT**


1 Remove the radiator support to front fender bracket and radiator mounting reinforcement at the same time.

Symbol meaning

O M I : Plug Weld

F42916B

## INSTALLATION

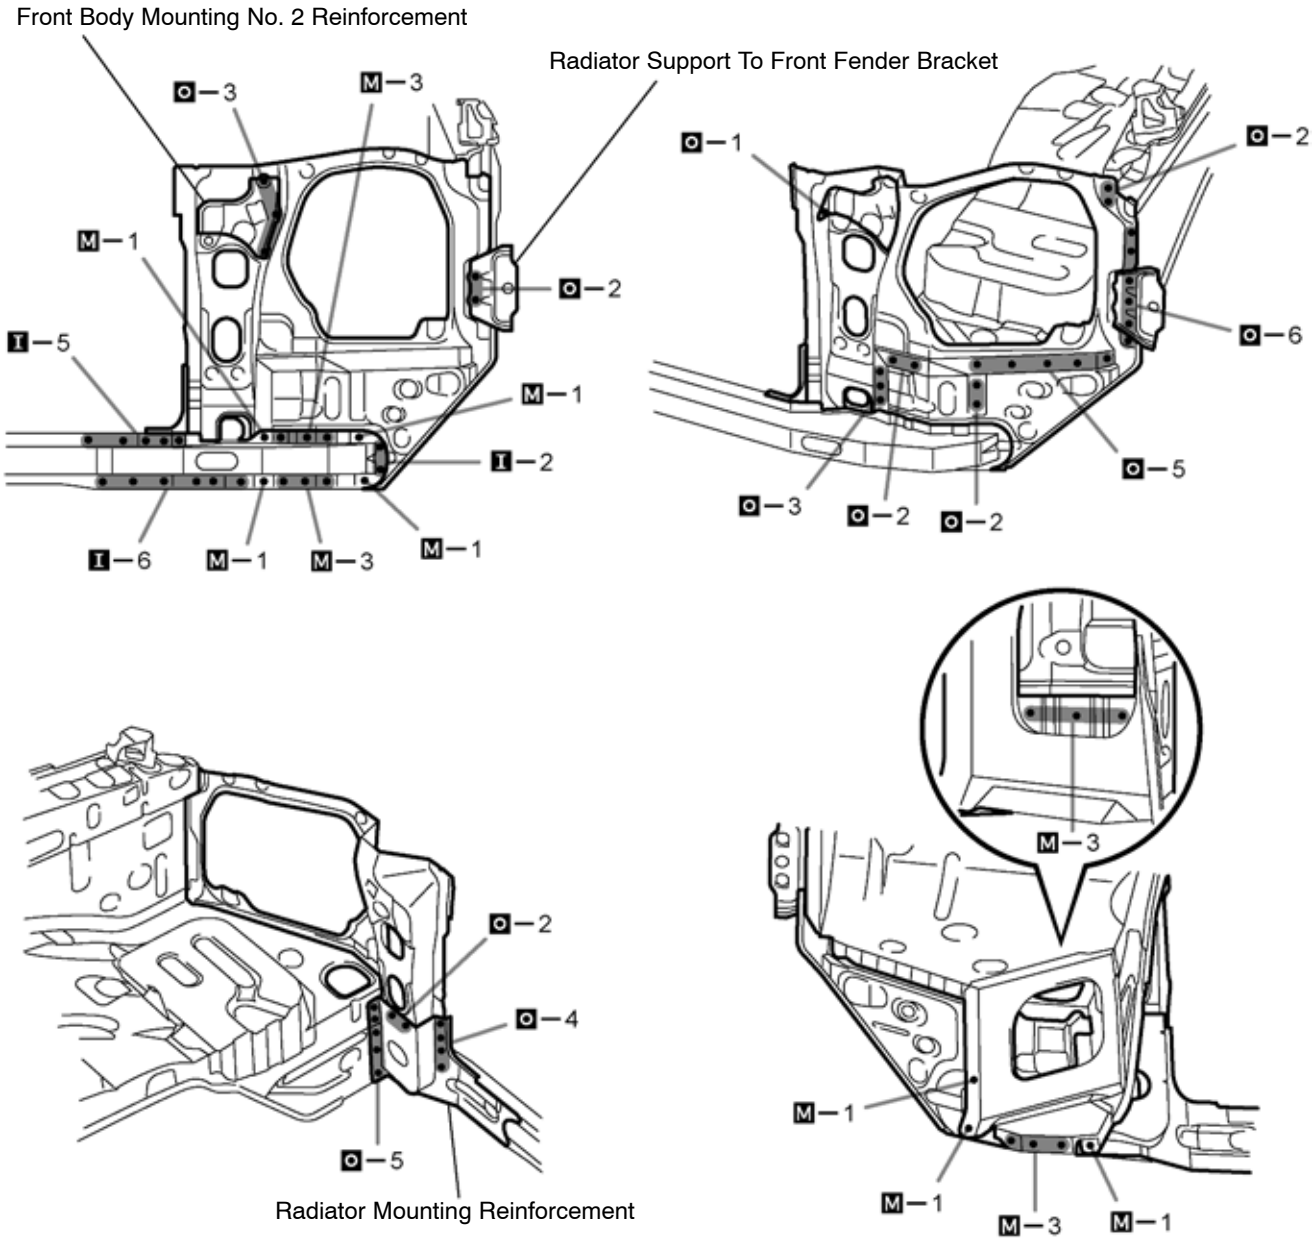


F42916

### INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.