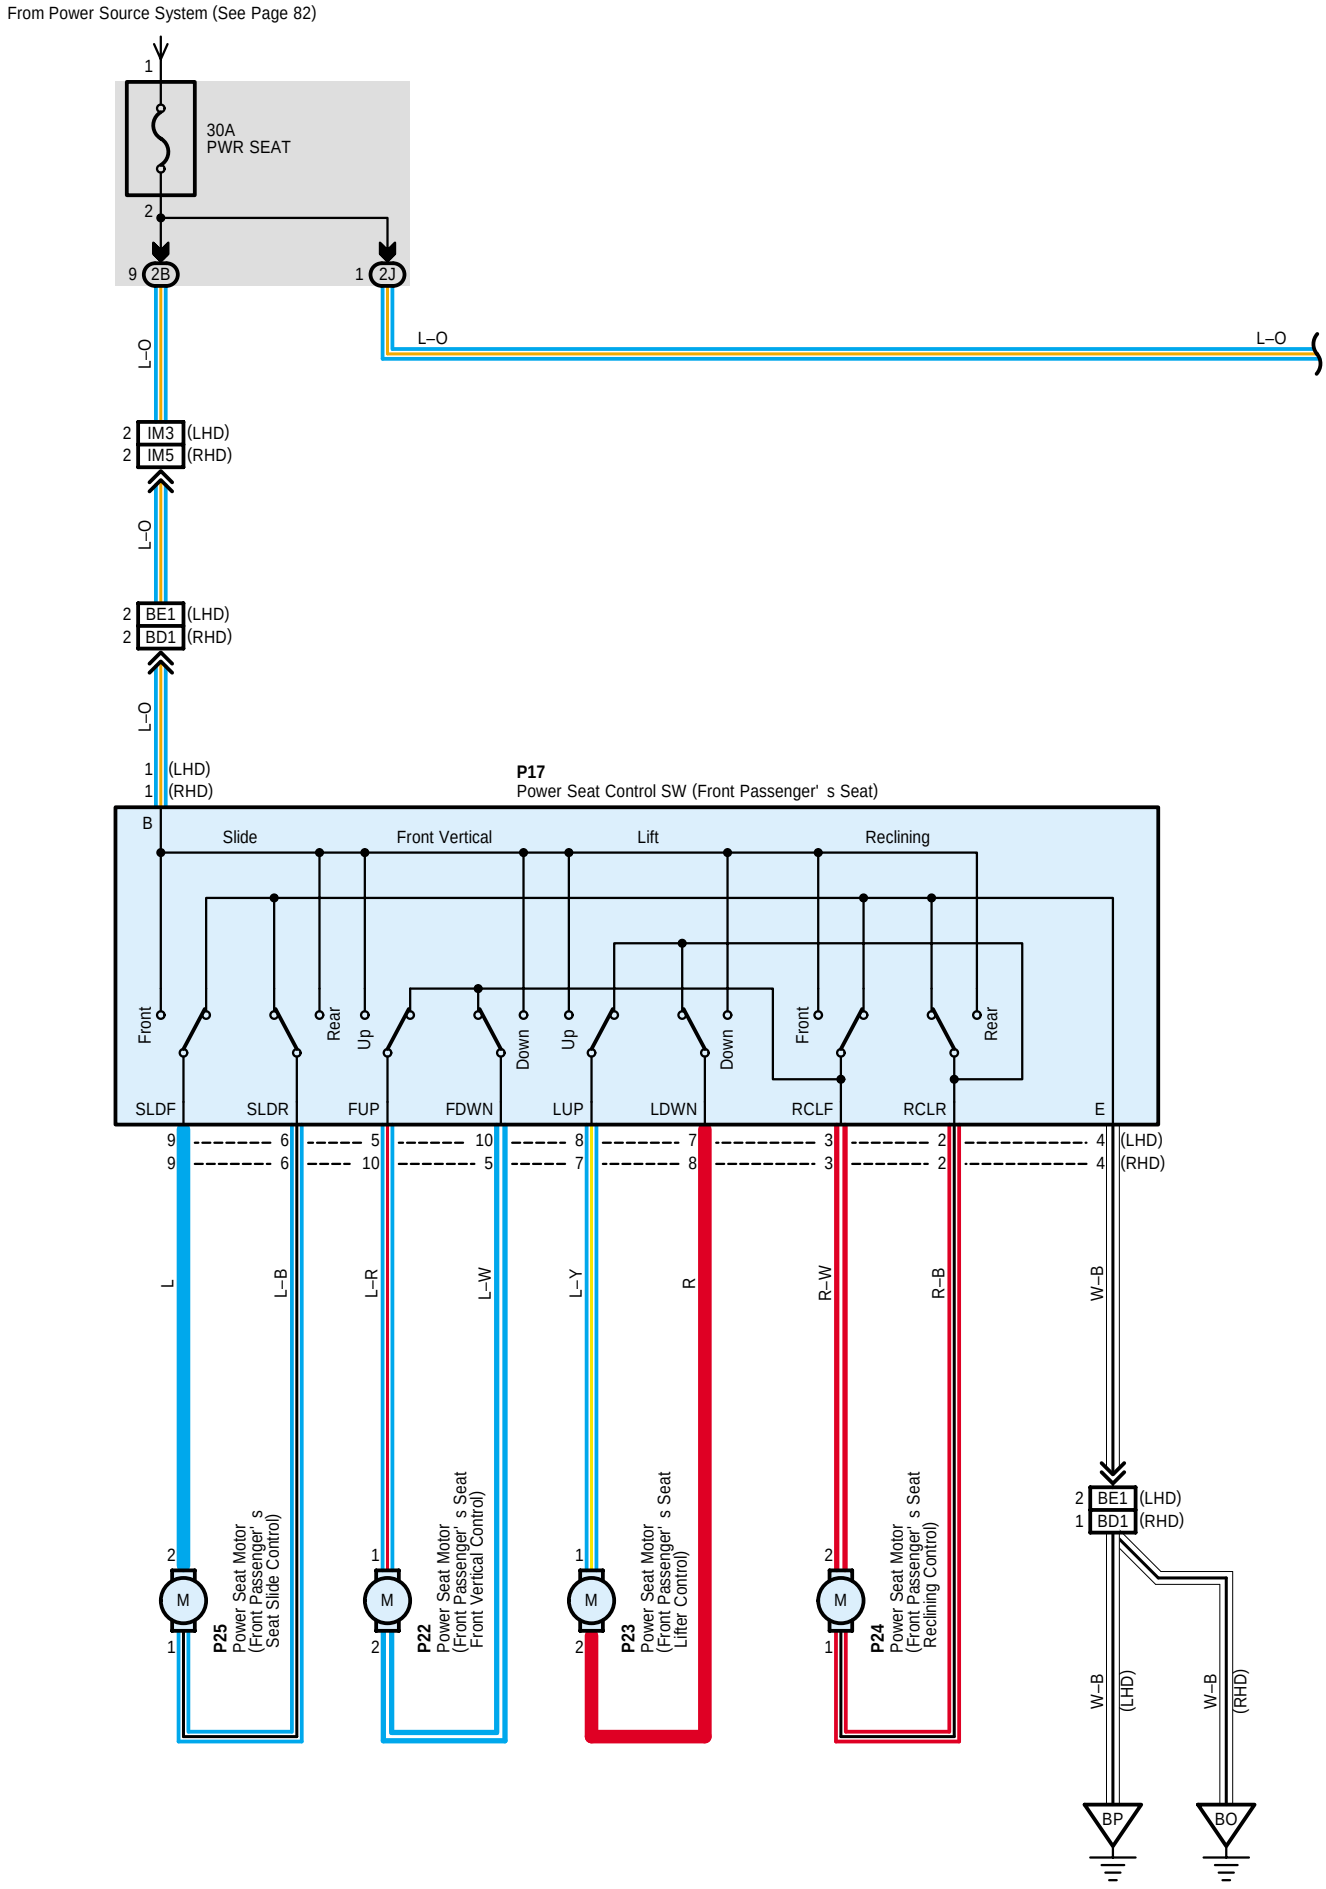
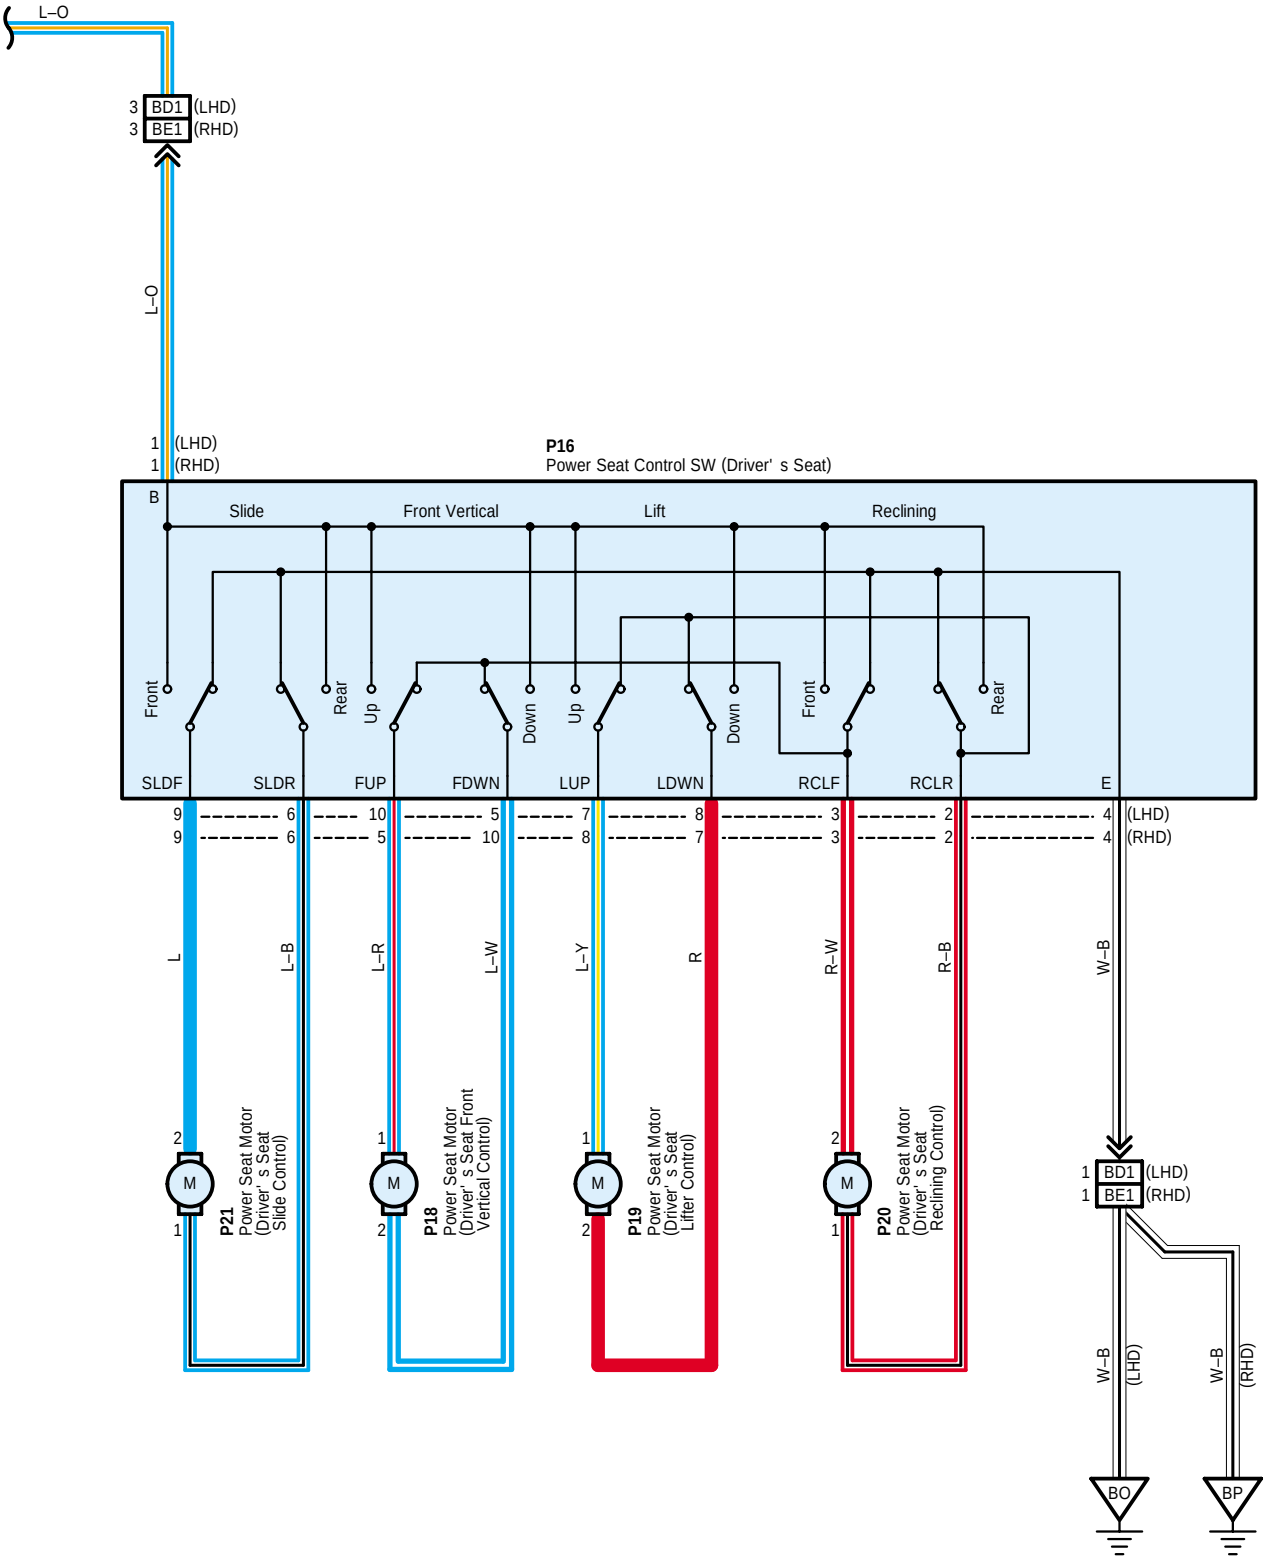

From Power Source System (See Page 82)
30A
PWR SEAT
2B
2J
L–O
IM3 (LHD)
IM5 (RHD)
BE1 (LHD)
BD1 (RHD)
P17
Power Seat Control SW (Front Passenger' s Seat)
Slide
Front Vertical
Lift
Reclining
Front
Rear
Up
Down
SLDF
SLDR
FUP
FDWN
LUP
LDWN
RCLF
RCLR
E
L
L–B
L–R
L–W
L–Y
R
R–W
R–B
W–B
P25
Power Seat Motor
(Front Passenger' s Seat Slide Control)
P22
Power Seat Motor
(Front Passenger' s Seat Front Vertical Control)
P23
Power Seat Motor
(Front Passenger' s Seat Lifter Control)
P24
Power Seat Motor
(Front Passenger' s Seat Reclining Control)
BP
BO


L–O
3 BD1 (LHD)
3 BE1 (RHD)
L–O
1 (LHD)
1 (RHD)
P16
Power Seat Control SW (Driver' s Seat)
B
Slide
Front Vertical
Lift
Reclining
Front
Rear
Up
Down
Up
Down
Front
Rear
SLDF
SLDR
FUP
FDWN
LUP
LDWN
RCLF
RCLR
E
9 6 10 5 7 8 3 2 4 (LHD)
9 6 5 10 8 7 3 2 4 (RHD)
L
L–B
L–R
L–W
L–Y
R
R–W
R–B
W–B
P21
Power Seat Motor (Driver' s Seat Slide Control)
P18
Power Seat Motor (Driver' s Seat Front Vertical Control)
P19
Power Seat Motor (Driver' s Seat Lifter Control)
P20
Power Seat Motor (Driver' s Seat Reclining Control)
1 BD1 (LHD)
1 BE1 (RHD)
W–B
(LHD)
W–B
(RHD)
BO
BP