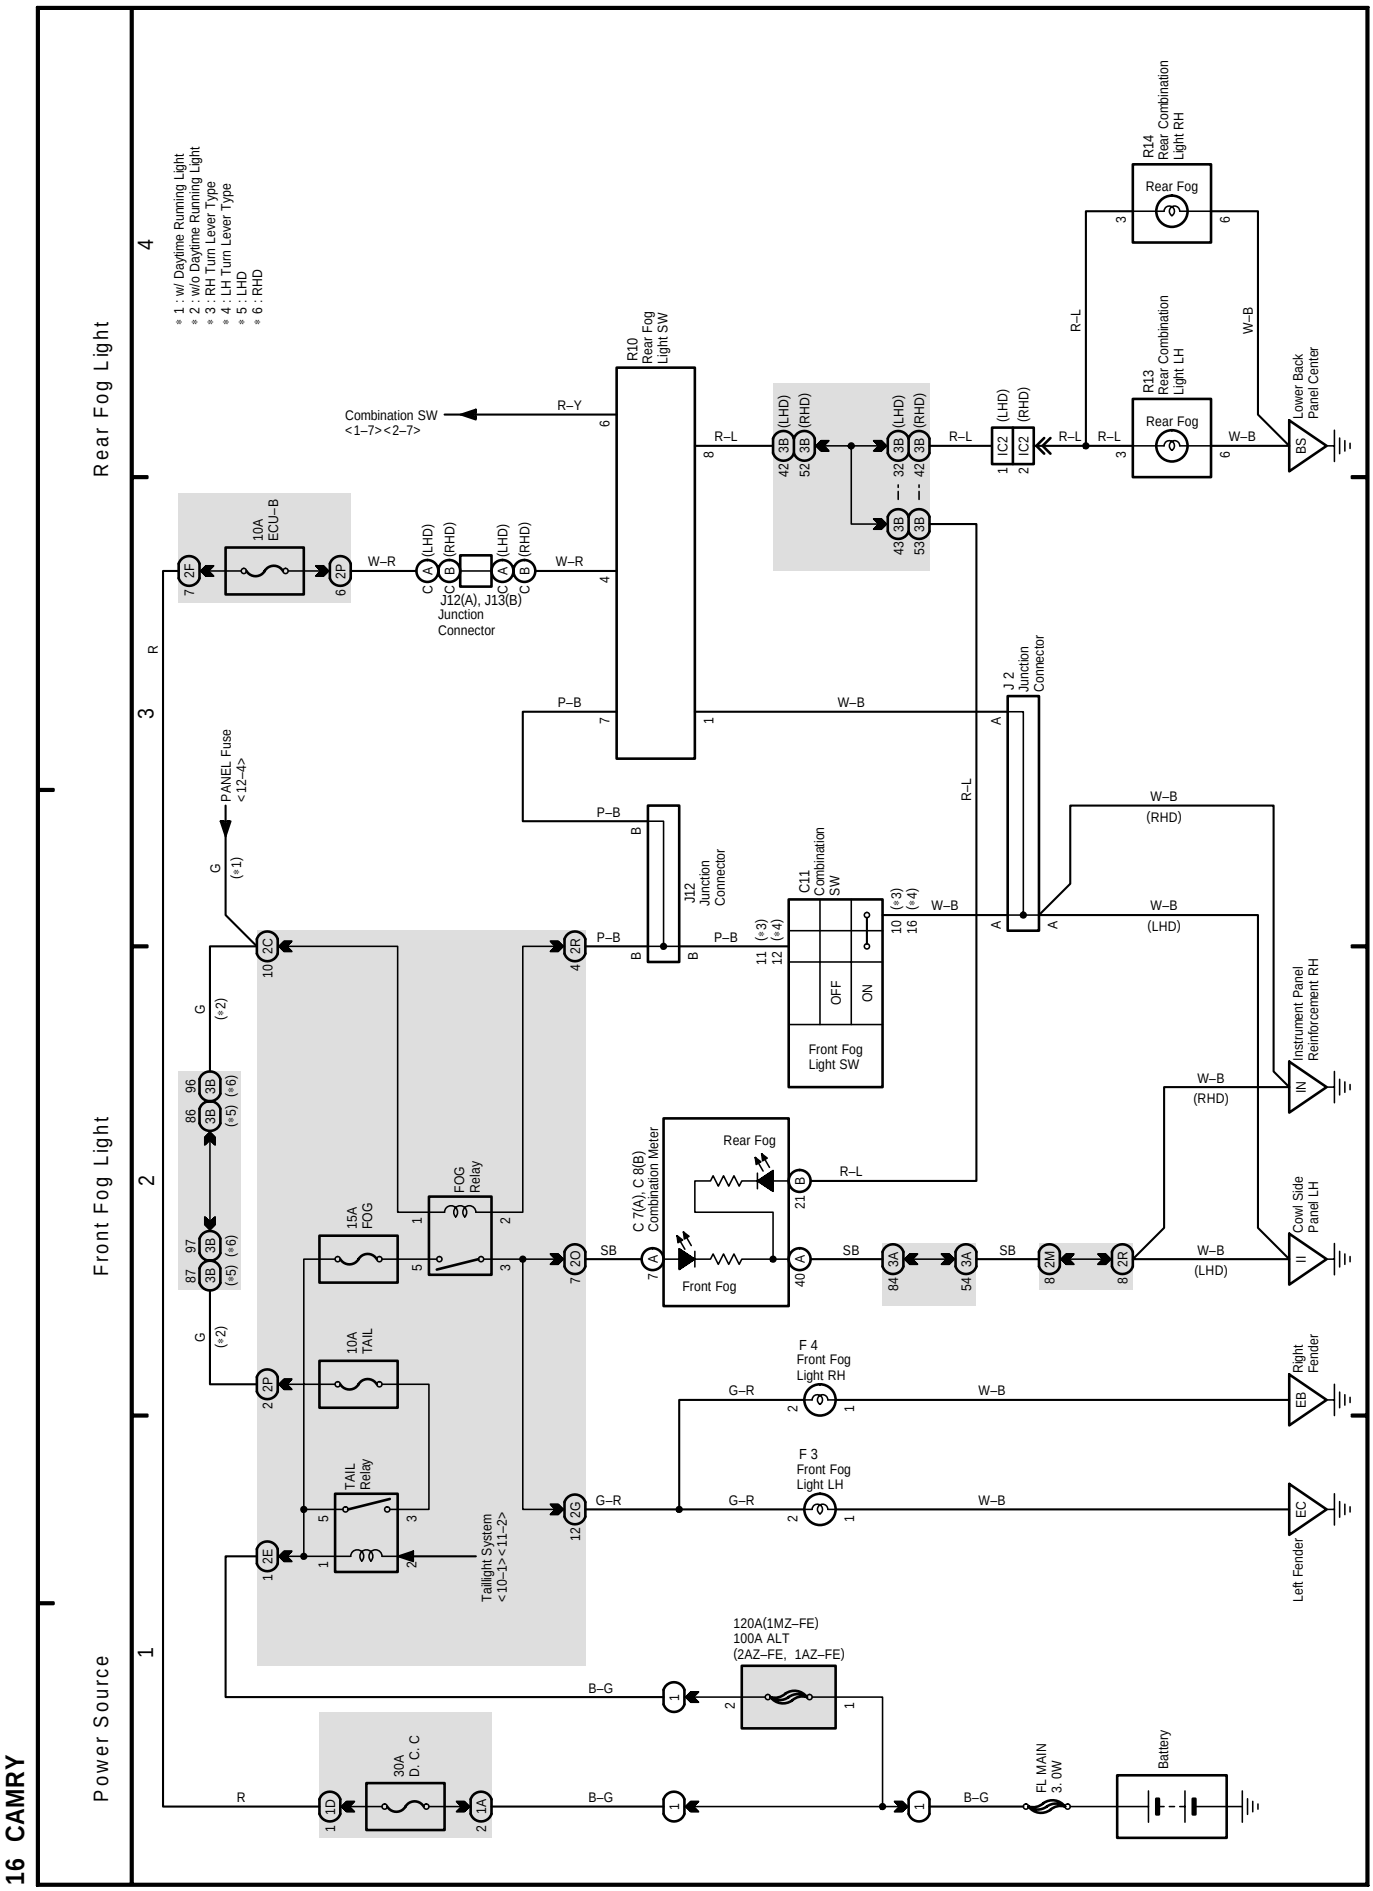

Rear Fog Light
Front Fog Light
Power Source
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : RH Turn Lever Type
* 4 : LH Turn Lever Type
* 5 : LHD
* 6 : RHD
Combination SW
<1–7><2–7>
R10
Rear Fog
Light SW
R14
Rear Combination
Light RH
R13
Rear Combination
Light LH
Rear Fog
Lower Back
Panel Center
10A
ECU–B
J12(A), J13(B)
Junction
Connector
J 2
Junction
Connector
J12
Junction
Connector
PANEL Fuse
<12–4>
C11
Combination
SW
OFF
ON
Front Fog
Light SW
Instrument Panel
Reinforcement RH
Cowl Side
Panel LH
FOG
Relay
15A
FOG
10A
TAIL
TAIL
Relay
C 7(A), C 8(B)
Combination Meter
Rear Fog
Front Fog
F 4
Front Fog
Light RH
F 3
Front Fog
Light LH
Right
Fender
Left Fender
Taillight System
<10–1><11–2>
120A(1MZ–FE)
100A ALT
(2AZ–FE, 1AZ–FE)
30A
D. C. C
FL MAIN
3. 0W
Battery