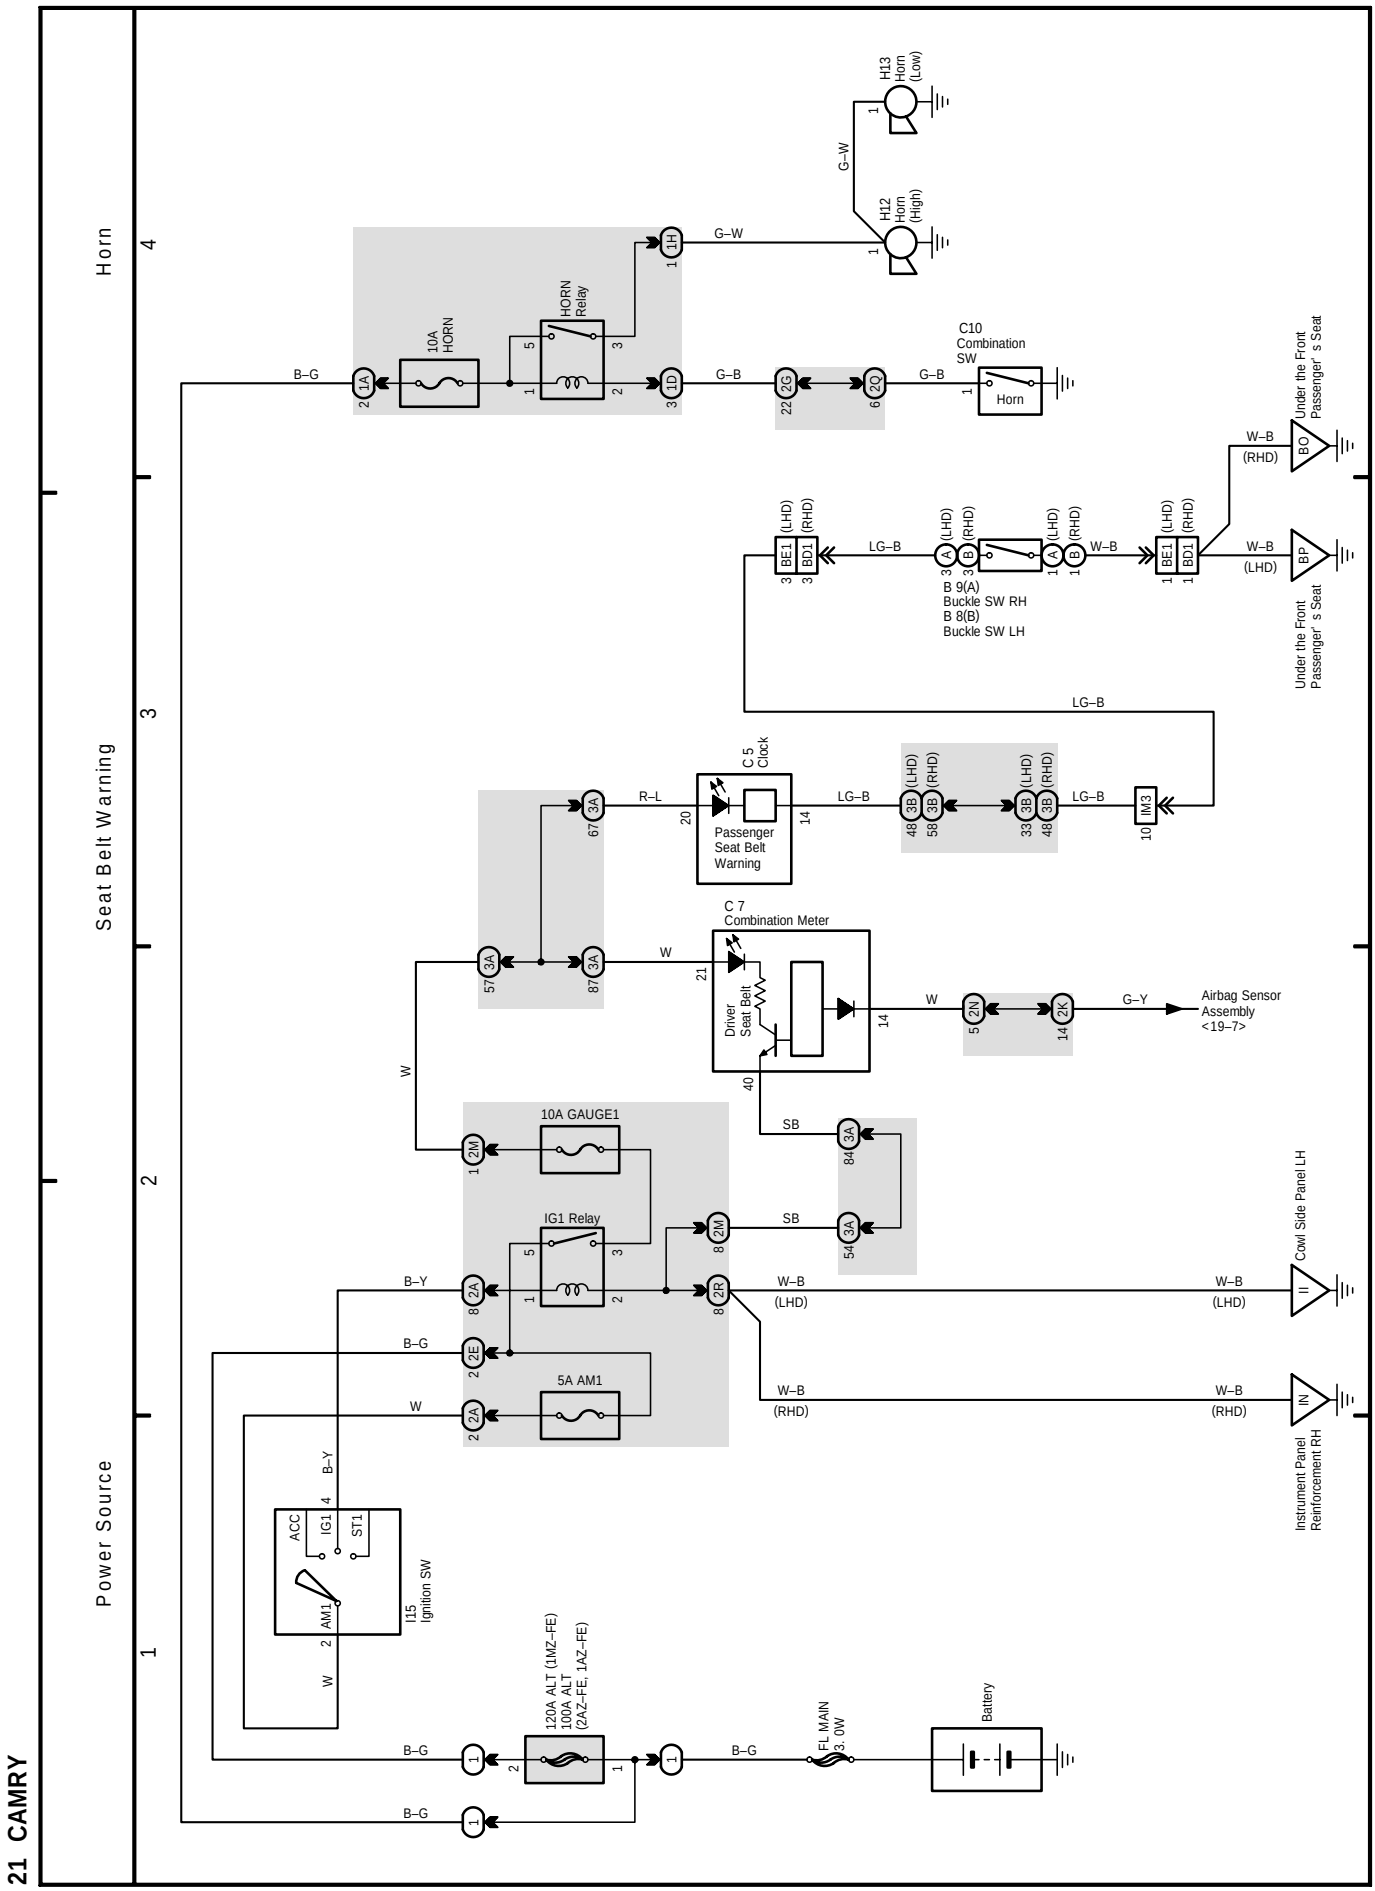

21 CAMRY
Power Source
Seat Belt Warning
Horn
1
2
3
4
H13 Horn (Low)
H12 Horn (High)
G–W
10A HORN
HORN Relay
B–G
G–B
C10 Combination SW
Horn
Under the Front Passenger' s Seat
W–B
(RHD)
(LHD)
BO
BP
LG–B
B 9(A) Buckle SW RH
B 8(B) Buckle SW LH
C 5 Clock
Passenger Seat Belt Warning
R–L
C 7 Combination Meter
Driver Seat Belt
W
G–Y
Airbag Sensor Assembly <19–7>
10A GAUGE1
IG1 Relay
5A AM1
SB
B–Y
Cowl Side Panel LH
Instrument Panel Reinforcement RH
ACC
IG1
ST1
AM1
I15 Ignition SW
120A ALT (1MZ–FE)
100A ALT (2AZ–FE, 1AZ–FE)
FL MAIN 3. 0W
Battery