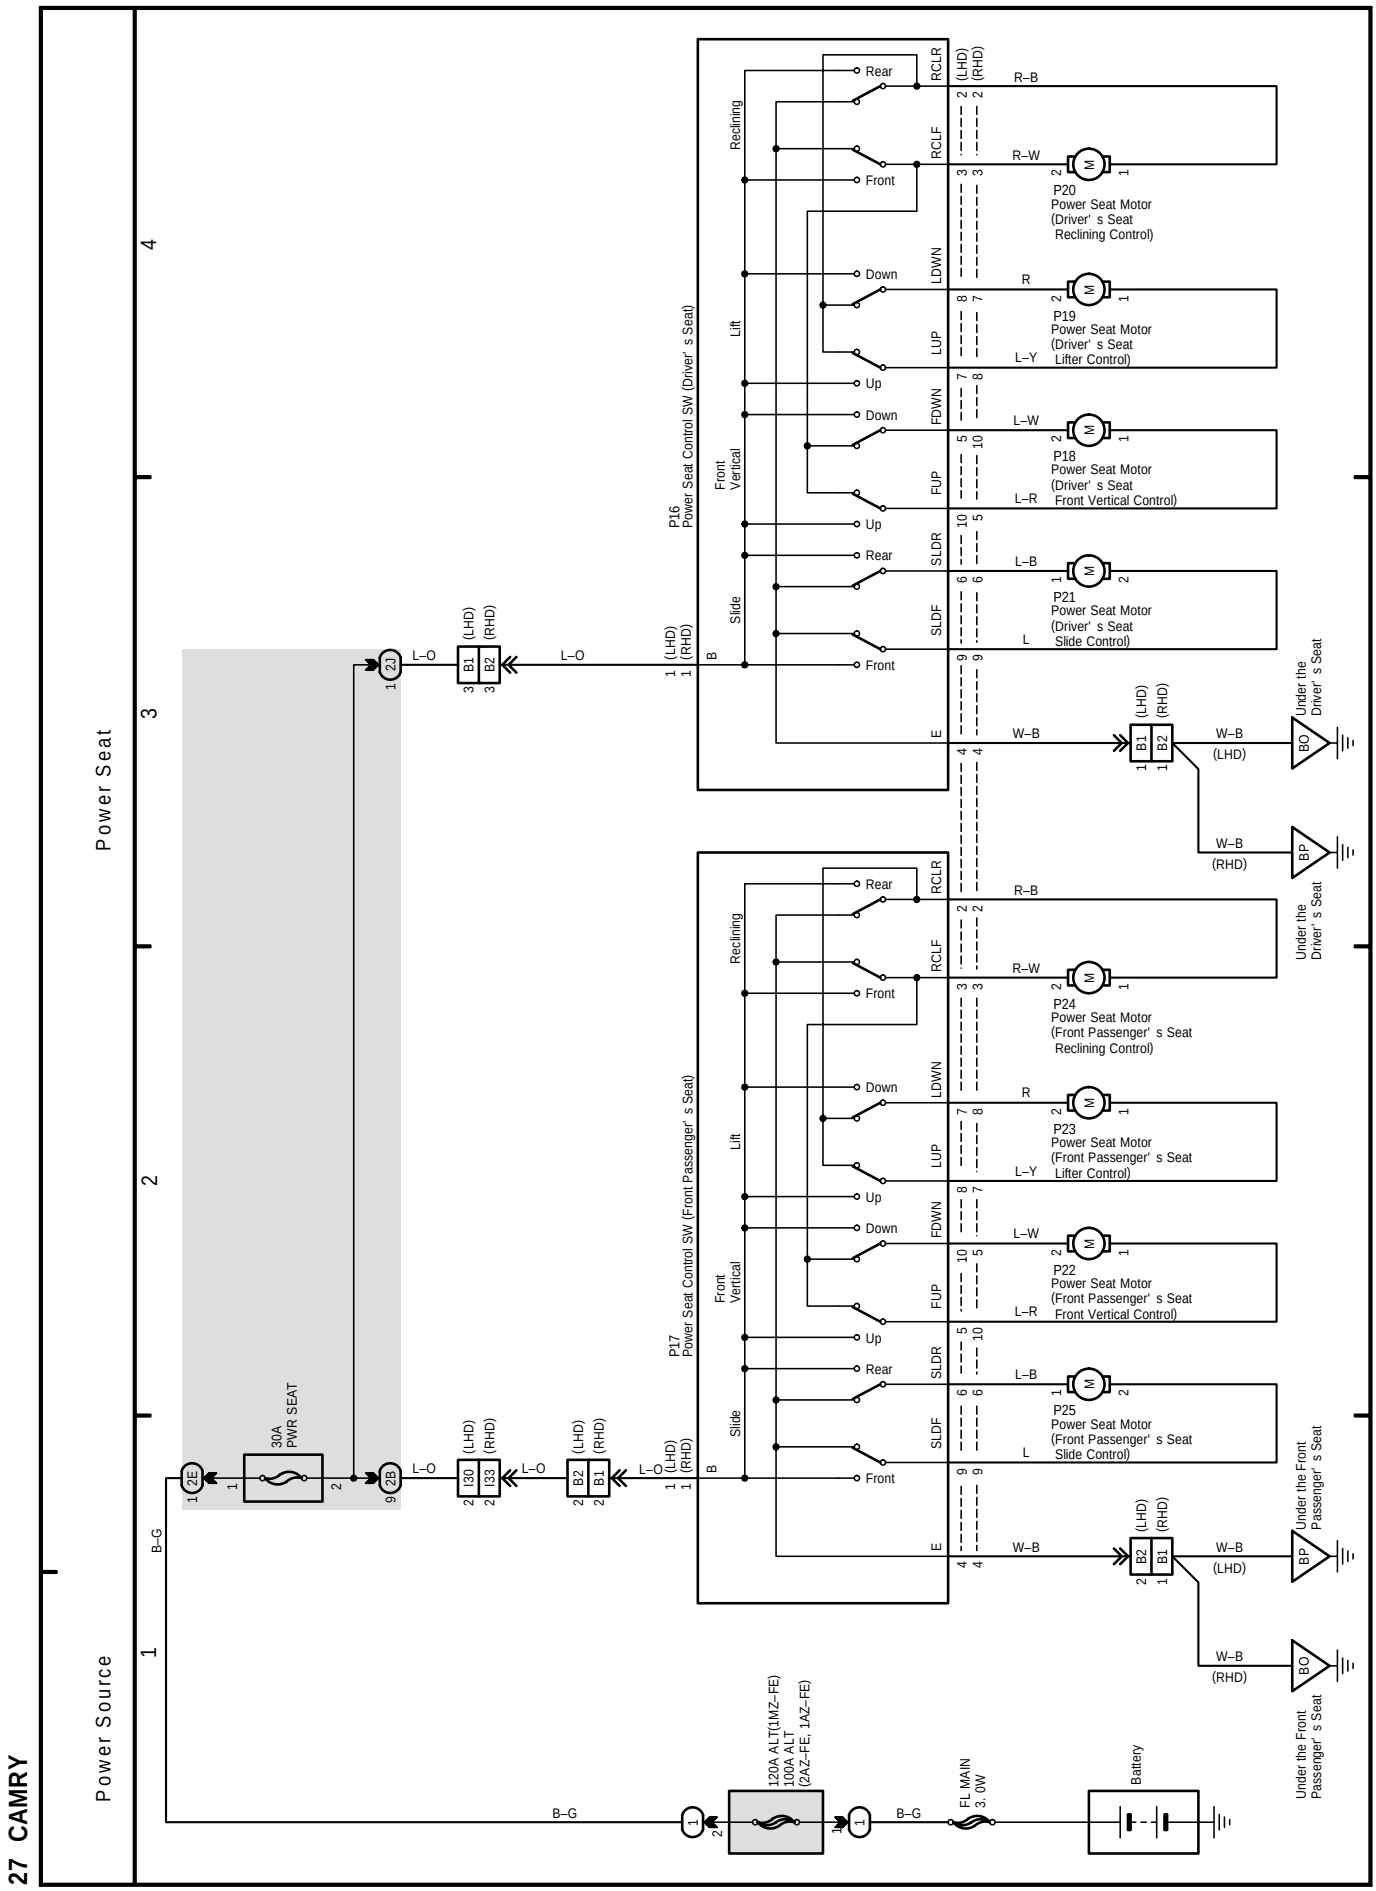

Power Source
Power Seat
1
2
3
4
27 CAMRY
30A PWR SEAT
2E
2B
2J
L–O
B–G
W–B
R–B
R–W
L–Y
L–W
L–R
L–B
(LHD)
(RHD)
B1
B2
I30
I33
P16 Power Seat Control SW (Driver' s Seat)
P17 Power Seat Control SW (Front Passenger' s Seat)
Reclining
Lift
Front Vertical
Slide
Rear
Front
Up
Down
RCLR
RCLF
LDWN
LUP
FDWN
FUP
SLDR
SLDF
B
E
P20 Power Seat Motor (Driver' s Seat Reclining Control)
P19 Power Seat Motor (Driver' s Seat Lifter Control)
P18 Power Seat Motor (Driver' s Seat Front Vertical Control)
P21 Power Seat Motor (Driver' s Seat Slide Control)
P24 Power Seat Motor (Front Passenger' s Seat Reclining Control)
P23 Power Seat Motor (Front Passenger' s Seat Lifter Control)
P22 Power Seat Motor (Front Passenger' s Seat Front Vertical Control)
P25 Power Seat Motor (Front Passenger' s Seat Slide Control)
Under the Driver' s Seat
Under the Front Passenger' s Seat
BO
BP
120A ALT(1MZ–FE)
100A ALT
(2AZ–FE, 1AZ–FE)
FL MAIN
3. 0W
Battery