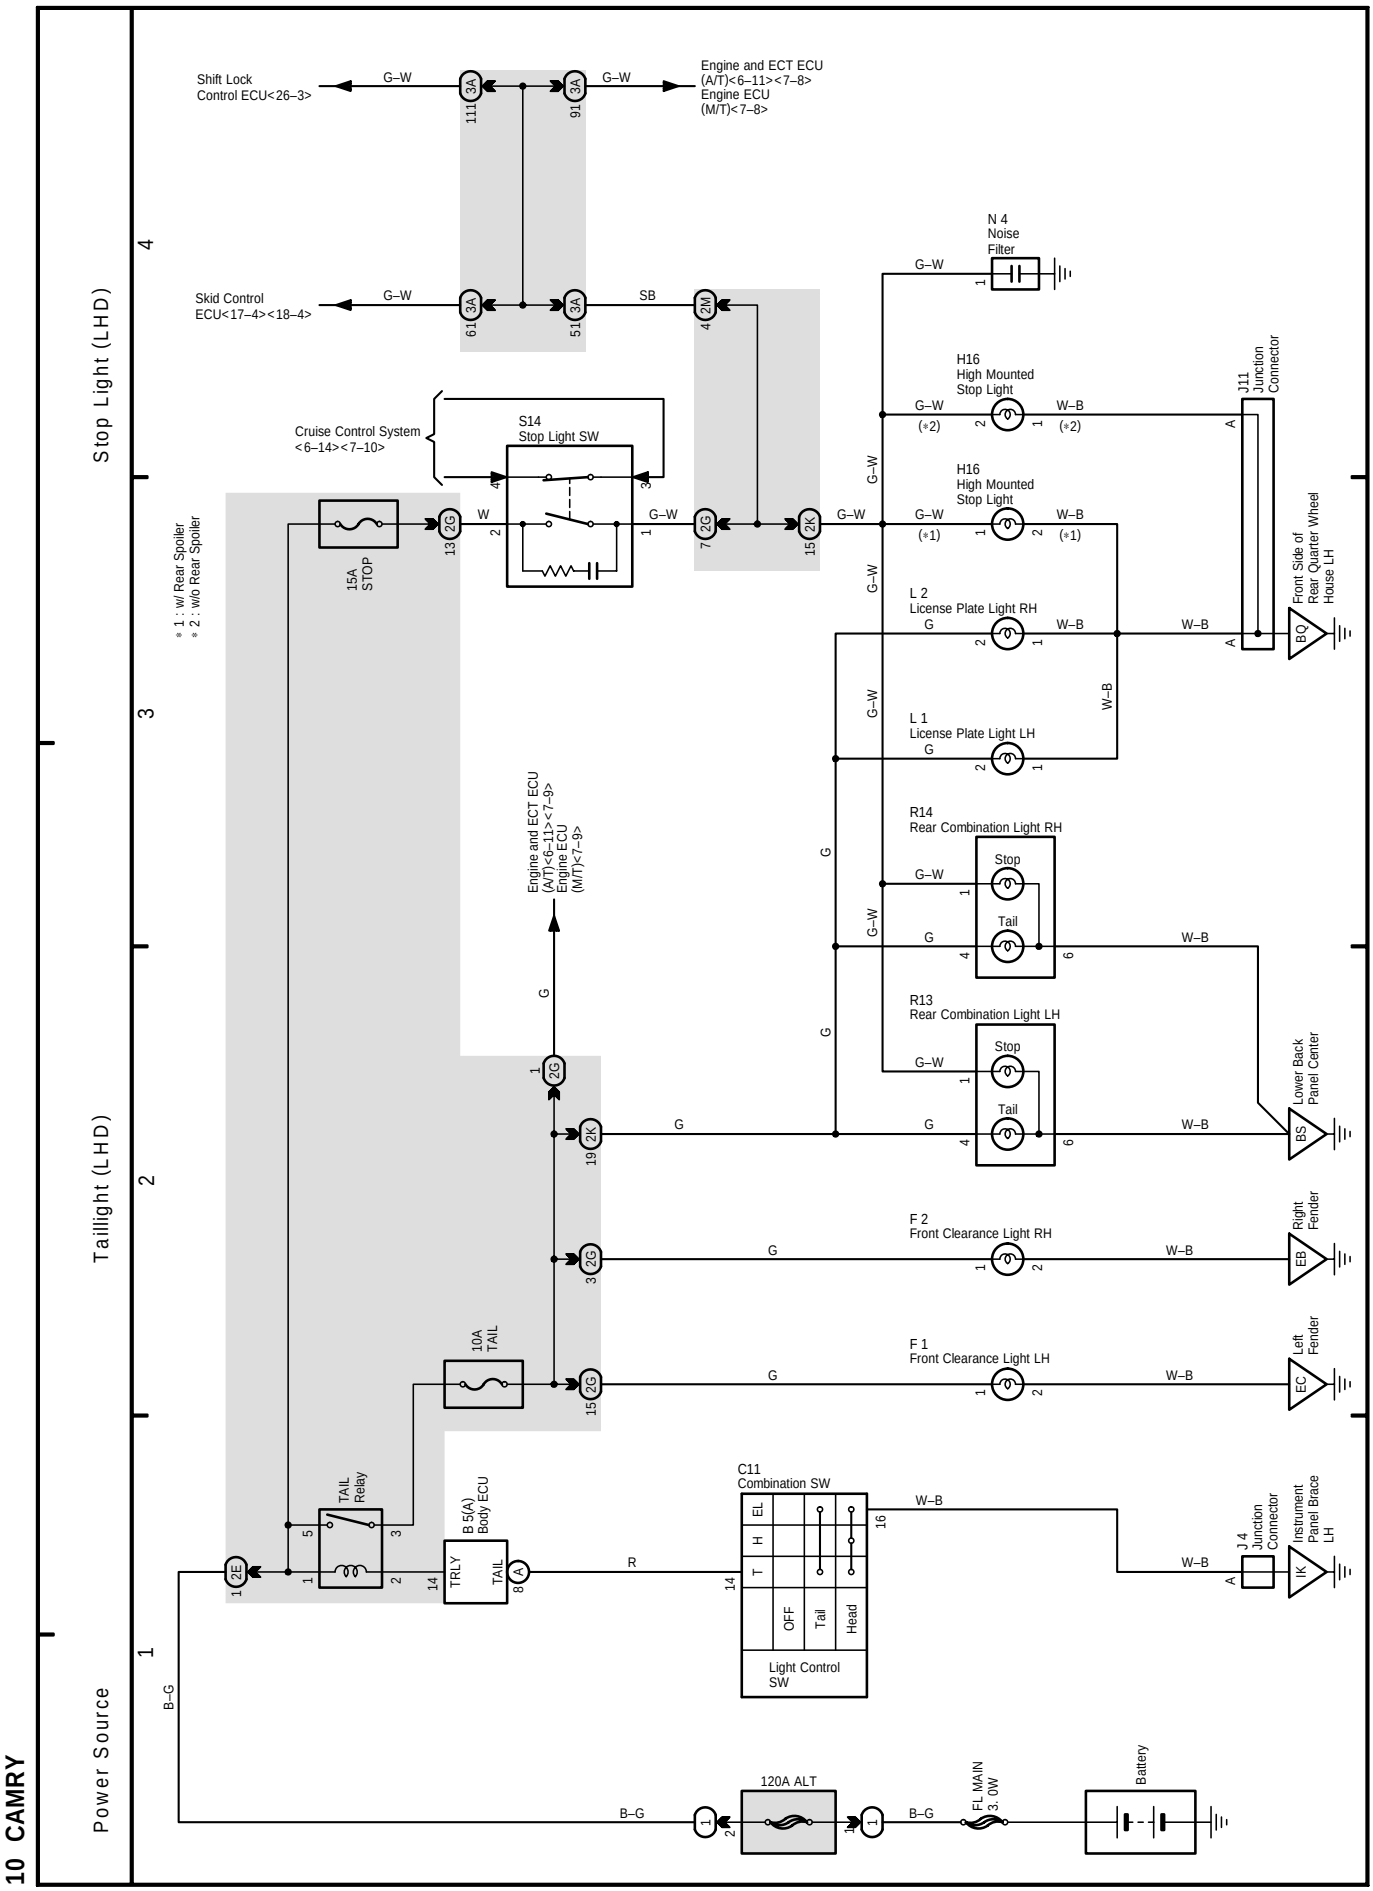

Stop Light (LHD)
Taillight (LHD)
Power Source
Shift Lock Control ECU<26–3>
Skid Control ECU<17–4><18–4>
Engine and ECT ECU (A/T)<6–11><7–8> Engine ECU (M/T)<7–8>
Cruise Control System <6–14><7–10>
S14 Stop Light SW
15A STOP
* 1 : w/ Rear Spoiler
* 2 : w/o Rear Spoiler
N 4 Noise Filter
H16 High Mounted Stop Light
J11 Junction Connector
Front Side of Rear Quarter Wheel House LH
L 2 License Plate Light RH
L 1 License Plate Light LH
Engine and ECT ECU (A/T)<6–11><7–9> Engine ECU (M/T)<7–9>
R14 Rear Combination Light RH
R13 Rear Combination Light LH
Stop
Tail
Lower Back Panel Center
F 2 Front Clearance Light RH
Right Fender
10A TAIL
F 1 Front Clearance Light LH
Left Fender
TAIL Relay
B 5(A) Body ECU
TRLY
C11 Combination SW
EL
H
T
OFF
Tail
Head
Light Control SW
J 4 Junction Connector
Instrument Panel Brace LH
120A ALT
FL MAIN 3.0W
Battery
B–G
G–W
W–B
SB
R
G
W

10 CAMRY