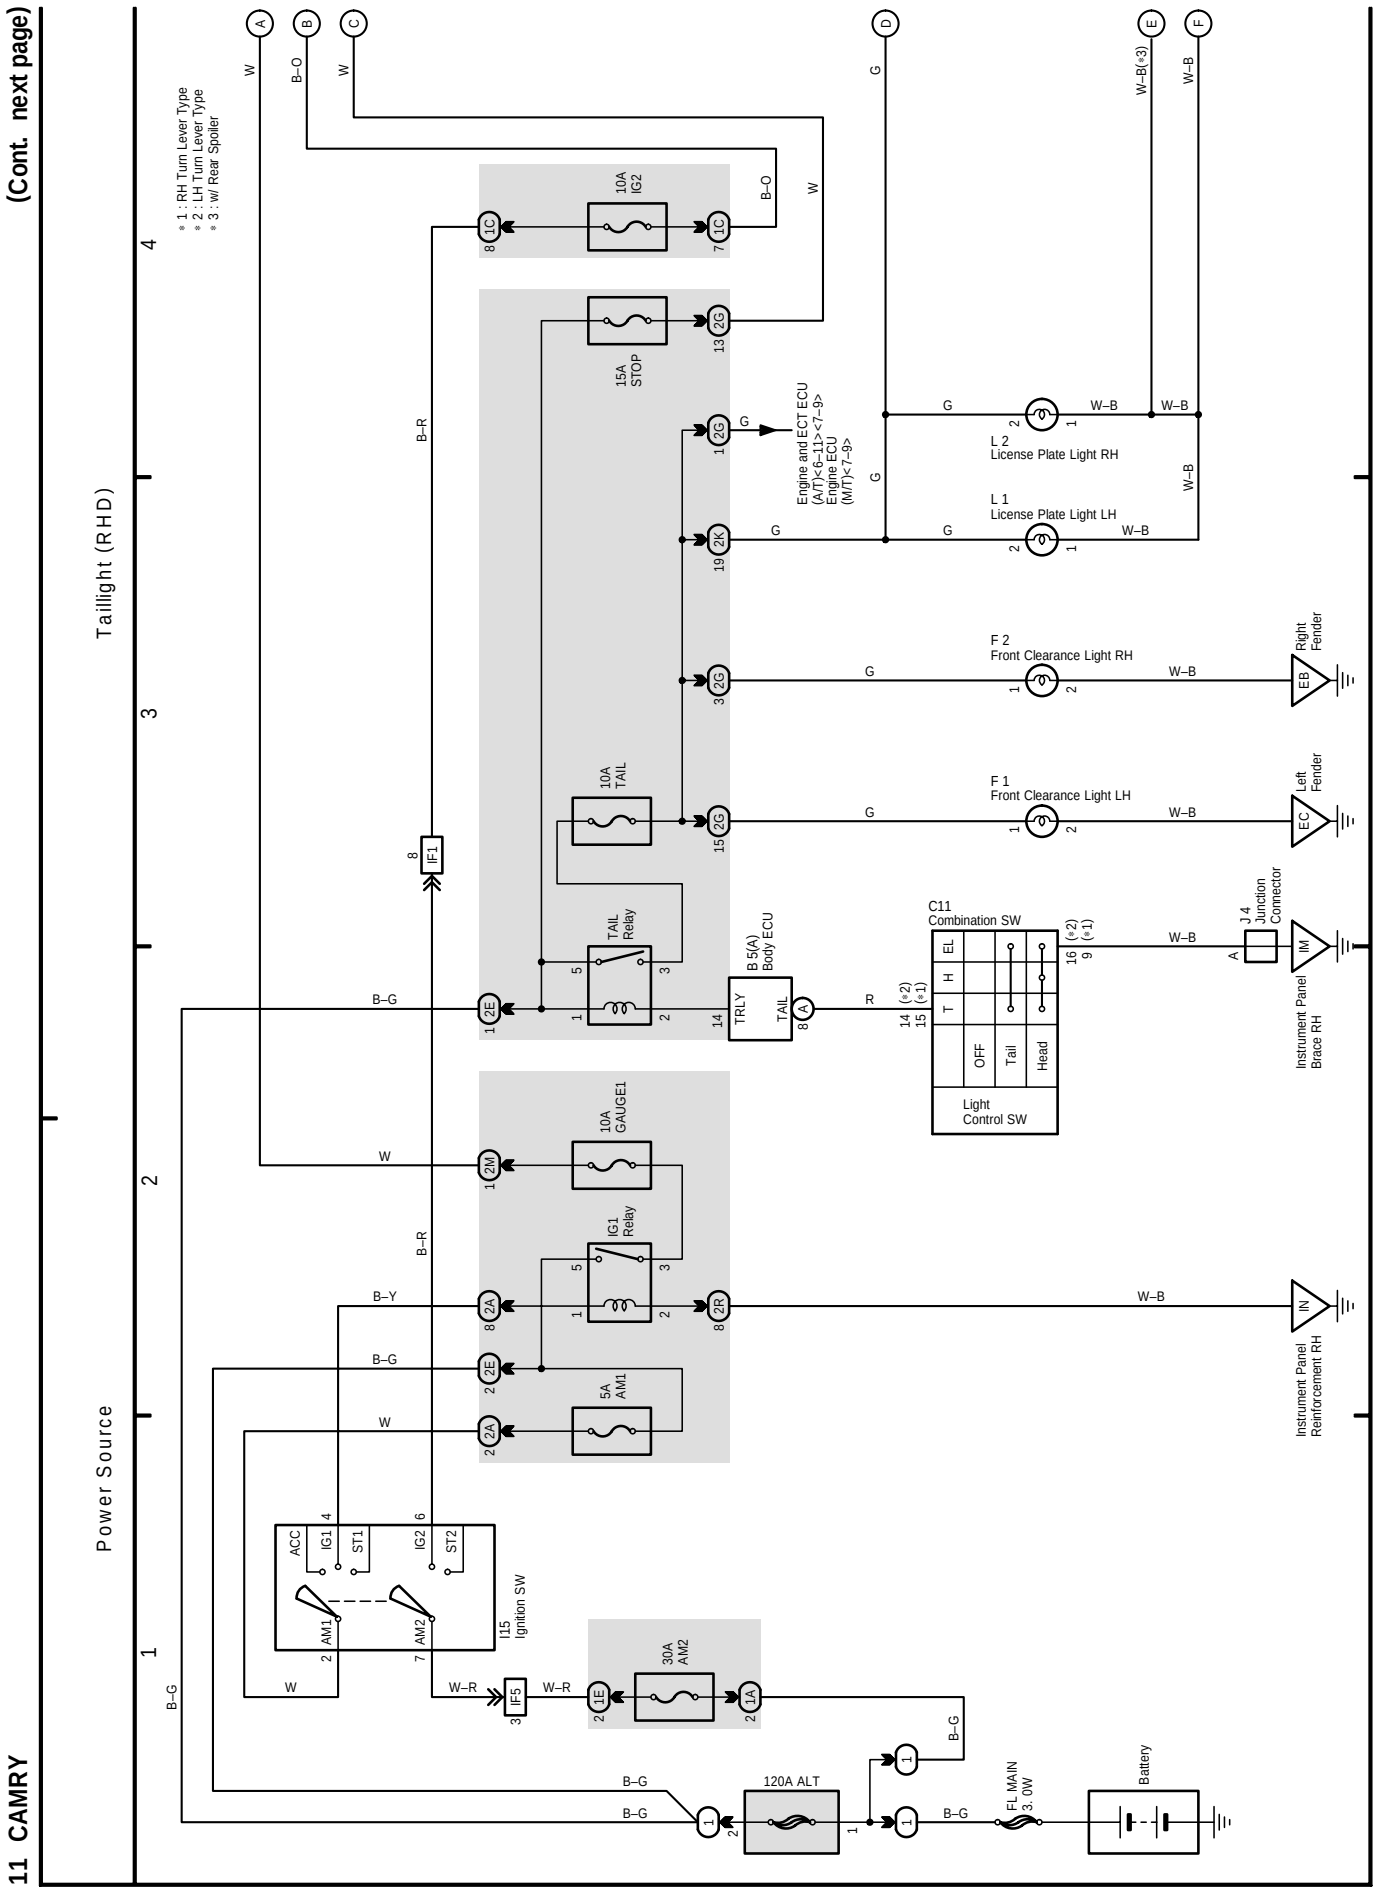
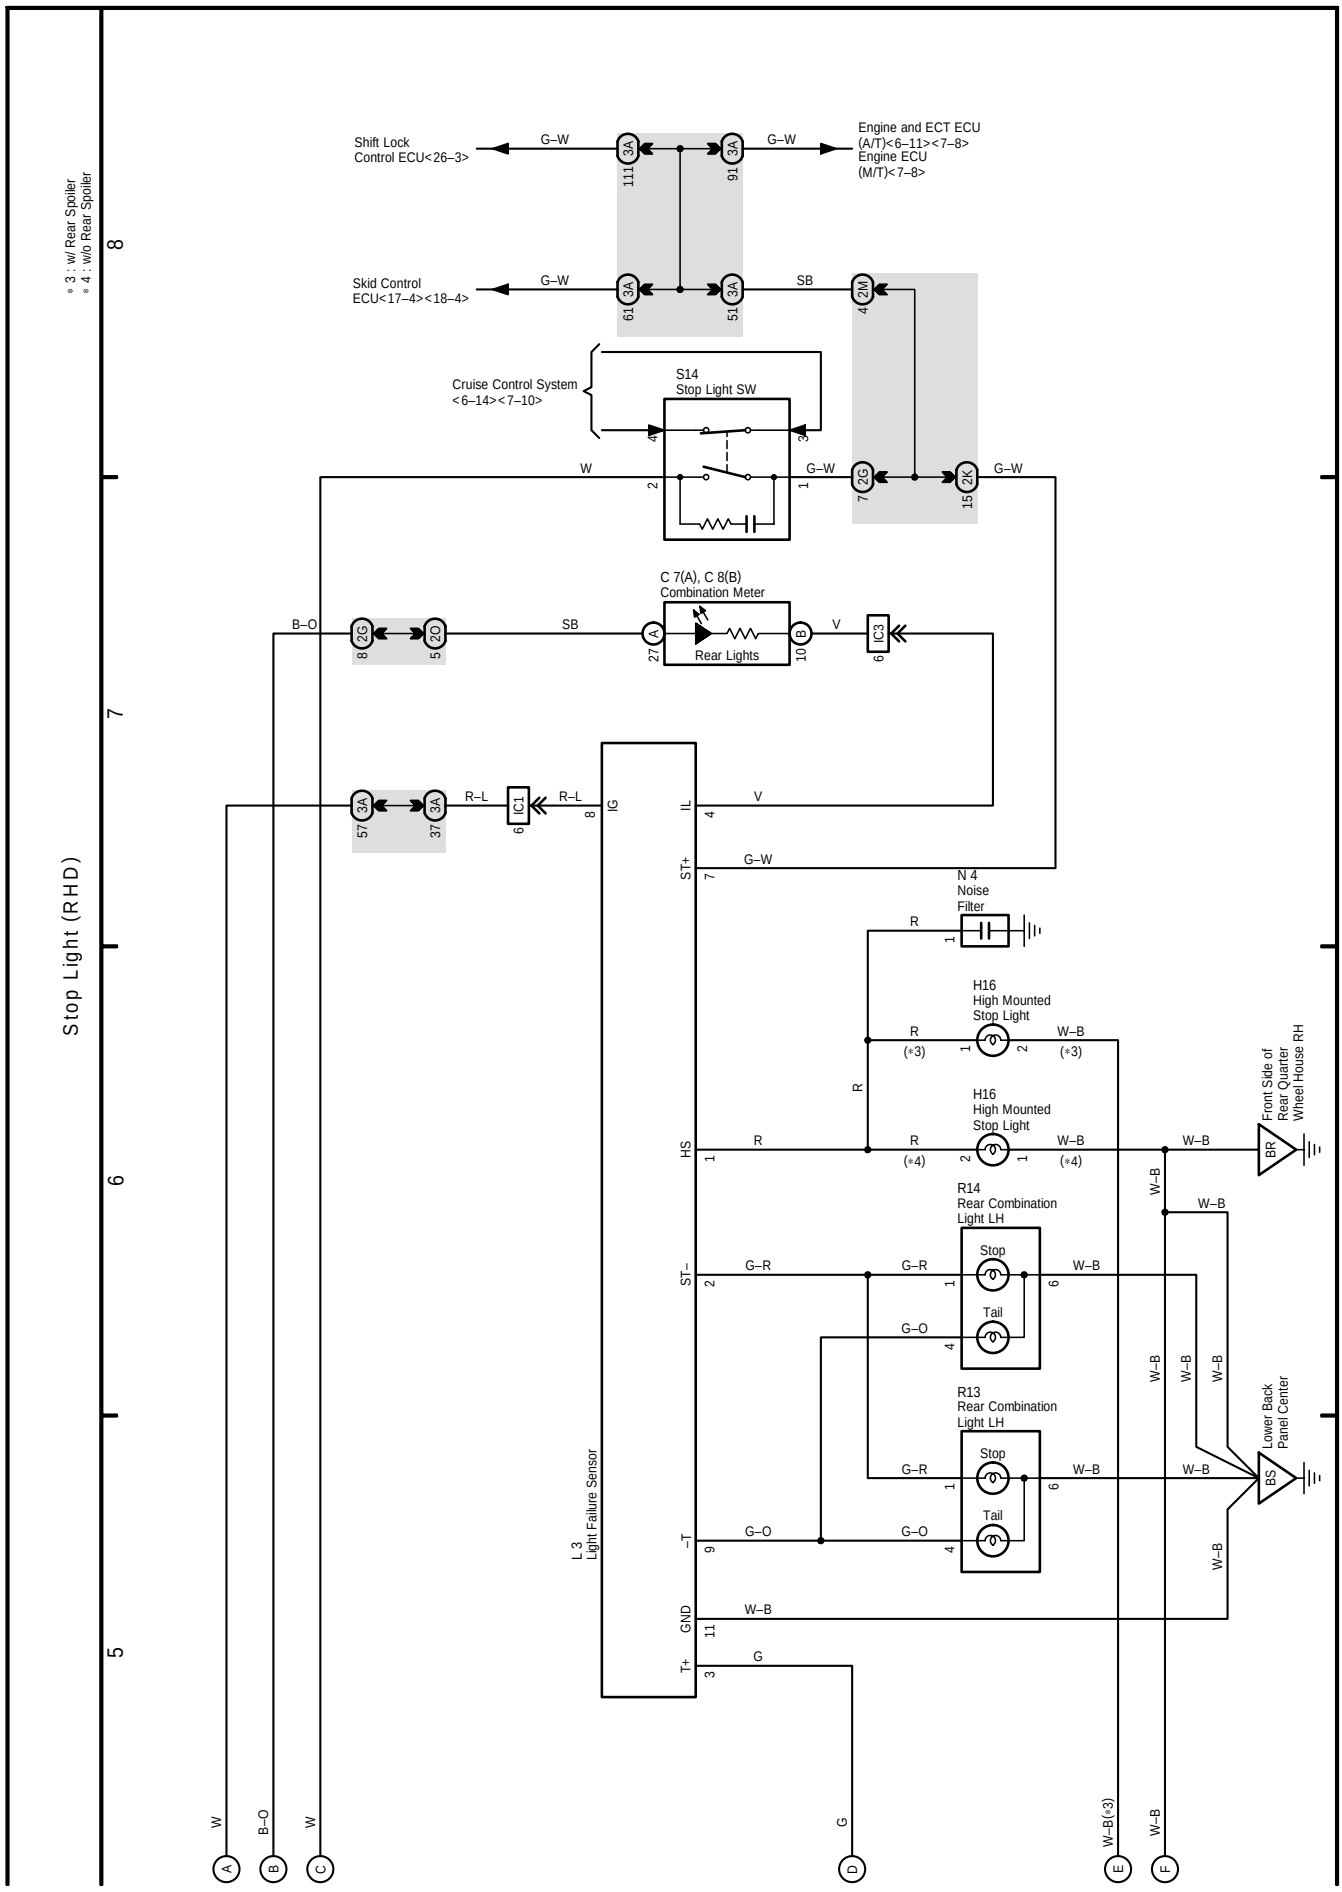

(Cont. next page)
11 CAMRY
Power Source
Taillight (RHD)
* 1 : RH Turn Lever Type
* 2 : LH Turn Lever Type
* 3 : w/ Rear Spoiler
10A IG2
15A STOP
10A TAIL
10A GAUGE1
5A AM1
30A AM2
IG1 Relay
TAIL Relay
IF1
IF5
I15 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
B 5(A) Body ECU
TRLY
TAIL
Engine and ECT ECU (A/T)<6–11><7–9> Engine ECU (M/T)<7–9>
L 2 License Plate Light RH
L 1 License Plate Light LH
F 2 Front Clearance Light RH
F 1 Front Clearance Light LH
Right Fender
Left Fender
C11 Combination SW
Light Control SW
OFF
Tail
Head
J 4 Junction Connector
Instrument Panel Brace RH
Instrument Panel Reinforcement RH
120A ALT
FL MAIN 3. 0W
Battery


11 CAMRY (Cont' d)
Stop Light (RHD)
* 3 : w/ Rear Spoiler
* 4 : w/o Rear Spoiler
Shift Lock Control ECU<26–3>
Skid Control ECU<17–4><18–4>
Engine and ECT ECU (A/T)<6–11><7–8>
Engine ECU (M/T)<7–8>
Cruise Control System <6–14><7–10>
S14 Stop Light SW
C 7(A), C 8(B) Combination Meter
Rear Lights
N 4 Noise Filter
H16 High Mounted Stop Light
R14 Rear Combination Light LH
R13 Rear Combination Light LH
Stop
Tail
L 3 Light Failure Sensor
Front Side of Rear Quarter Wheel House RH
Lower Back Panel Center
IG
IL
ST+
HS
ST–
–T
GND
T+