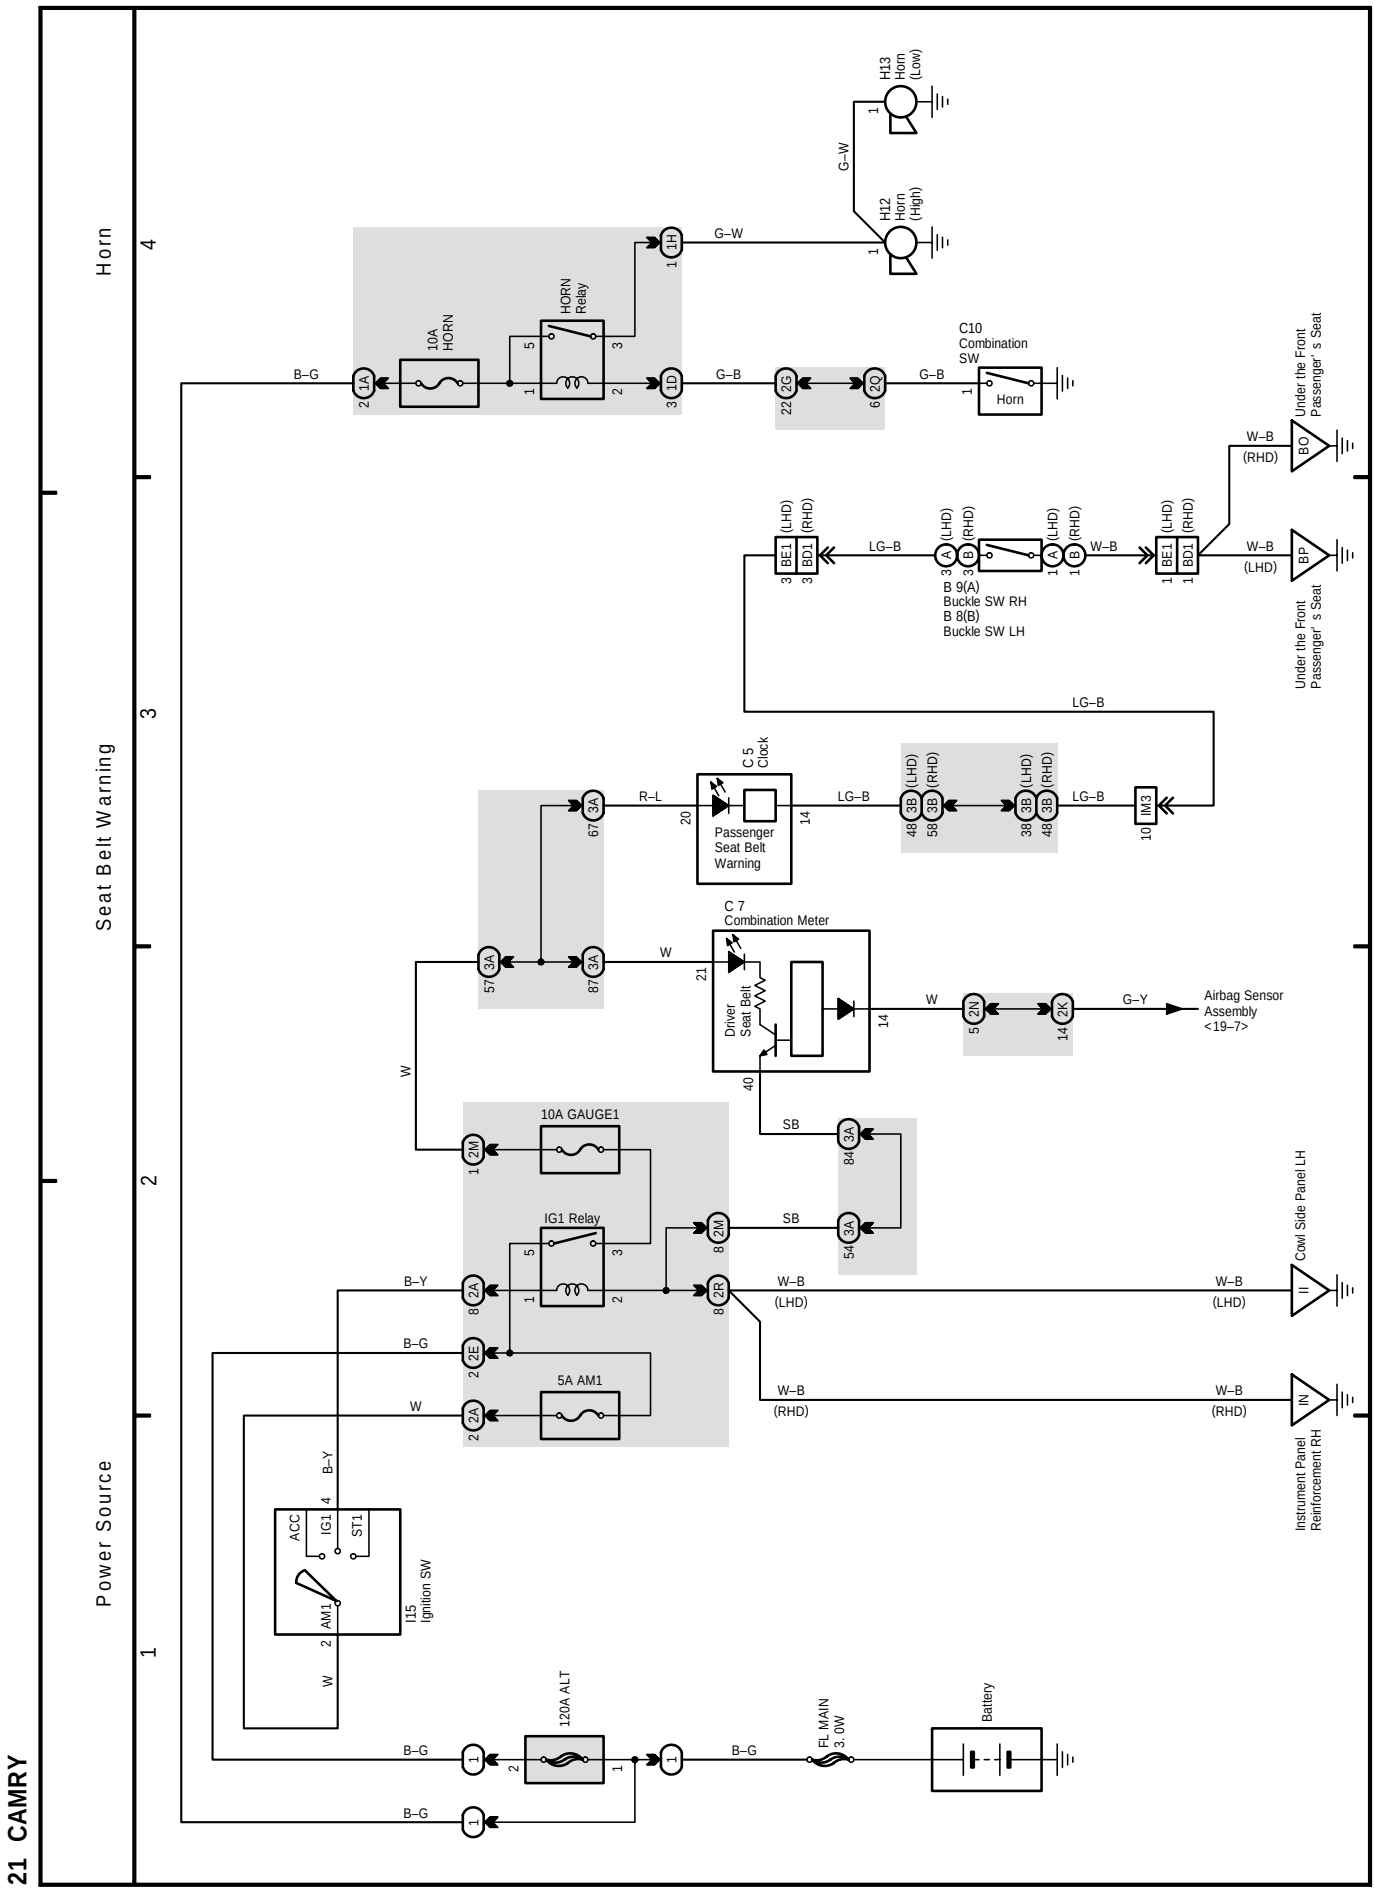

21 CAMRY
Power Source
Seat Belt Warning
Horn
1
2
3
4
H13 Horn (Low)
H12 Horn (High)
G–W
10A HORN
HORN Relay
B–G
G–B
C10 Combination SW
Horn
Under the Front Passenger' s Seat
W–B
(RHD)
(LHD)
BO
BP
LG–B
B 9(A) Buckle SW RH
B 8(B) Buckle SW LH
C 5 Clock
Passenger Seat Belt Warning
R–L
C 7 Combination Meter
Driver Seat Belt
W
G–Y
Airbag Sensor Assembly <19–7>
SB
10A GAUGE1
IG1 Relay
5A AM1
B–Y
Cowl Side Panel LH
Instrument Panel Reinforcement RH
ACC
IG1
ST1
AM1
I15 Ignition SW
120A ALT
FL MAIN 3. 0W
Battery