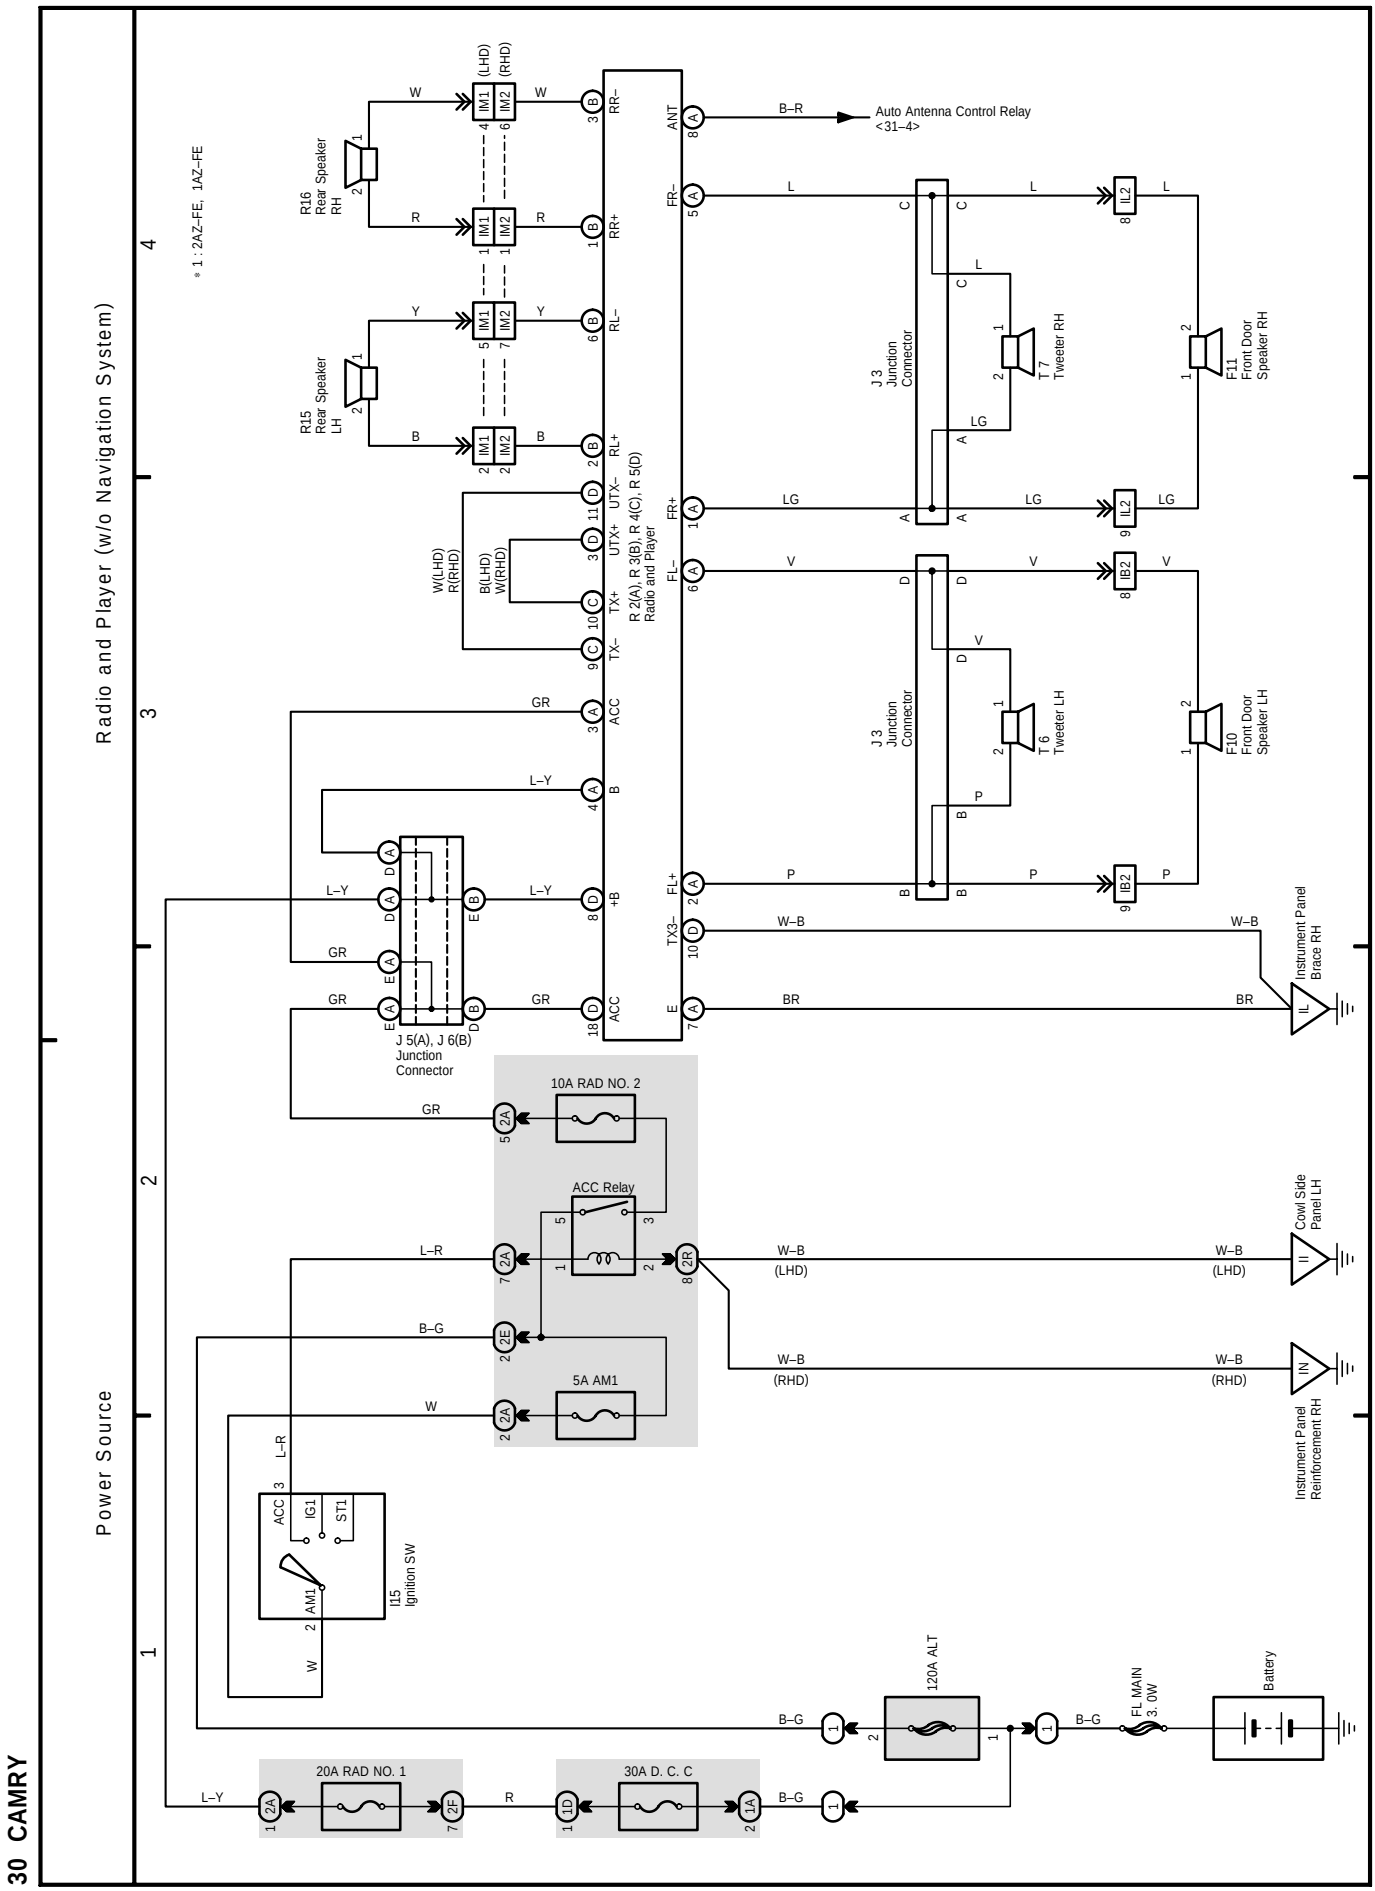

30 CAMRY
Power Source
Radio and Player (w/o Navigation System)
1
2
3
4
* 1 : 2AZ-FE, 1AZ-FE
R16 Rear Speaker RH
R15 Rear Speaker LH
(LHD)
(RHD)
IM1
IM2
RR+
RR–
RL+
RL–
ANT
FR+
FR–
FL+
FL–
UTX+
UTX–
TX+
TX–
TX3–
ACC
+B
R 2(A), R 3(B), R 4(C), R 5(D)
Radio and Player
W(LHD) R(RHD)
B(LHD) W(RHD)
B–R
Auto Antenna Control Relay
<31–4>
J 3 Junction Connector
T 7 Tweeter RH
F11 Front Door Speaker RH
T 6 Tweeter LH
F10 Front Door Speaker LH
IL2
IB2
J 5(A), J 6(B) Junction Connector
W–B
BR
Instrument Panel Brace RH
IL
10A RAD NO. 2
ACC Relay
5A AM1
L–R
B–G
W
GR
L–Y
Cowl Side Panel LH
II
IN
Instrument Panel Reinforcement RH
I15 Ignition SW
ACC
IG1
ST1
AM1
120A ALT
FL MAIN 3. 0W
Battery
20A RAD NO. 1
30A D. C. C
R
L
LG
V
P