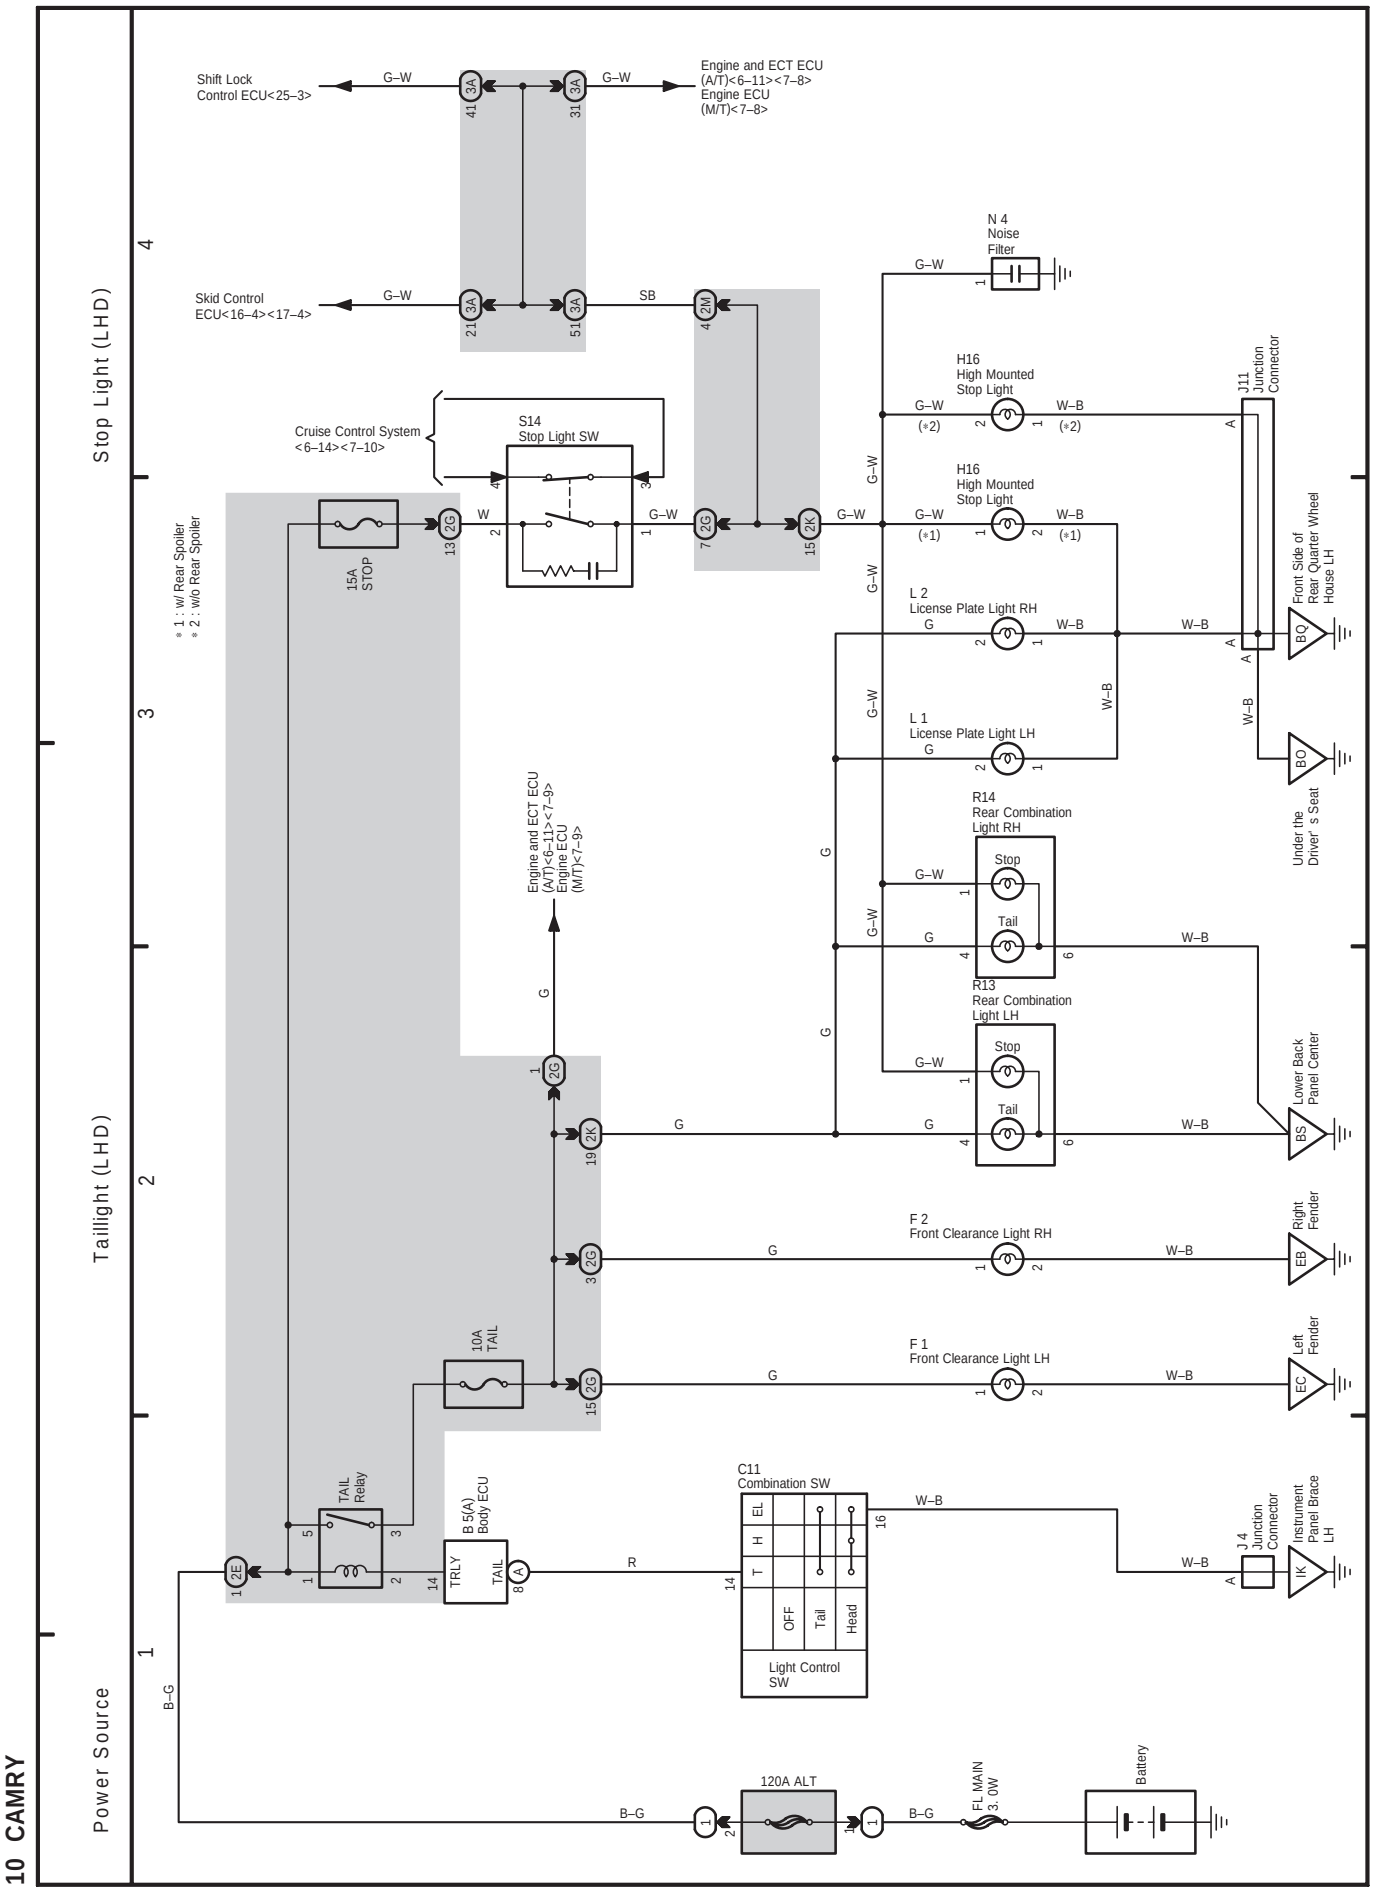

Stop Light (LHD)
Taillight (LHD)
Power Source
Shift Lock Control ECU<25–3>
Skid Control ECU<16–4><17–4>
Engine and ECT ECU (A/T)<6–11><7–8> Engine ECU (M/T)<7–8>
Cruise Control System <6–14><7–10>
S14 Stop Light SW
N 4 Noise Filter
H16 High Mounted Stop Light
J11 Junction Connector
L 2 License Plate Light RH
L 1 License Plate Light LH
Front Side of Rear Quarter Wheel House LH
Under the Driver's Seat
R14 Rear Combination Light RH
R13 Rear Combination Light LH
Lower Back Panel Center
F 2 Front Clearance Light RH
F 1 Front Clearance Light LH
Right Fender
Left Fender
15A STOP
10A TAIL
TAIL Relay
B 5(A) Body ECU
C11 Combination SW
Light Control SW
J 4 Junction Connector
Instrument Panel Brace LH
120A ALT
FL MAIN 3.0W
Battery
* 1 : w/ Rear Spoiler
* 2 : w/o Rear Spoiler