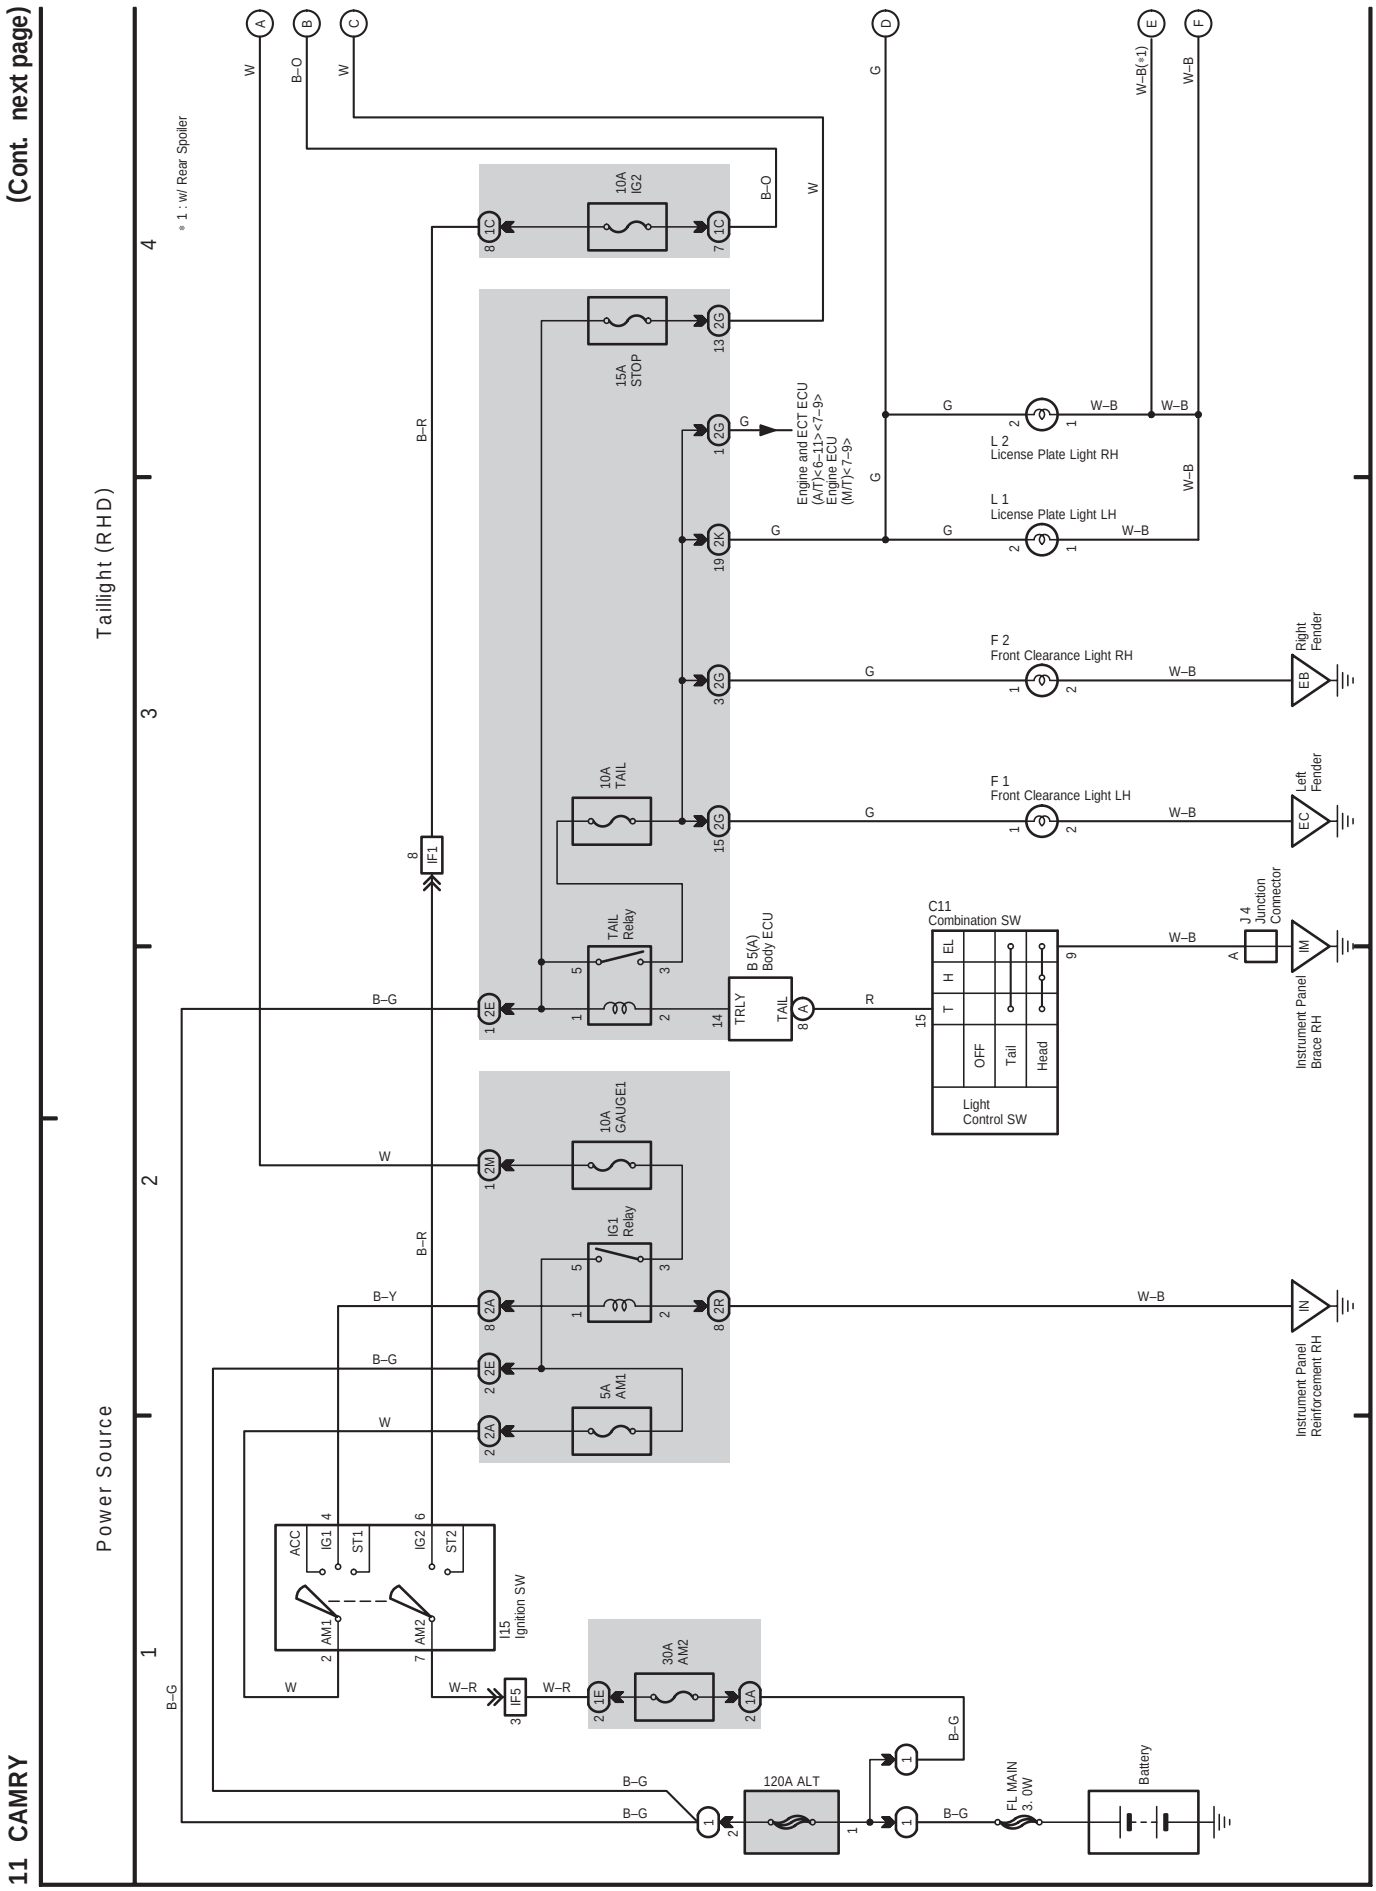
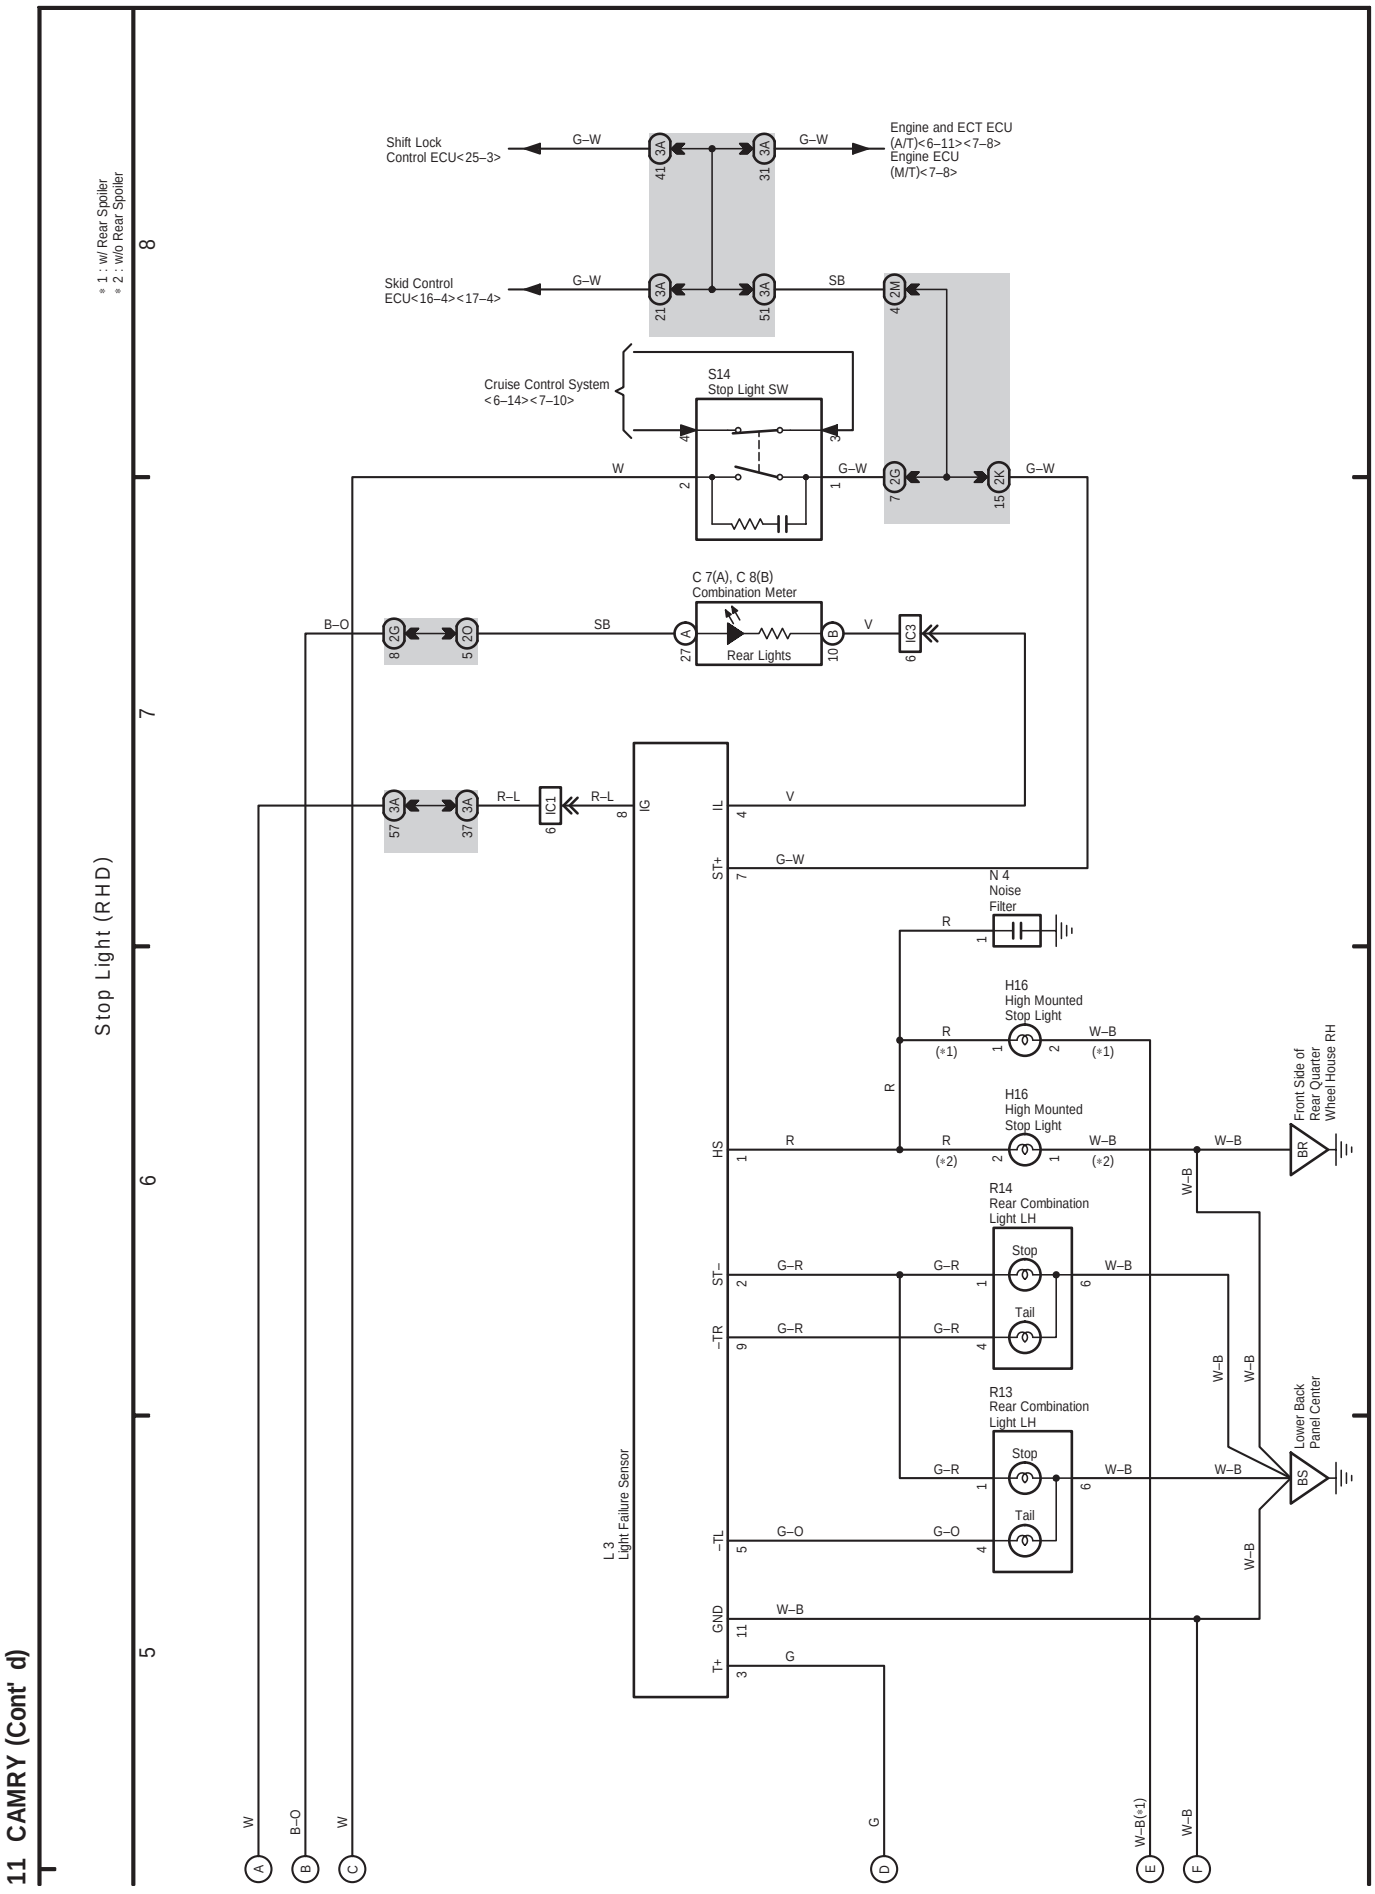

(Cont. next page)
11 CAMRY
Power Source
Taillight (RHD)
* 1 : w/ Rear Spoiler
10A IG2
15A STOP
10A TAIL
10A GAUGE1
IG1 Relay
TAIL Relay
5A AM1
30A AM2
IF1
IF5
I15 Ignition SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
B 5(A) Body ECU
TRLY
TAIL
C11 Combination SW
EL
H
T
OFF
Tail
Head
Light Control SW
J 4 Junction Connector
Instrument Panel Brace RH
Instrument Panel Reinforcement RH
Engine and ECT ECU (A/T)<6–11><7–9>
Engine ECU (M/T)<7–9>
L 2 License Plate Light RH
L 1 License Plate Light LH
F 2 Front Clearance Light RH
F 1 Front Clearance Light LH
Right Fender
Left Fender
120A ALT
FL MAIN 3. 0W
Battery


11 CAMRY (Cont' d)
Stop Light (RHD)
* 1 : w/ Rear Spoiler
* 2 : w/o Rear Spoiler
Shift Lock Control ECU<25–3>
Skid Control ECU<16–4><17–4>
Engine and ECT ECU (A/T)<6–11><7–8>
Engine ECU (M/T)<7–8>
Cruise Control System <6–14><7–10>
S14 Stop Light SW
C 7(A), C 8(B) Combination Meter
Rear Lights
N 4 Noise Filter
H16 High Mounted Stop Light
H16 High Mounted Stop Light
R14 Rear Combination Light LH
R13 Rear Combination Light LH
Front Side of Rear Quarter Wheel House RH
Lower Back Panel Center
L 3 Light Failure Sensor
IG
IL
ST+
HS
ST–
–TR
–TL
GND
T+