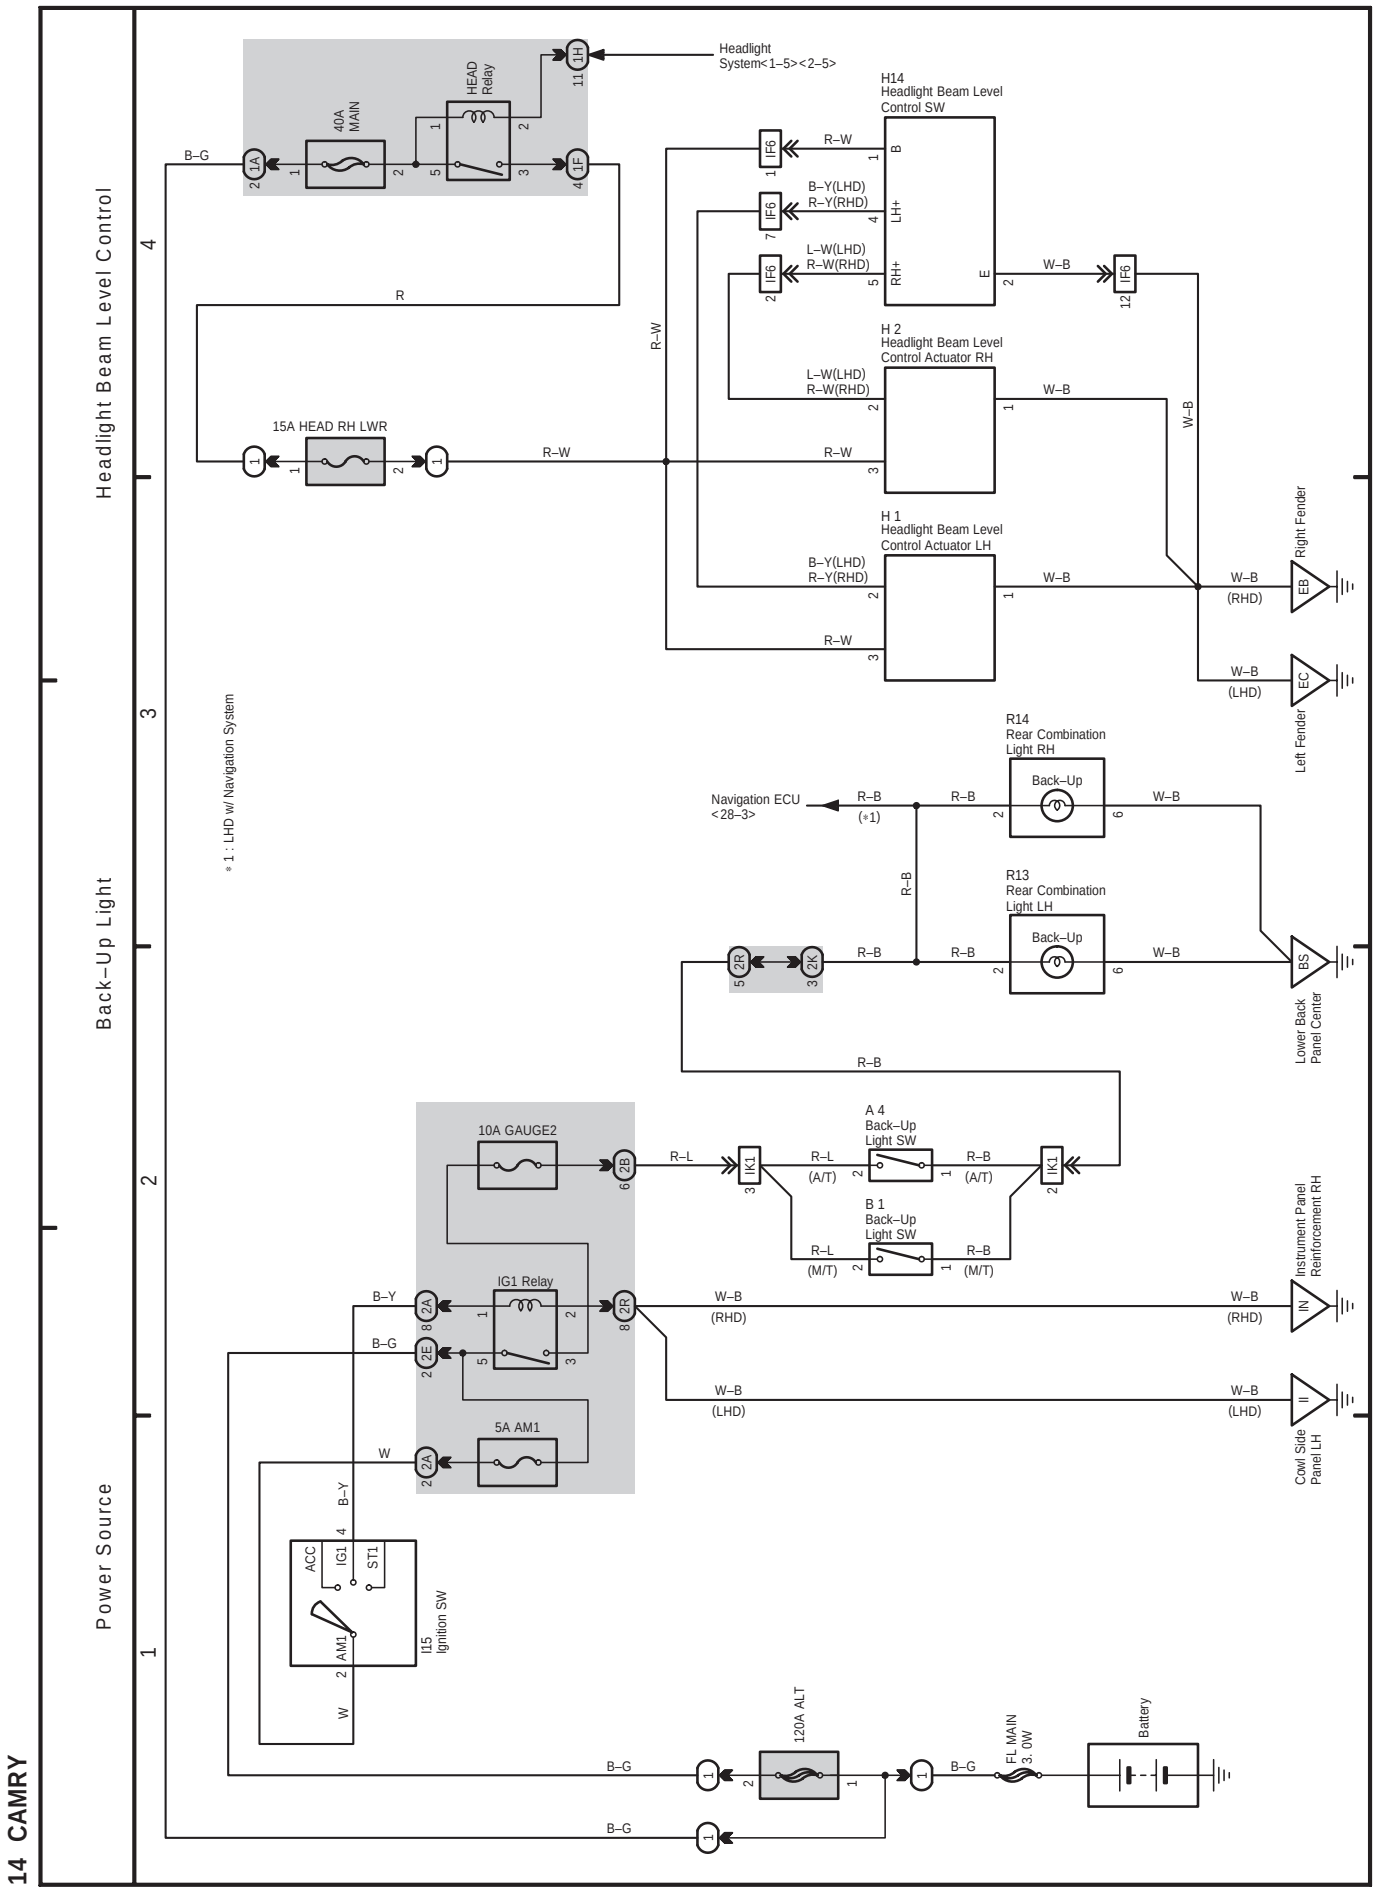

14 CAMRY
Power Source
Back–Up Light
Headlight Beam Level Control
1
2
3
4
Headlight System<1–5><2–5>
HEAD Relay
40A MAIN
1A
1F
1H
11
B–G
H14
Headlight Beam Level Control SW
IF6
R–W
B–Y(LHD)
R–Y(RHD)
L–W(LHD)
R–W(RHD)
B
LH+
RH+
E
W–B
12
R
15A HEAD RH LWR
H 2
Headlight Beam Level Control Actuator RH
H 1
Headlight Beam Level Control Actuator LH
W–B
(RHD)
W–B
(LHD)
Right Fender
EB
EC
Left Fender
* 1 : LHD w/ Navigation System
R14
Rear Combination Light RH
R13
Rear Combination Light LH
Back–Up
Navigation ECU
<28–3>
R–B
(*1)
2R
2K
BS
Lower Back Panel Center
10A GAUGE2
2B
IK1
R–L
A 4
Back–Up Light SW
(A/T)
B 1
Back–Up Light SW
(M/T)
IG1 Relay
2A
2E
2R
B–Y
W–B
(RHD)
W–B
(LHD)
IN
II
Instrument Panel Reinforcement RH
Cowl Side Panel LH
5A AM1
W
I15
Ignition SW
ACC
IG1
ST1
AM1
120A ALT
FL MAIN
3. 0W
Battery