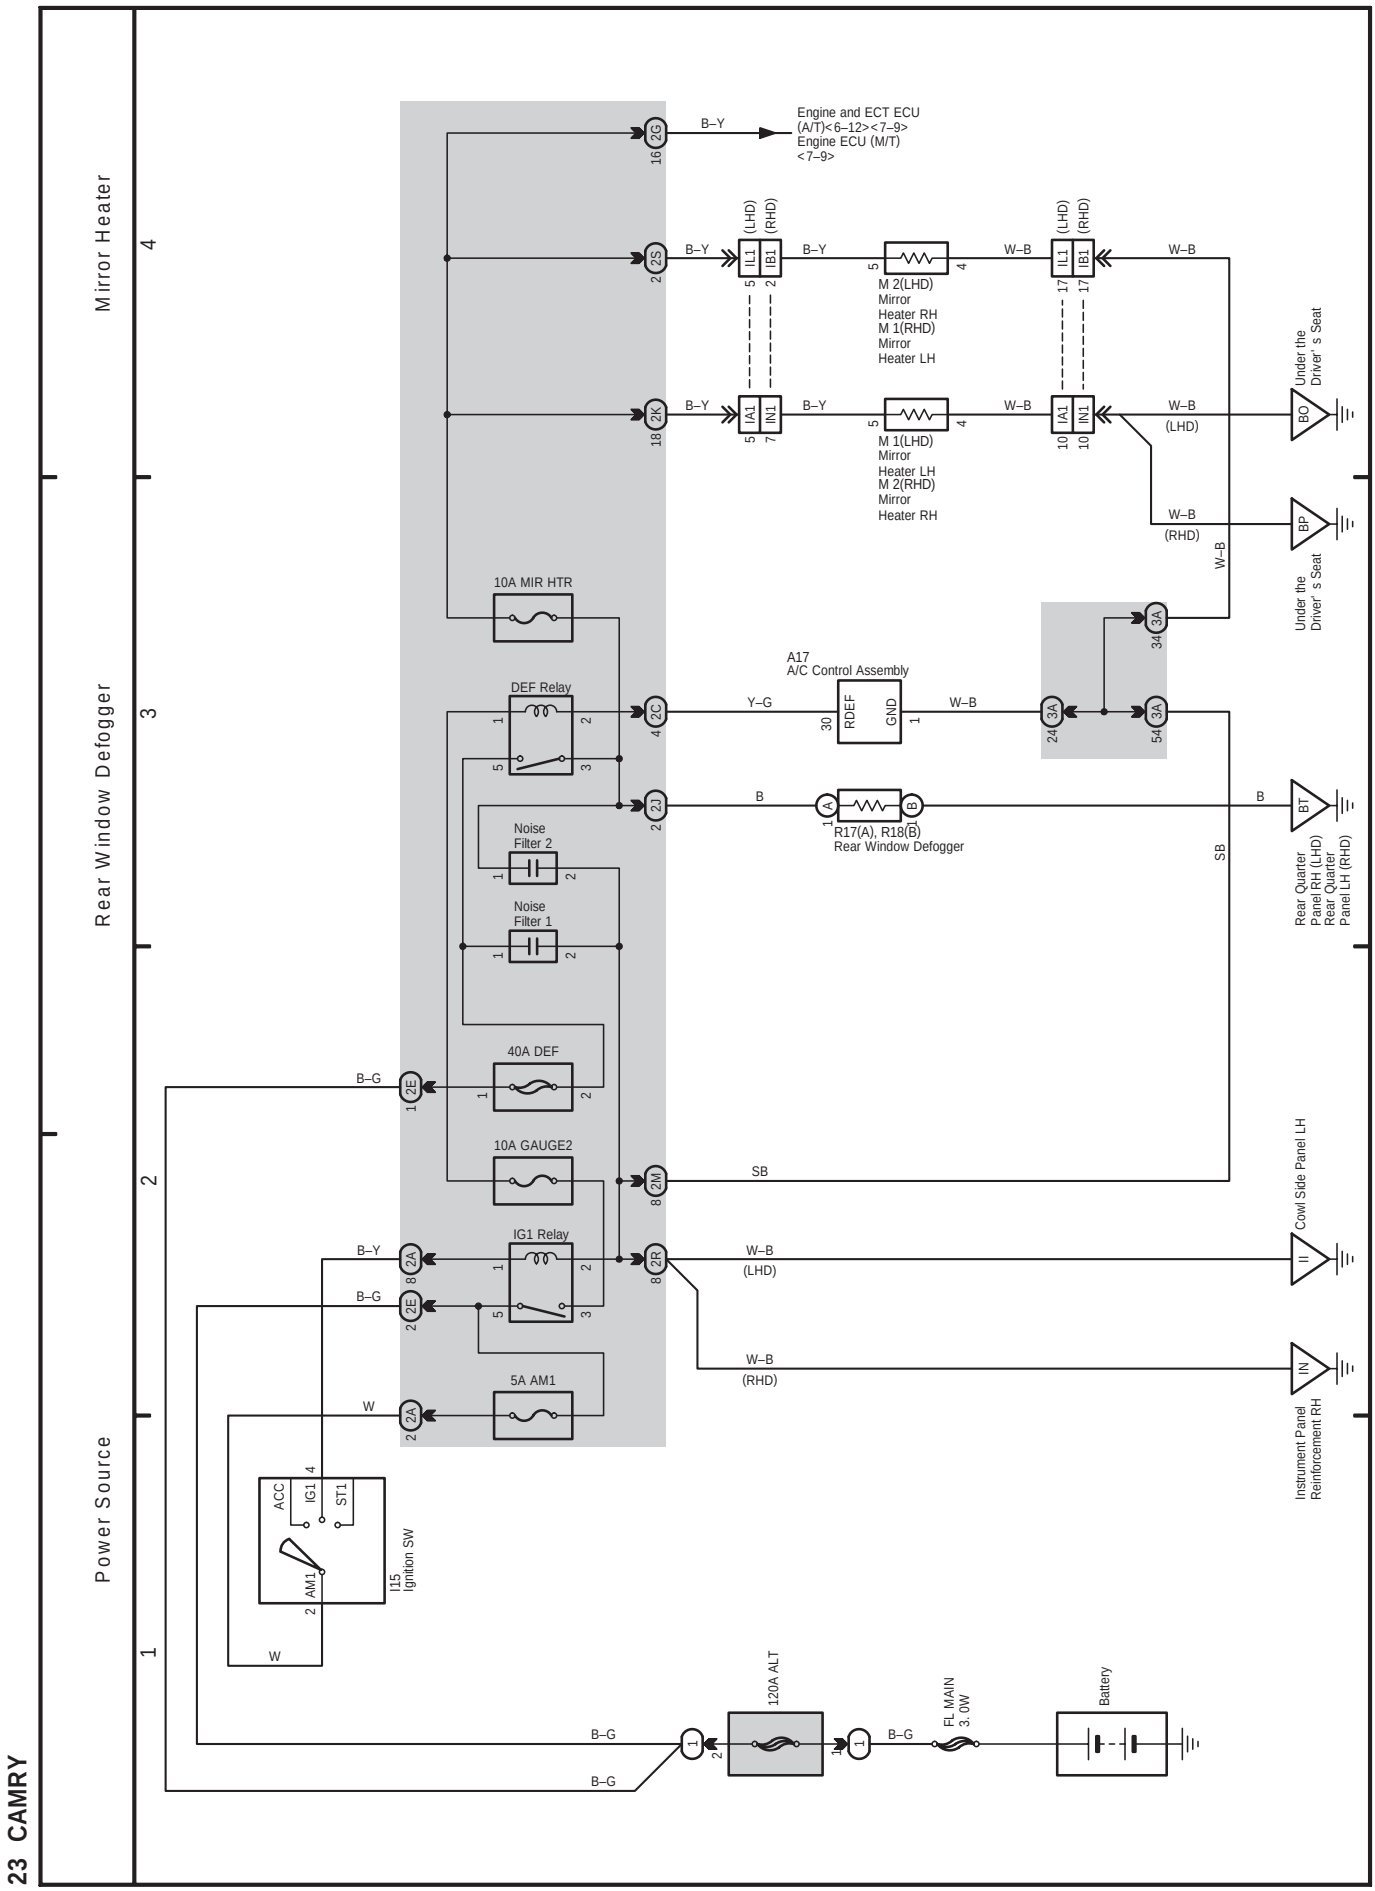

Mirror Heater
Rear Window Defogger
Power Source
1
2
3
4
Engine and ECT ECU
(A/T)<6–12><7–9>
Engine ECU (M/T)
<7–9>
B–Y
2G
16
2S
2K
18
(LHD)
(RHD)
IL1
IB1
IA1
IN1
M 2(LHD)
Mirror
Heater RH
M 1(RHD)
Mirror
Heater LH
M 1(LHD)
Mirror
Heater LH
M 2(RHD)
Mirror
Heater RH
W–B
(LHD)
(RHD)
Under the
Driver' s Seat
BO
BP
10A MIR HTR
DEF Relay
A17
A/C Control Assembly
RDEF
GND
Y–G
2C
2J
3A
34
24
54
30
R17(A), R18(B)
Rear Window Defogger
B
BT
Rear Quarter
Panel RH (LHD)
Rear Quarter
Panel LH (RHD)
SB
Noise
Filter 2
Noise
Filter 1
40A DEF
2E
10A GAUGE2
2M
IG1 Relay
2A
2R
5A AM1
W
B–G
Cowl Side Panel LH
Instrument Panel
Reinforcement RH
IN
ACC
IG1
ST1
AM1
I15
Ignition SW
120A ALT
FL MAIN
3. 0W
Battery