

FRONT SUSPENSION (From July, 2003)

COMPONENTS

2605V–03

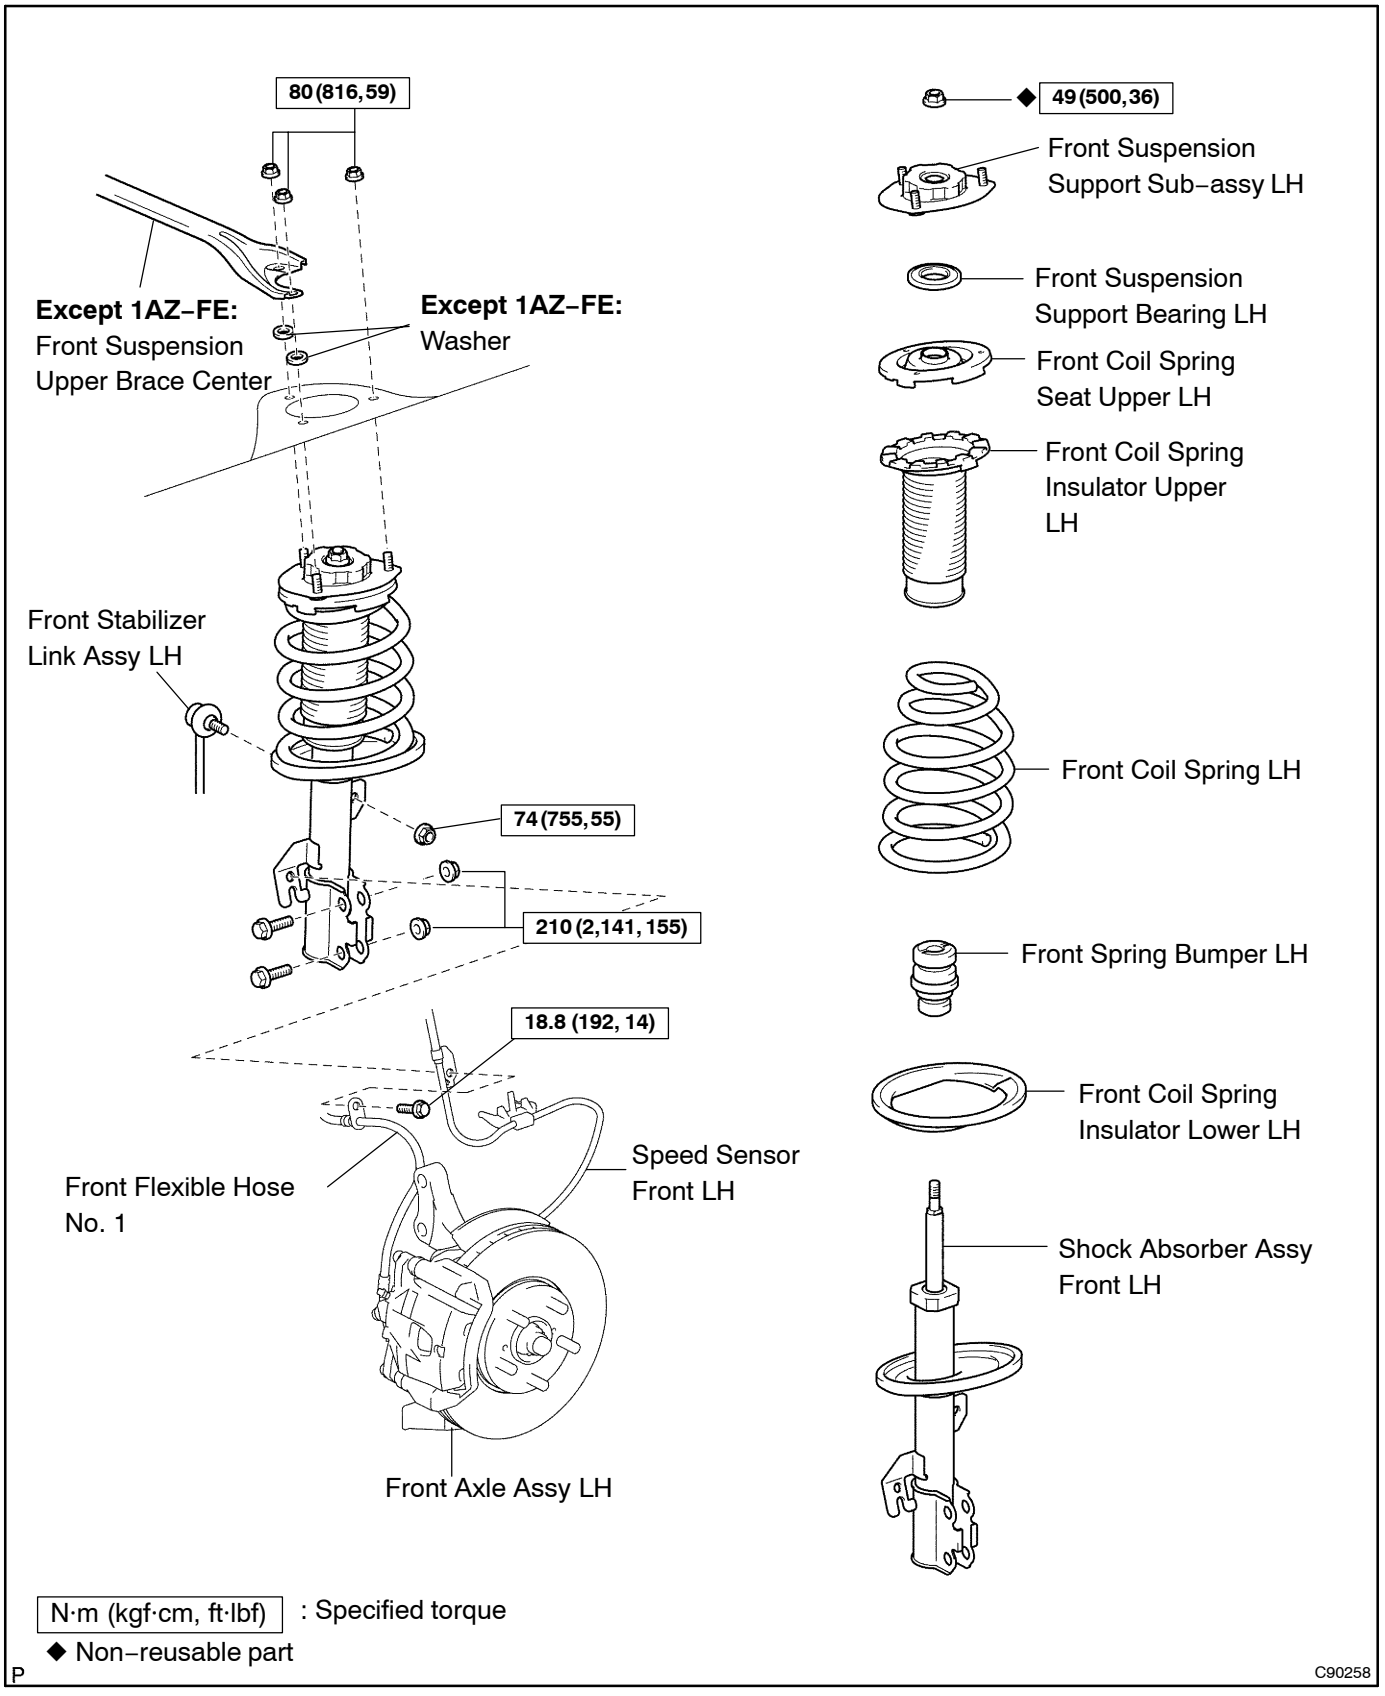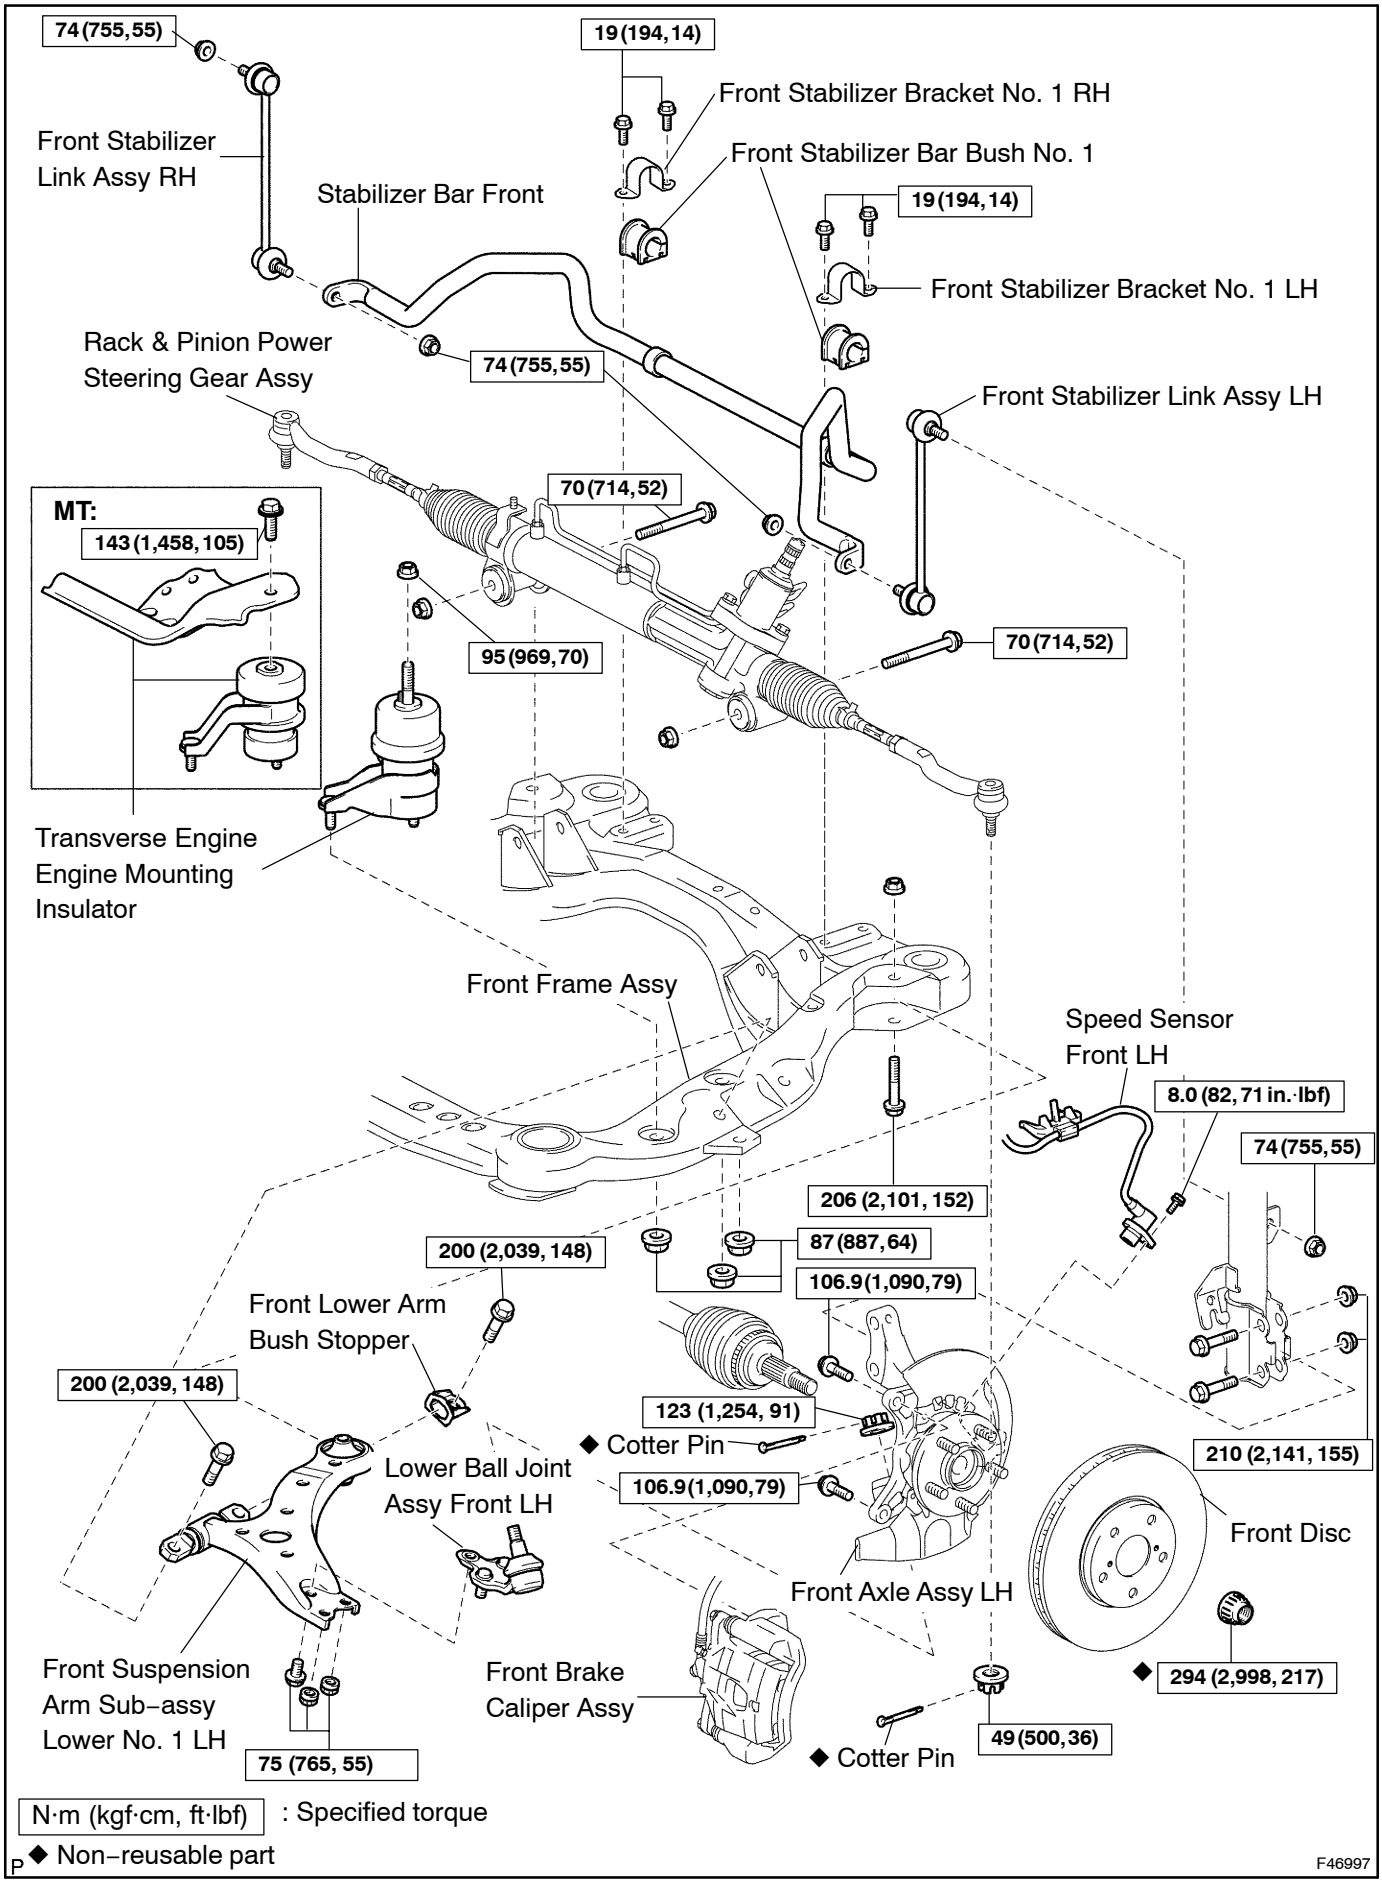


74 (755, 55)
19 (194, 14)
Front Stabilizer Bracket No. 1 RH
Front Stabilizer Bar Bush No. 1
Front Stabilizer Link Assy RH
Stabilizer Bar Front
19 (194, 14)
Front Stabilizer Bracket No. 1 LH
Rack & Pinion Power Steering Gear Assy
74 (755, 55)
Front Stabilizer Link Assy LH
70 (714, 52)
MT:
143 (1,458, 105)
95 (969, 70)
70 (714, 52)
Transverse Engine Engine Mounting Insulator
Front Frame Assy
Speed Sensor Front LH
8.0 (82, 71 in.·lbf)
74 (755, 55)
206 (2,101, 152)
87 (887, 64)
200 (2,039, 148)
106.9 (1,090, 79)
Front Lower Arm Bush Stopper
200 (2,039, 148)
123 (1,254, 91)
◆ Cotter Pin
210 (2,141, 155)
Lower Ball Joint Assy Front LH
106.9 (1,090, 79)
Front Disc
Front Axle Assy LH
◆ 294 (2,998, 217)
Front Suspension Arm Sub–assy Lower No. 1 LH
Front Brake Caliper Assy
49 (500, 36)
◆ Cotter Pin
75 (765, 55)
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
F46997