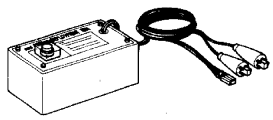
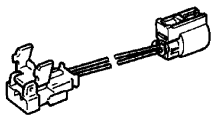








SUPPLEMENTAL RESTRAINT SYSTEM


020XN–01

PREPARATION

SST

	09082–00700	SRS Airbag Deployment Tool	HORN BUTTON ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY CURTAIN SHIELD AIR BAG ASSY LH FRONT SEAT AIRBAG ASSY RH
	09082–00750	Airbag Deployment Wire Sub–harness No.3	FRONT SEAT AIRBAG ASSY RH
	09082–00780	Airbag Deployment Wire Sub–harness No.6	HORN BUTTON ASSY
	09082–00801	Airbag Deployment Wire Sub–Harness No. 8	HORN BUTTON ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY CURTAIN SHIELD AIR BAG ASSY LH
	(09082–10801)	Wire A	HORN BUTTON ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY CURTAIN SHIELD AIR BAG ASSY LH
	(09082–20801)	Wire B	CURTAIN SHIELD AIR BAG ASSY LH
	(09082–30801)	Wire C	HORN BUTTON ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY
	09950–50013	Puller C Set	SPIRAL CABLE SUB–ASSY
	(09951–05010)	Hanger 150	SPIRAL CABLE SUB–ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY
	(09952–05010)	Slide Arm	SPIRAL CABLE SUB–ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY
	(09953–05020)	Center Bolt 150	SPIRAL CABLE SUB–ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY
	(09954–05021)	Claw No.2	SPIRAL CABLE SUB–ASSY

Recomended Tools

	09042–00010 Torx Socket T30	HORN BUTTON ASSY SPIRAL CABLE SUB–ASSY INSTR PNL PASS L/DOOR AIR BAG ASSY

Equipment

Torque wrench	
Bolt Length: 35.0 mm (1.387 in.) Pitch: 1.0 mm (0.039 in.) Diam.: 6.0 mm (0.236 in.)	Airbag disposal
Tire Width: 185 mm (7.28 in.) Inner diam.: 360 mm (14.17 in.)	Airbag disposal
Tire with disc wheel Width: 185 mm (7.28 in.) Inner diam.: 360 mm (14.17 in.)	Airbag disposal
Vinyl bag	Airbag disposal