
550CW–01

OVERHAUL

HINT:


COMPONENTS: See page 55–15

1. REMOVE AIR CONDITIONER CONTROL ASSEMBLY (See page 71–10)

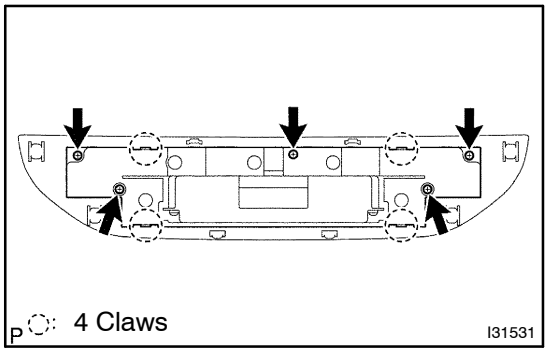

2. REMOVE HEATER CONTROL HOUSING SUB–ASSY


(a) Release the 4 fitting claws, remove the 5 screws.

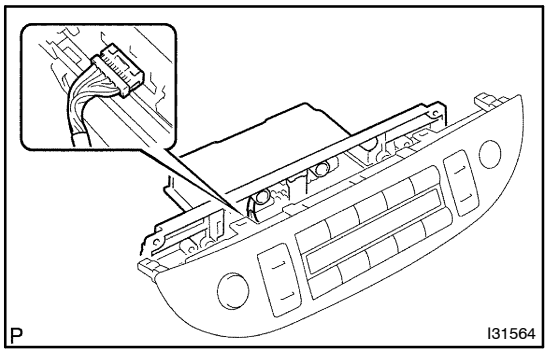

(b) Disconnect the connector, remove the heater control housing sub–assy.


3. REMOVE AIR CONDITIONING CONTROL BULB

(a) Remove the air conditioning control bulb from the heater control base sub–assy.

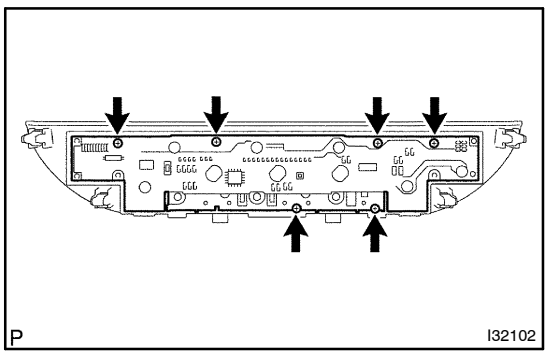

4. REMOVE HEATER CONTROL BASE SUB–ASSY

(a) Remove the 6 screws and heater control base sub–assy.

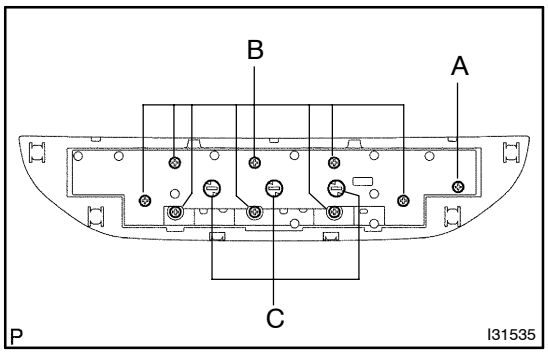

5. INSTALL AIR CONDITIONING CONTROL BULB

(a) Install the air conditioning control bulb to the heater control base sub–assy.

Bulb position:

Position	Part No.
A	90010 – 03054
B	90010 – 03055
C	90010 – 03056