TRANSMITTER BATTERY


REPLACEMENT

7308A–01

HINT:

Installation is in the reverse order of the removal. But the installation is indicated only when it has a point.

1. REMOVE TRANSMITTER SUB–ASSY MODULE SET DOOR CONTROL (See page73–11)

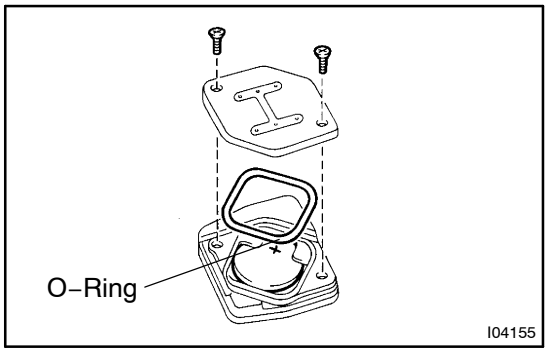


2. REMOVE TRANSMITTER BATTERY

(a) Using a screwdriver, remove the 2 screws and cover.

(b) Remove the transmitter battery (lithium battery).

NOTICE:

- **Do not push the terminals with a finger.**
- **If prying up the battery (lithium battery) forcibly to remove it, the terminals are deformed.**

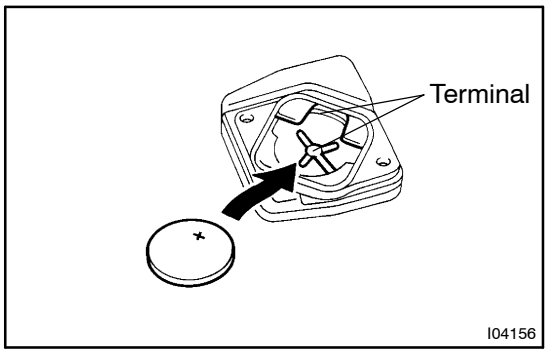

3. INSTALL TRANSMITTER BATTERY

(a) Install the transmitter battery (lithium battery), as shown in the illustration.

NOTICE:

Face the battery upward and, take care not to deform the terminals.

(b) Check that O–ring is not distorted or slipped off, and install the cover.

(c) Using a screwdriver, tighten the 2 screws.

NOTICE:

When the screws are loose, it might cause faulty contact of battery (lithium battery) and terminals.