
CRUISE CONTROL MAIN SWITCH ASSY

8201R–01


REPLACEMENT

1. DISCONNECT BATTERY NEGATIVE TERMINAL(See page 60–1)
2. REMOVE STEERING WHEEL COVER LOWER NO.2
3. REMOVE CONNECTOR COVER
   (See page 82–1)
4. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
5. REMOVE HORN BUTTON ASSY
   (See page 60–15)
6. REMOVE STEERING WHEEL ASSY
   (See page 50–6)
   SST 09950–50013 (09951–05010, 09952–05010, 09953–05020, 09954–05021)
7. REMOVE STEERING PAD SWITCH
   (See page 82–1)

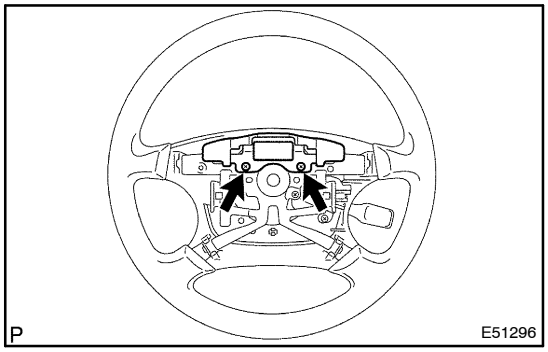


8. REMOVE CRUISE CONTROL MAIN SWITCH ASSY


(a) Remove the 2 screws and steering wheel damper.

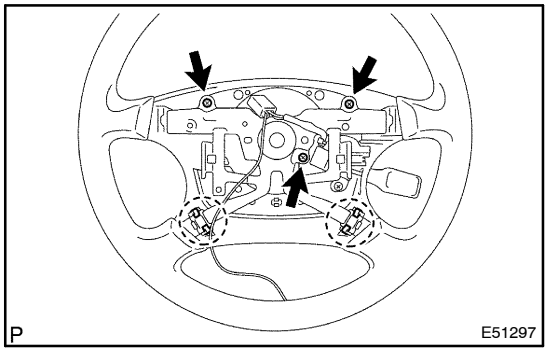

(b) Remove the 3 screws.
(c) Disengage the 2 claws and remove the steering wheel boss cover LWR.

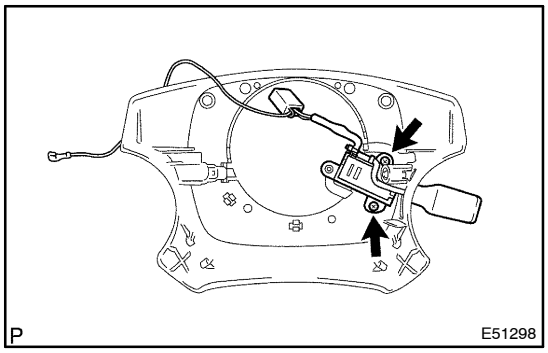

(d) Remove the 2 screws and cruise control main switch assy.

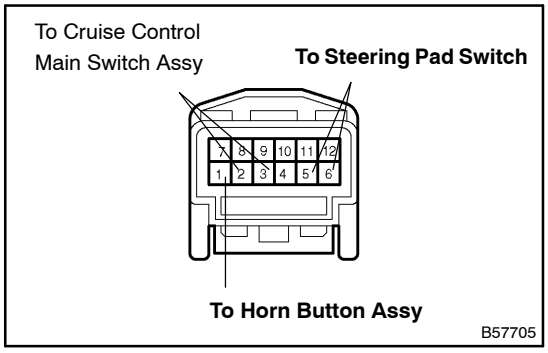

(e) Disengage the wiring pins other than the cruise control main switch assy from the connector, and pull them out.

9. **CENTER SPIRAL CABLE(See page 60–24)**
10. **INSTALL STEERING WHEEL ASSY (See page 50–6)**
11. **INSPECT STEERING WHEEL CENTER POINT**
12. **INSPECT HORN BUTTON ASSY (See page 60–15)**
13. **INSTALL HORN BUTTON ASSY (See page 60–15)**
14. **INSPECT SRS WARNING LIGHT**