
REAR FLOOR PAN (ASSY)

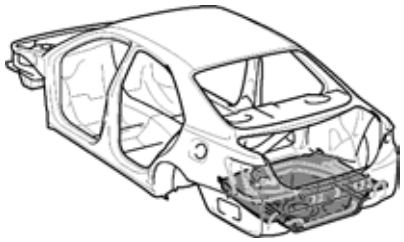

F25747A


With the rear floor no.3 crossmember removed.


Symbol meaning

: Remove Weld Points

F25747B

REMOVAL

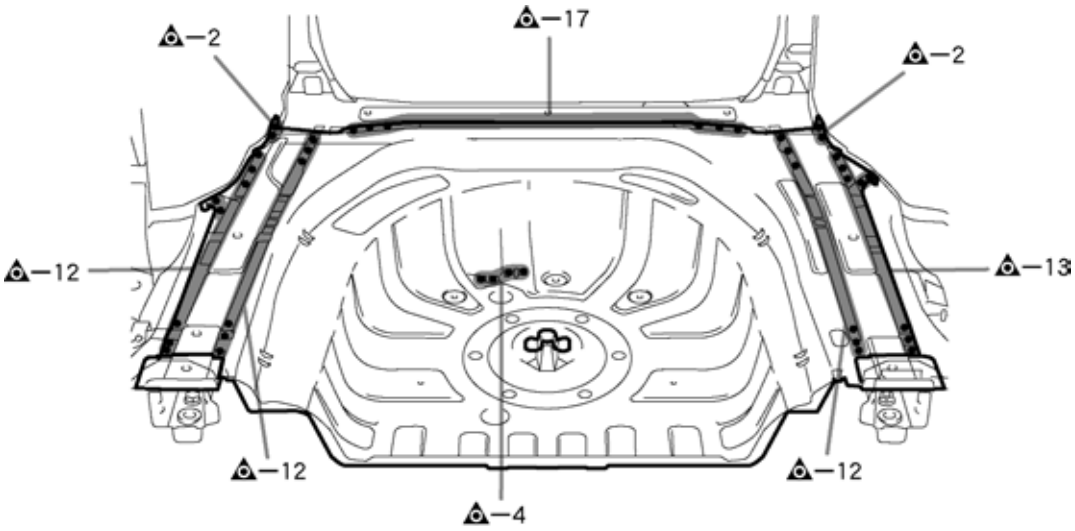

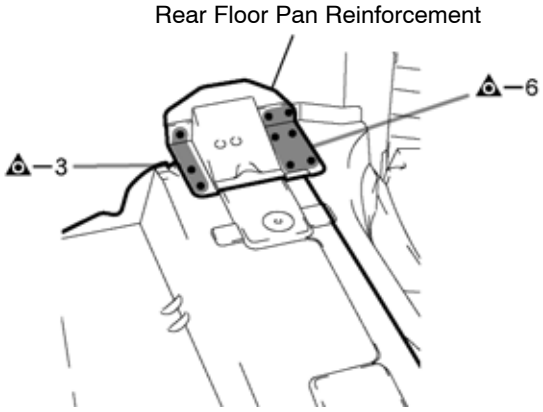


F25747


REMOVAL POINT

1 Remove the rear floor pan reinforcement at the same time.

[LH]

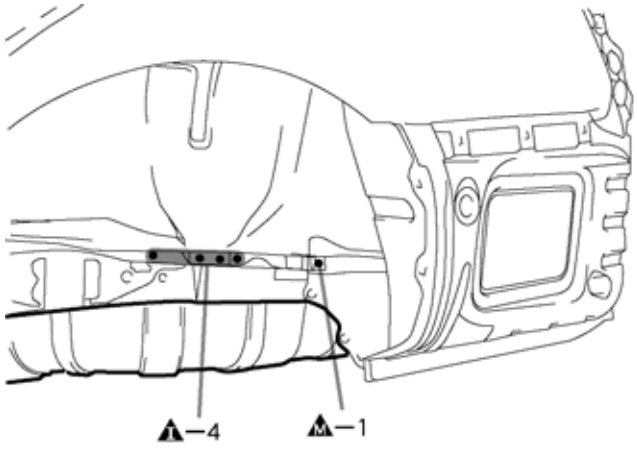

[RH]

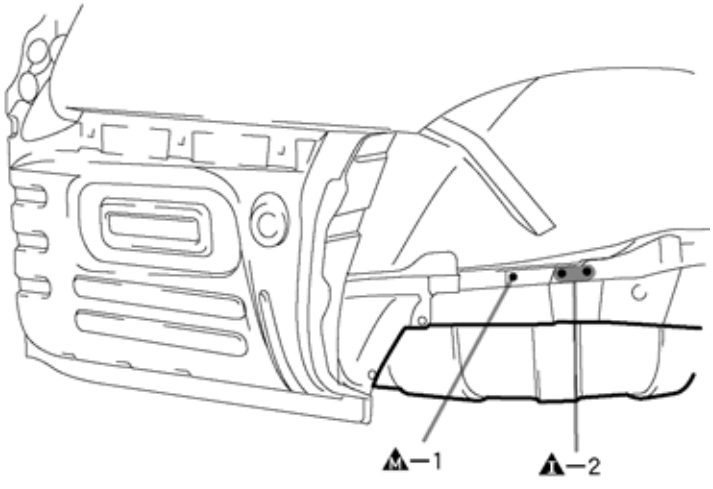


F285748

Symbol meaning

O M I : MIG Plug Weld : Tack Weld

F25749B

INSTALLATION

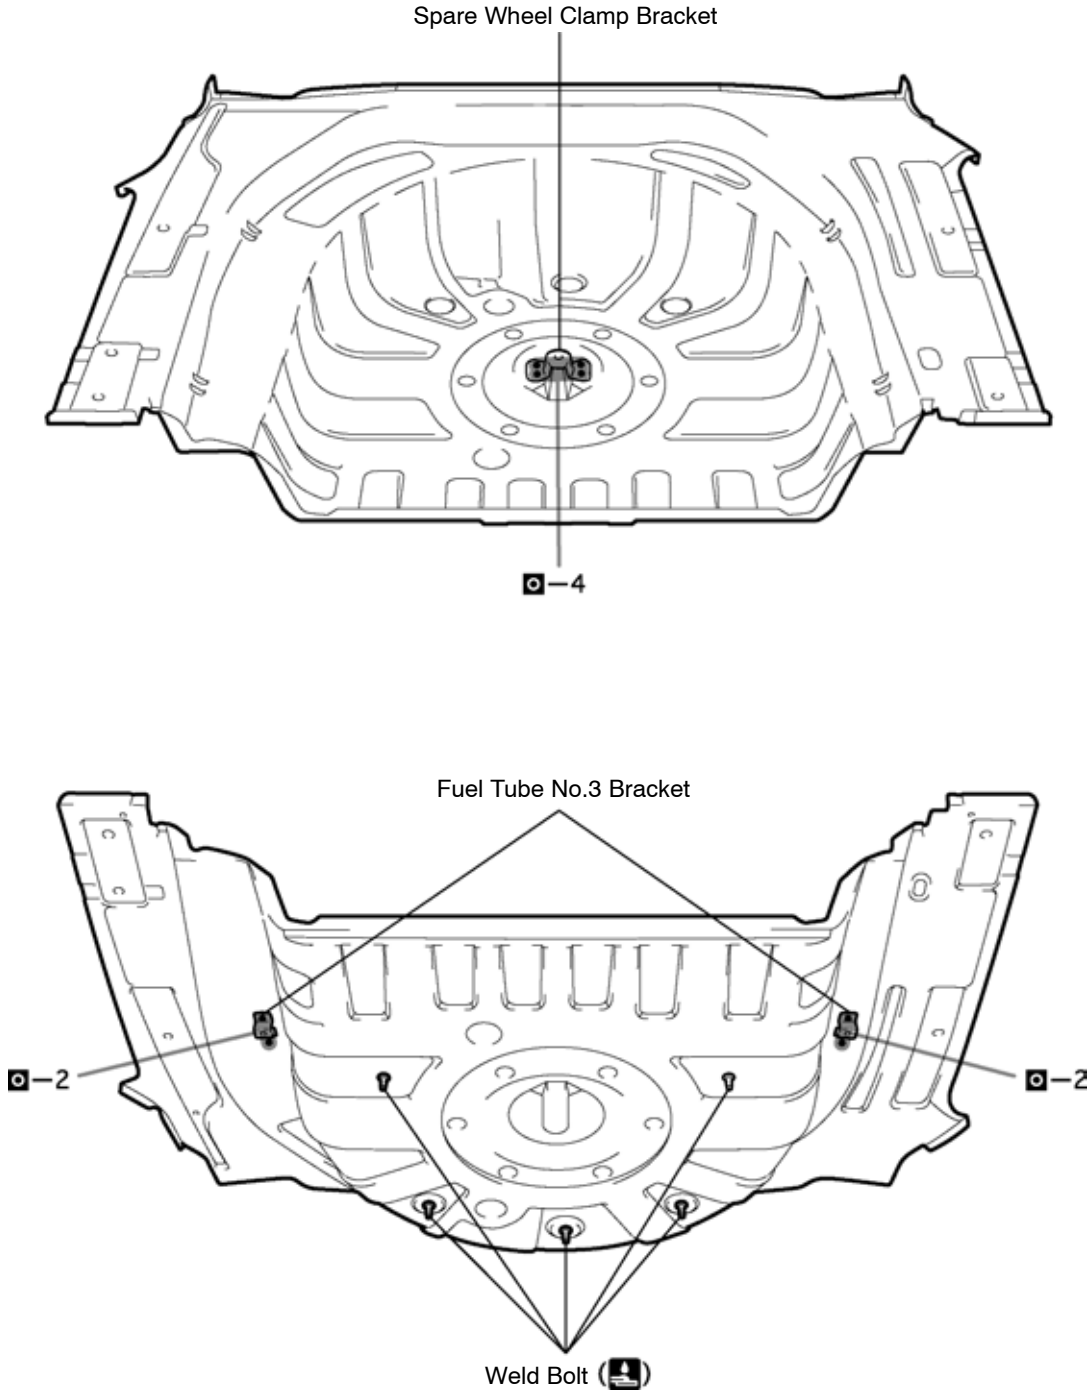


F26452


INSTALLATION POINT

1 Before temporarily installing the new parts, weld the spare wheel clamp bracket and fuel tube No.3 bracket with the standard number of welding points.

[LH]

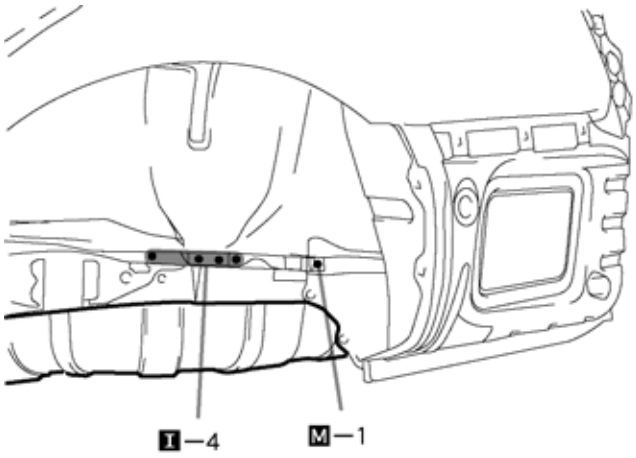

[RH]

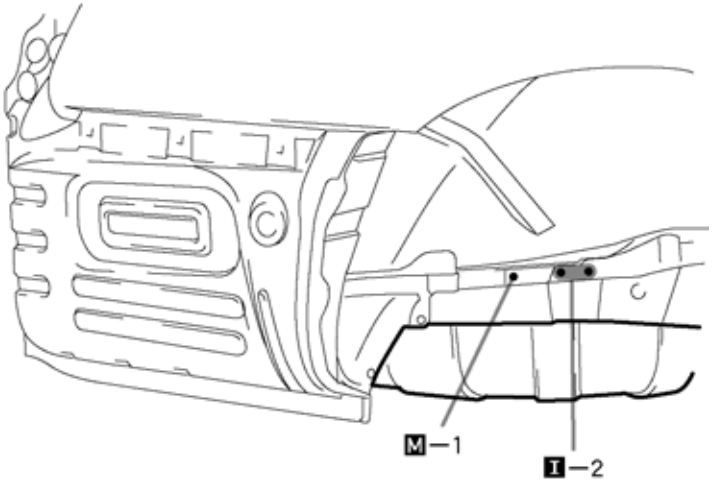



F25804

Symbol meaning

: MIG Plug Weld : Tack Weld

F25749B

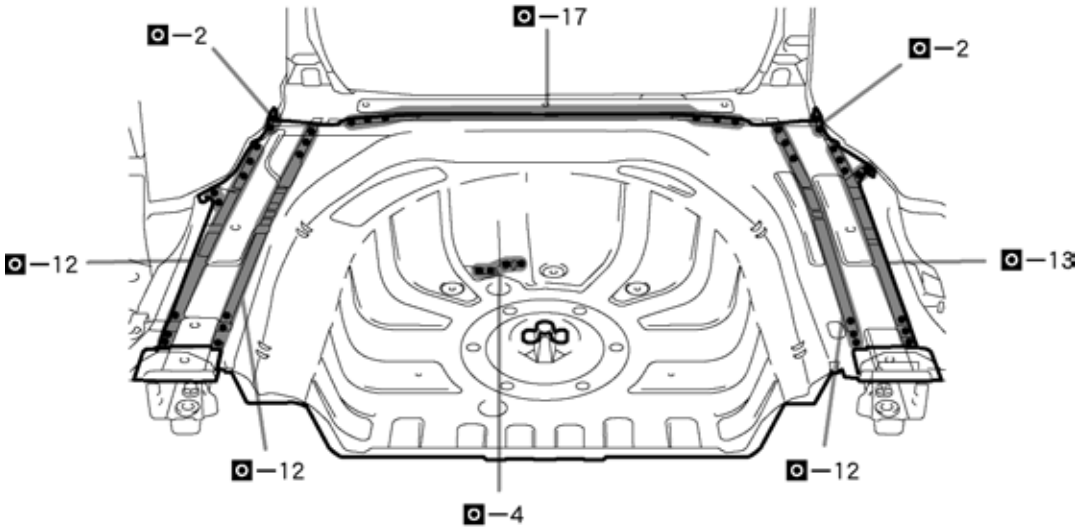

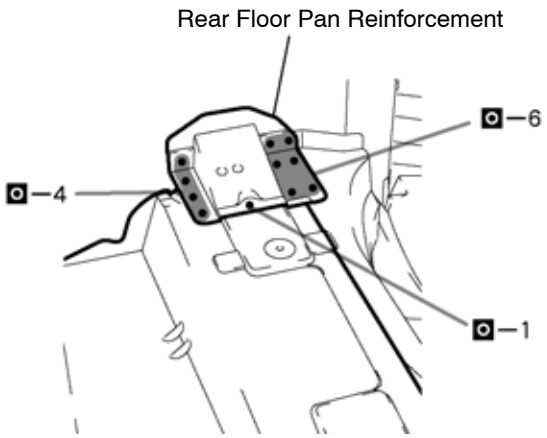

F25803

INSTALLATION POINT

1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.