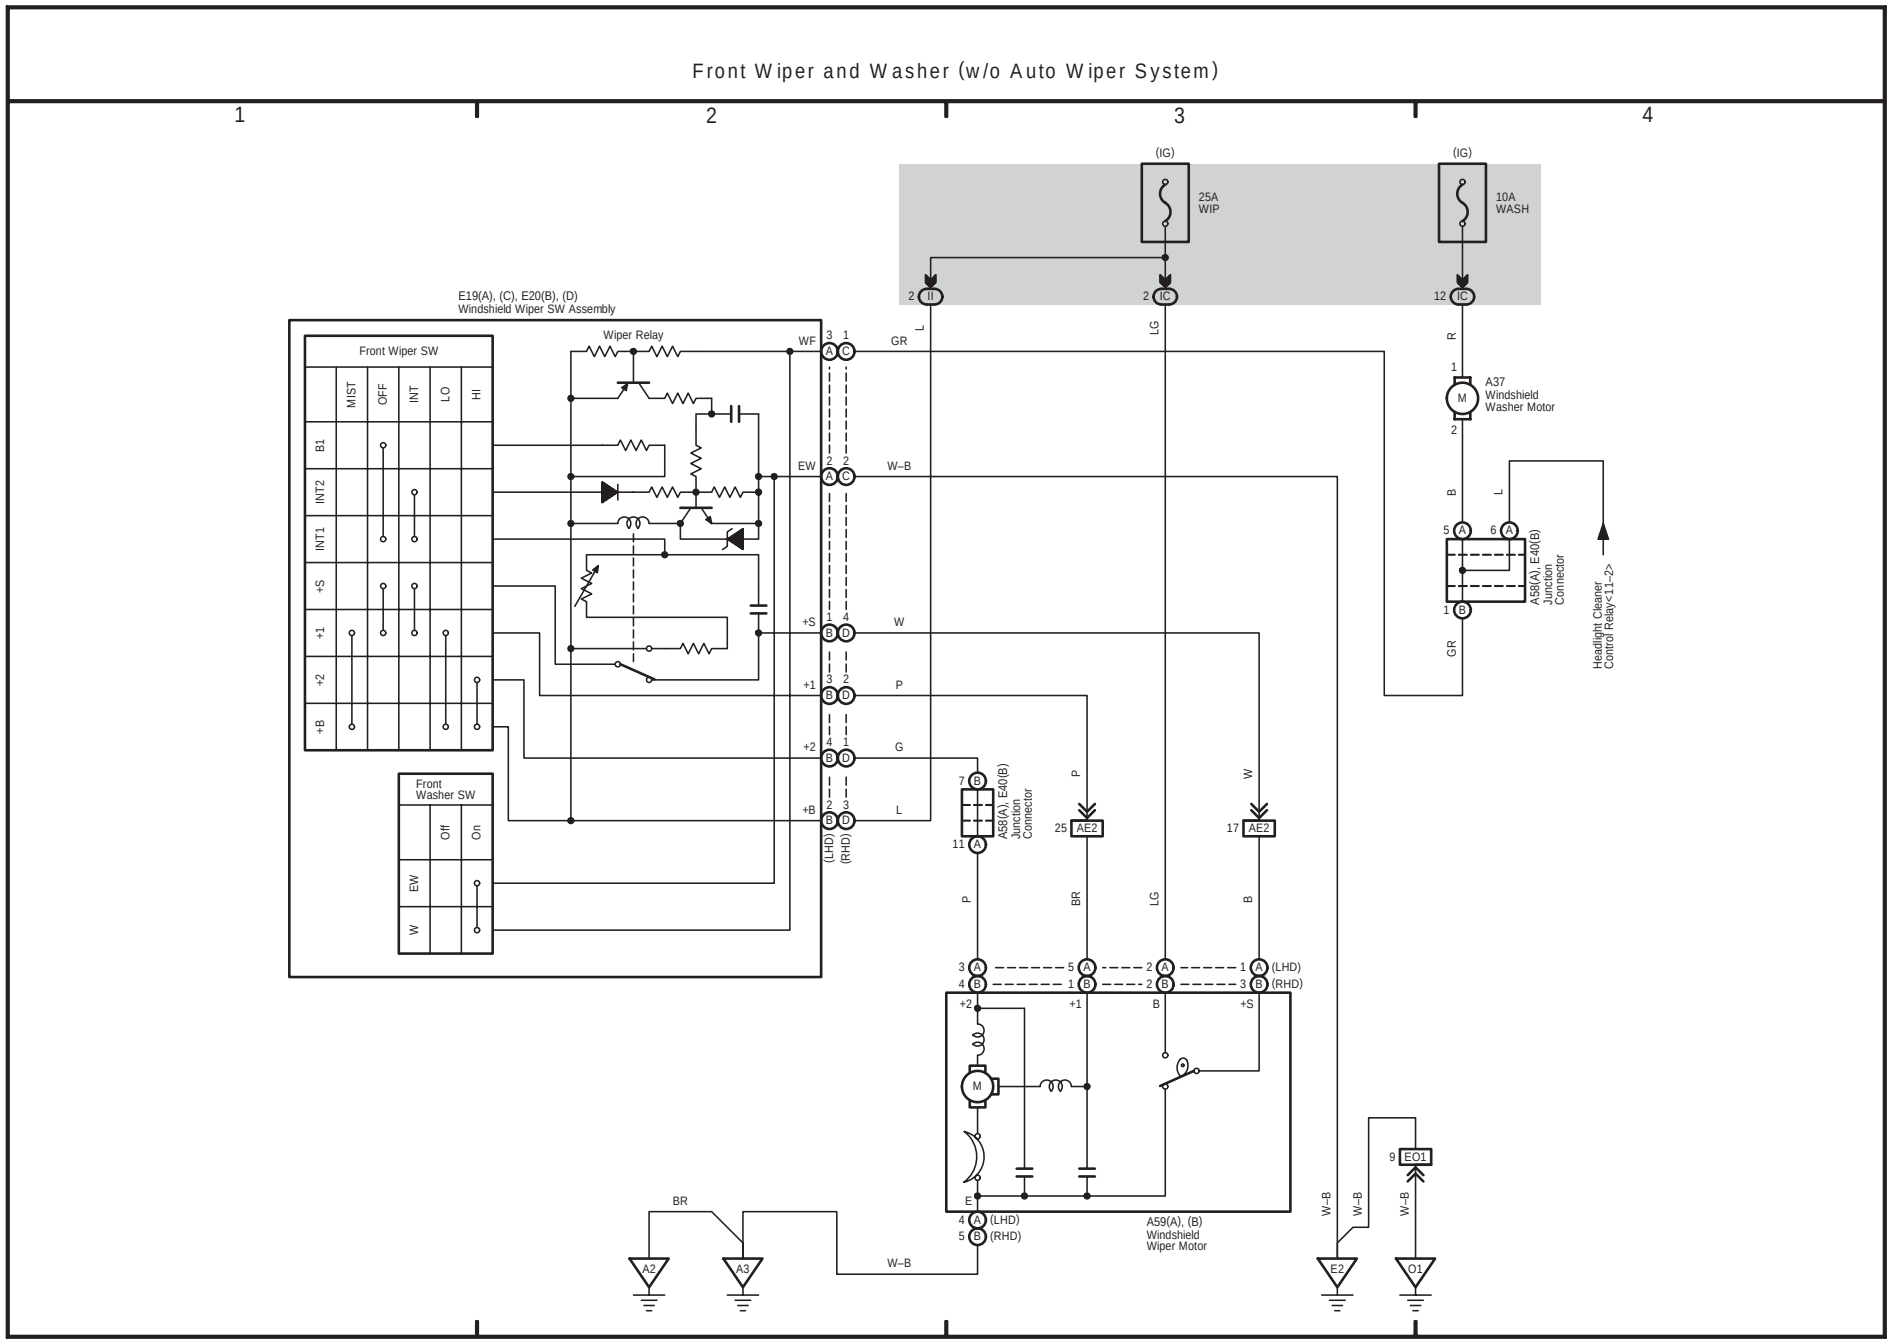

Front Wiper and Washer (w/o Auto Wiper System)
1
2
3
4
(IG)
25A
WIP
(IG)
10A
WASH
E19(A), (C), E20(B), (D)
Windshield Wiper SW Assembly
Front Wiper SW
MIST
OFF
INT
LO
HI
B1
INT2
INT1
+S
+1
+2
+B
Wiper Relay
Front
Washer SW
Off
On
EW
W
WF
EW
+S
+1
+2
+B
GR
W–B
W
P
G
L
(LHD)
(RHD)
A37
Windshield
Washer Motor
A58(A), E40(B)
Junction
Connector
Headlight Cleaner
Control Relay<11–2>
A59(A), E40(B)
Junction
Connector
AE2
AE2
A59(A), (B)
Windshield
Wiper Motor
BR
W–B
EO1
A2
A3
E2
O1