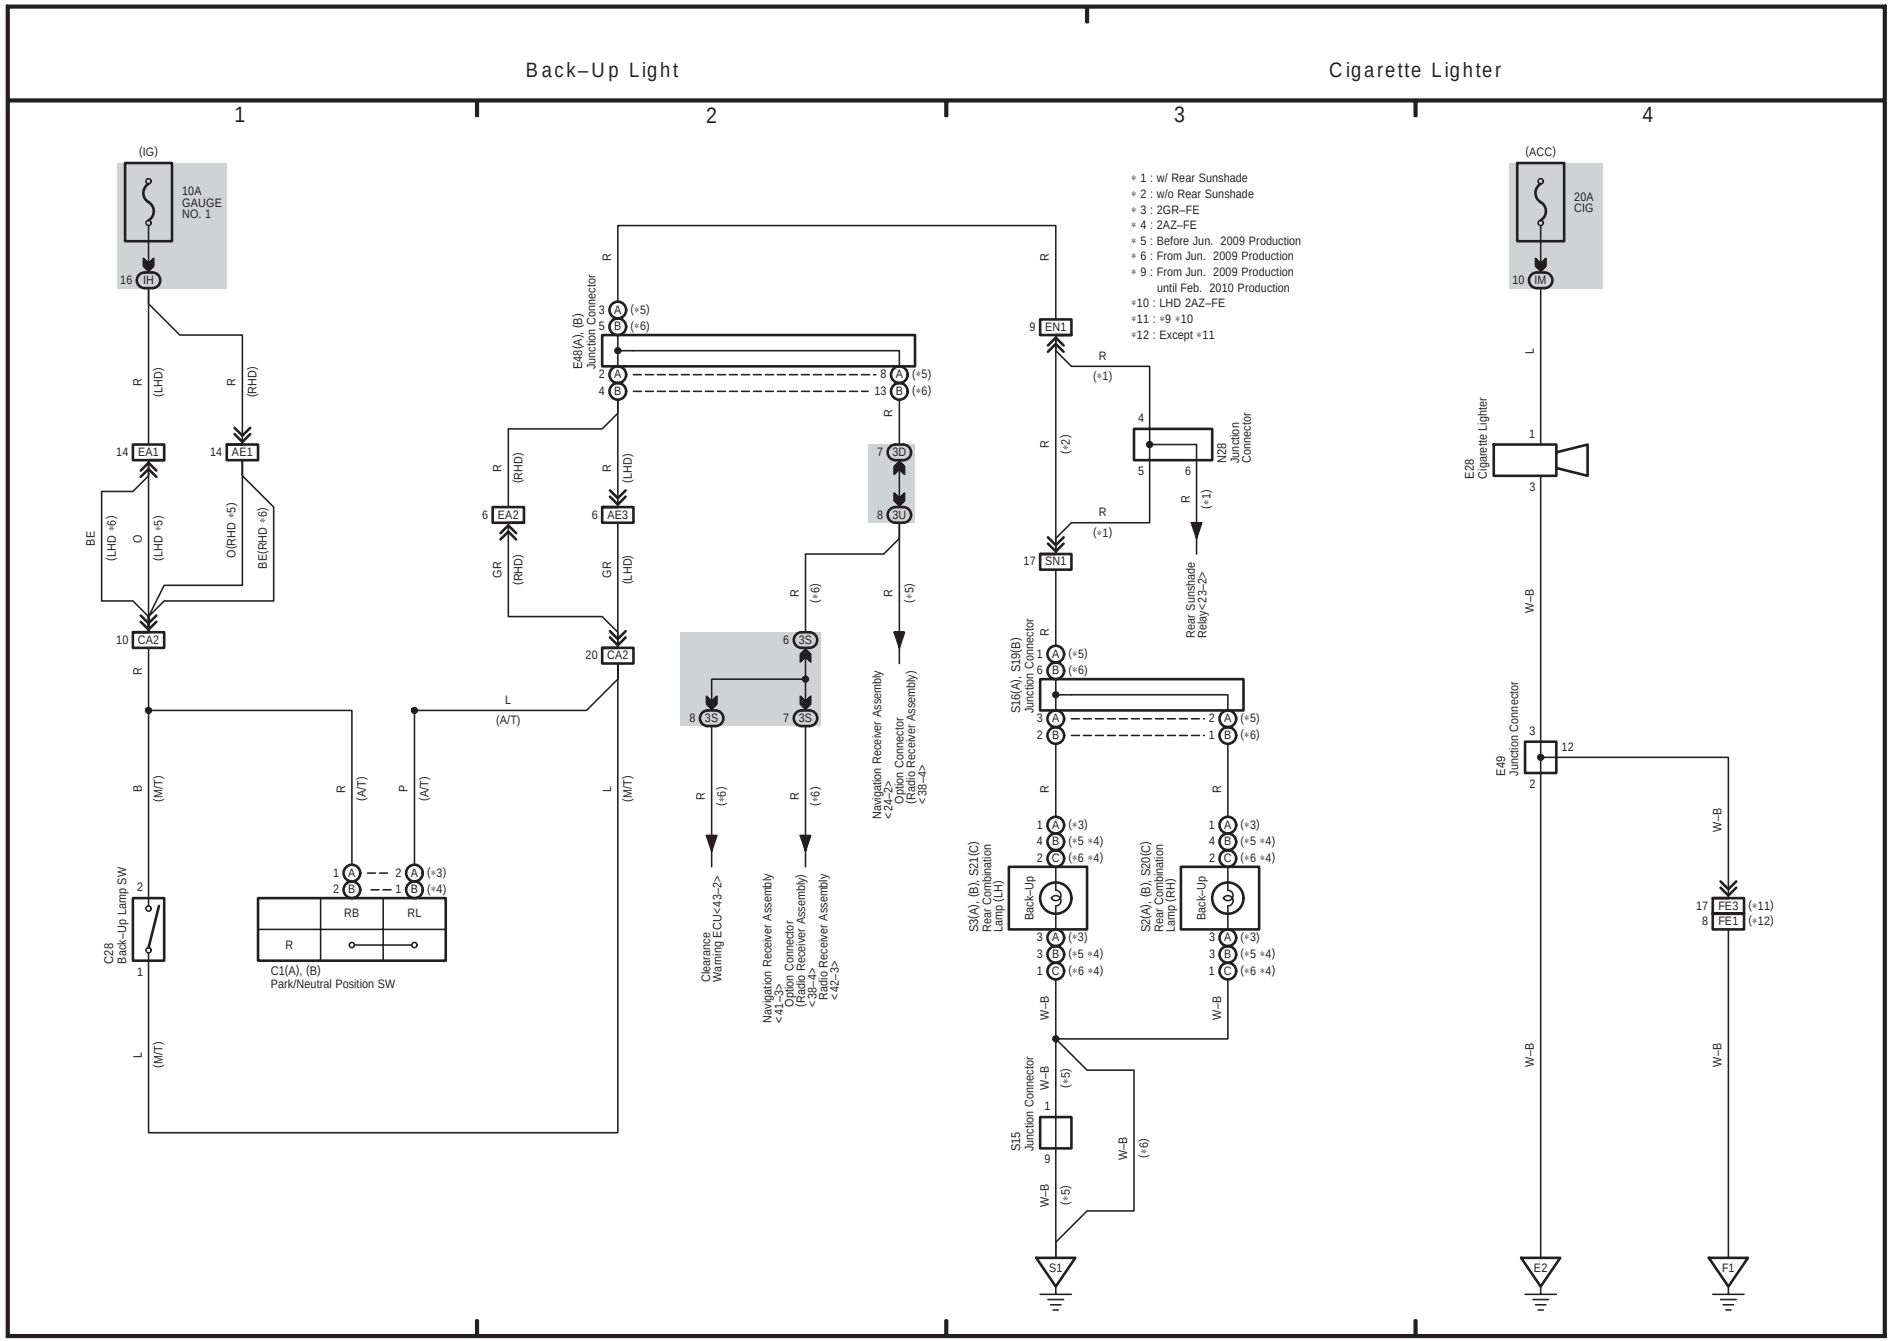

Back–Up Light
Cigarette Lighter
1
2
3
4
(IG)
10A GAUGE NO. 1
16 IH
14 EA1
14 AE1
10 CA2
C28 Back–Up Lamp SW
C1(A), (B) Park/Neutral Position SW
RB
RL
R
E48(A), (B) Junction Connector
6 EA2
6 AE3
20 CA2
7 3D
8 3U
6 3S
8 3S
7 3S
Clearance Warning ECU<43–2>
Navigation Receiver Assembly <41–13>
Option Connector (Radio Receiver Assembly) <38–4>
Radio Receiver Assembly <42–3>
Navigation Receiver Assembly <24–2> Option Connector (Radio Receiver Assembly) <38–4>
∗1 : w/ Rear Sunshade
∗2 : w/o Rear Sunshade
∗3 : 2GR–FE
∗4 : 2AZ–FE
∗5 : Before Jun. 2009 Production
∗6 : From Jun. 2009 Production
∗9 : From Jun. 2009 Production until Feb. 2010 Production
∗10 : LHD 2AZ–FE
∗11 : ∗9 ∗10
∗12 : Except ∗11
9 EN1
17 SN1
N28 Junction Connector
Rear Sunshade Relay<23–2>
S16(A), S19(B) Junction Connector
S3(A), (B), S21(C) Rear Combination Lamp (LH)
S2(A), (B), S20(C) Rear Combination Lamp (RH)
Back–Up
S15 Junction Connector
S1
(ACC)
20A CIG
10 IM
E28 Cigarette Lighter
E49 Junction Connector
17 FE3
8 FE1
E2
F1