




(BAT)
30A
P/SEAT
2
4 IO
LG
6 A
N27(A), U11(B)
Junction Connector
9 B
8 B
LG
LG
1
U7
Power Seat SW (Front LH Seat)
B
Front
Rear
Up
Down
Front
Rear
E
SLDF
Slide
SLDR
FUP
Front
Vertical
FDWN
RCLF
Reclining
RCLR
4
9
6
10
5
3
2
U8
Power Seat SW
(Front LH Seat Lumbar Support Control)
3
B
Front
Rear
E
H
R
R1
5
4
1
2
W–B
Y
W
W–B
6 kU1
11 kU1
Y
W
1
M
2
k2
Power Seat Motor
(Front LH Seat Lumbar
Support Control)
W–B
L
Y
G
B
P
BR
7 kU1
12 kU1
P
BR
2
M
1
U1
Power Seat Motor
(Front LH Seat Slide Control)
2
M
1
U2
Power Seat Motor
(Front LH Seat Front
Vertical Control)
1
M
2
k1
Power Seat Motor
(Front LH Seat Reclining Control)
3 B
2 B
4 B
N27(A), U11(B)
Junction Connector
5 A
W–B
1 EN1
W–B
E2


Up
Down
LUP
Lifter
LDWN
U7
Power Seat SW (Front LH Seat)
7
8
W
V
1
M
2
U4
Power Seat Motor
(Front LH Seat Lifter Control)


N 27
White

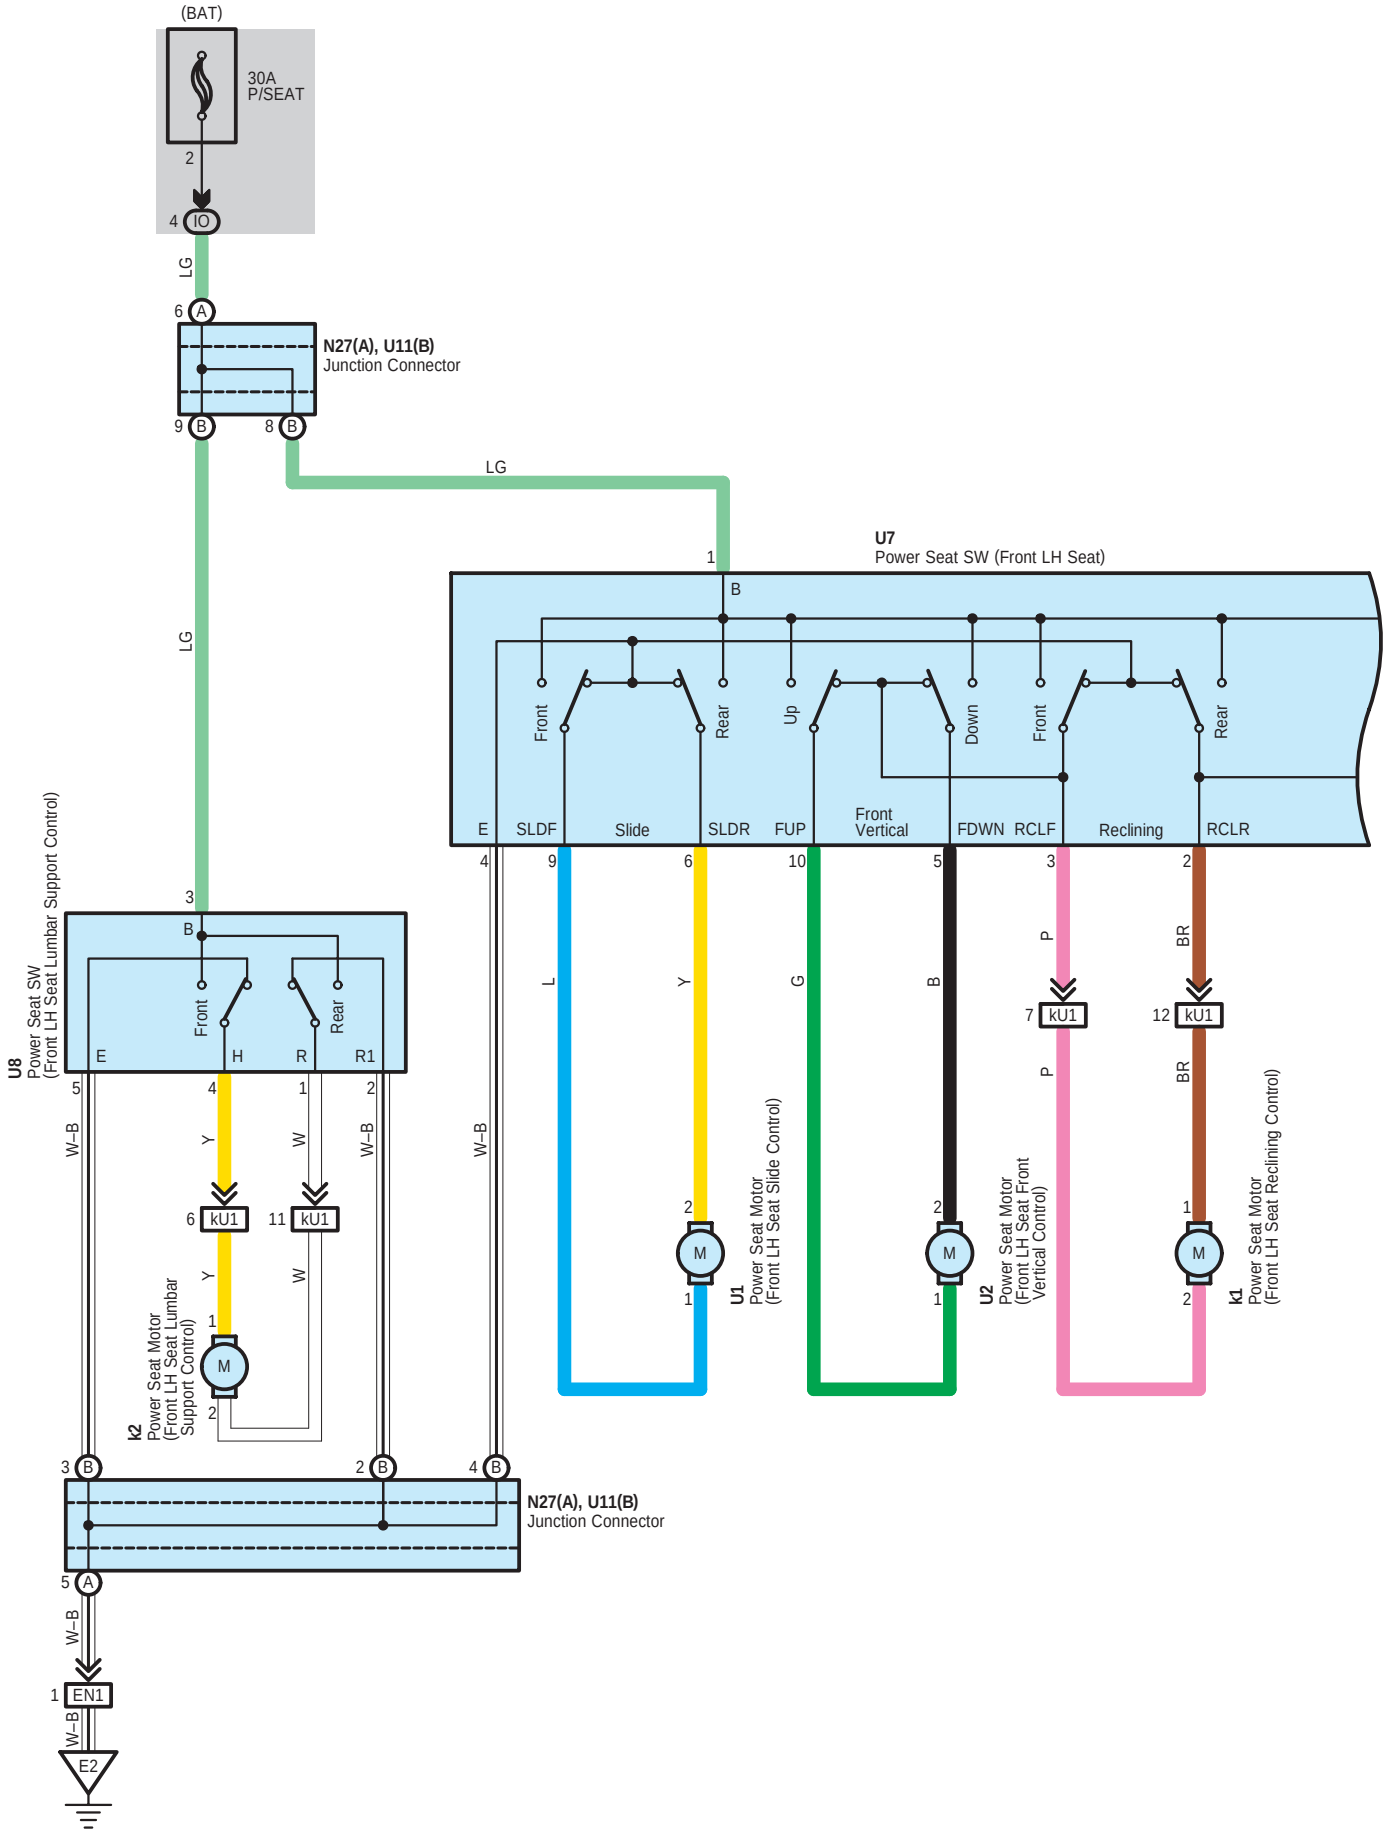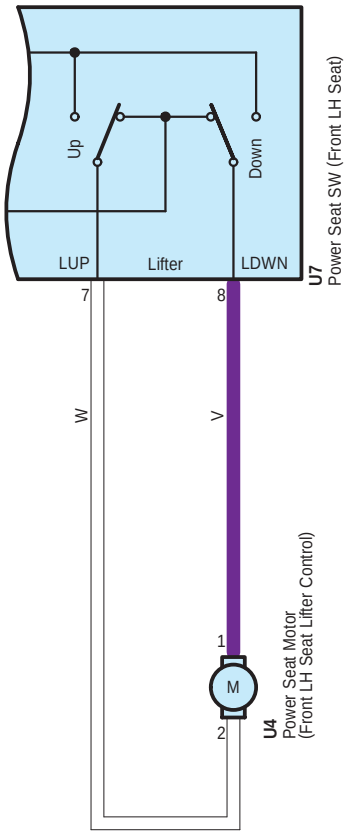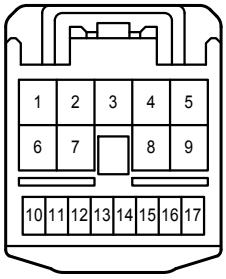


U 1
White




U 2
Orange




U 4
Blue




U 7
Black

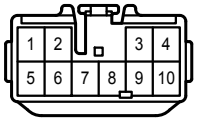


U 8
White

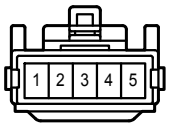


U 11
White

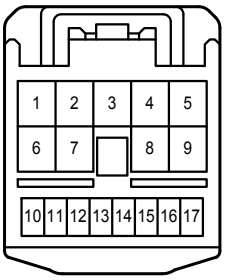


k 1
White




k 2
White



IO
White

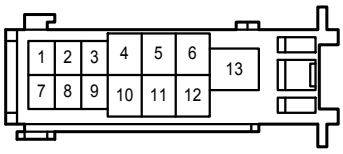

EN1
White

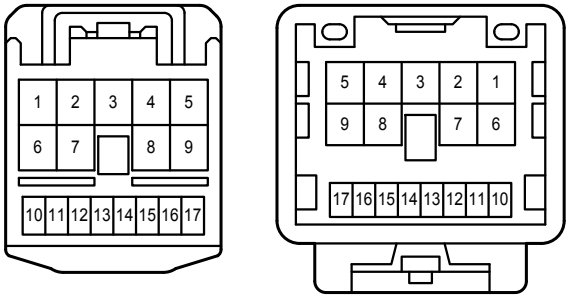

kU1
White

