



(BAT)
30A
P/SEAT
2
11 IL
G
6 EO1
G
6 A
O20(A), T18(B)
Junction Connector
9 B
8 B
G
G
3
1
T8
Power Seat SW (Front RH Seat)
T9
Power Seat SW
(Front RH Seat Lumbar Support Control)
B
B
Front
Rear
Front
Rear
E
H
R
E2
E
SLDF
Slide
SLDR
RCLF
Reclining
RCLR
5
4
1
2
4
9
6
3
2
Y
W
W-B
L
Y
P
BR
6 jT1
11 jT1
7 jT1
12 jT1
W-B
Y
W
W-B
W-B
P
BR
j2
Power Seat Motor
(Front RH Seat Lumbar
Support Control)
2
1
M
T1
Power Seat Motor
(Front RH Seat
Slide Control)
1
2
M
j1
Power Seat Motor
(Front RH Seat
Reclining Control)
1
2
M
3 B
2 B
4 B
O20(A), T18(B)
Junction Connector
5 A
W-B
1 EO1
W-B
E3


O 20
White

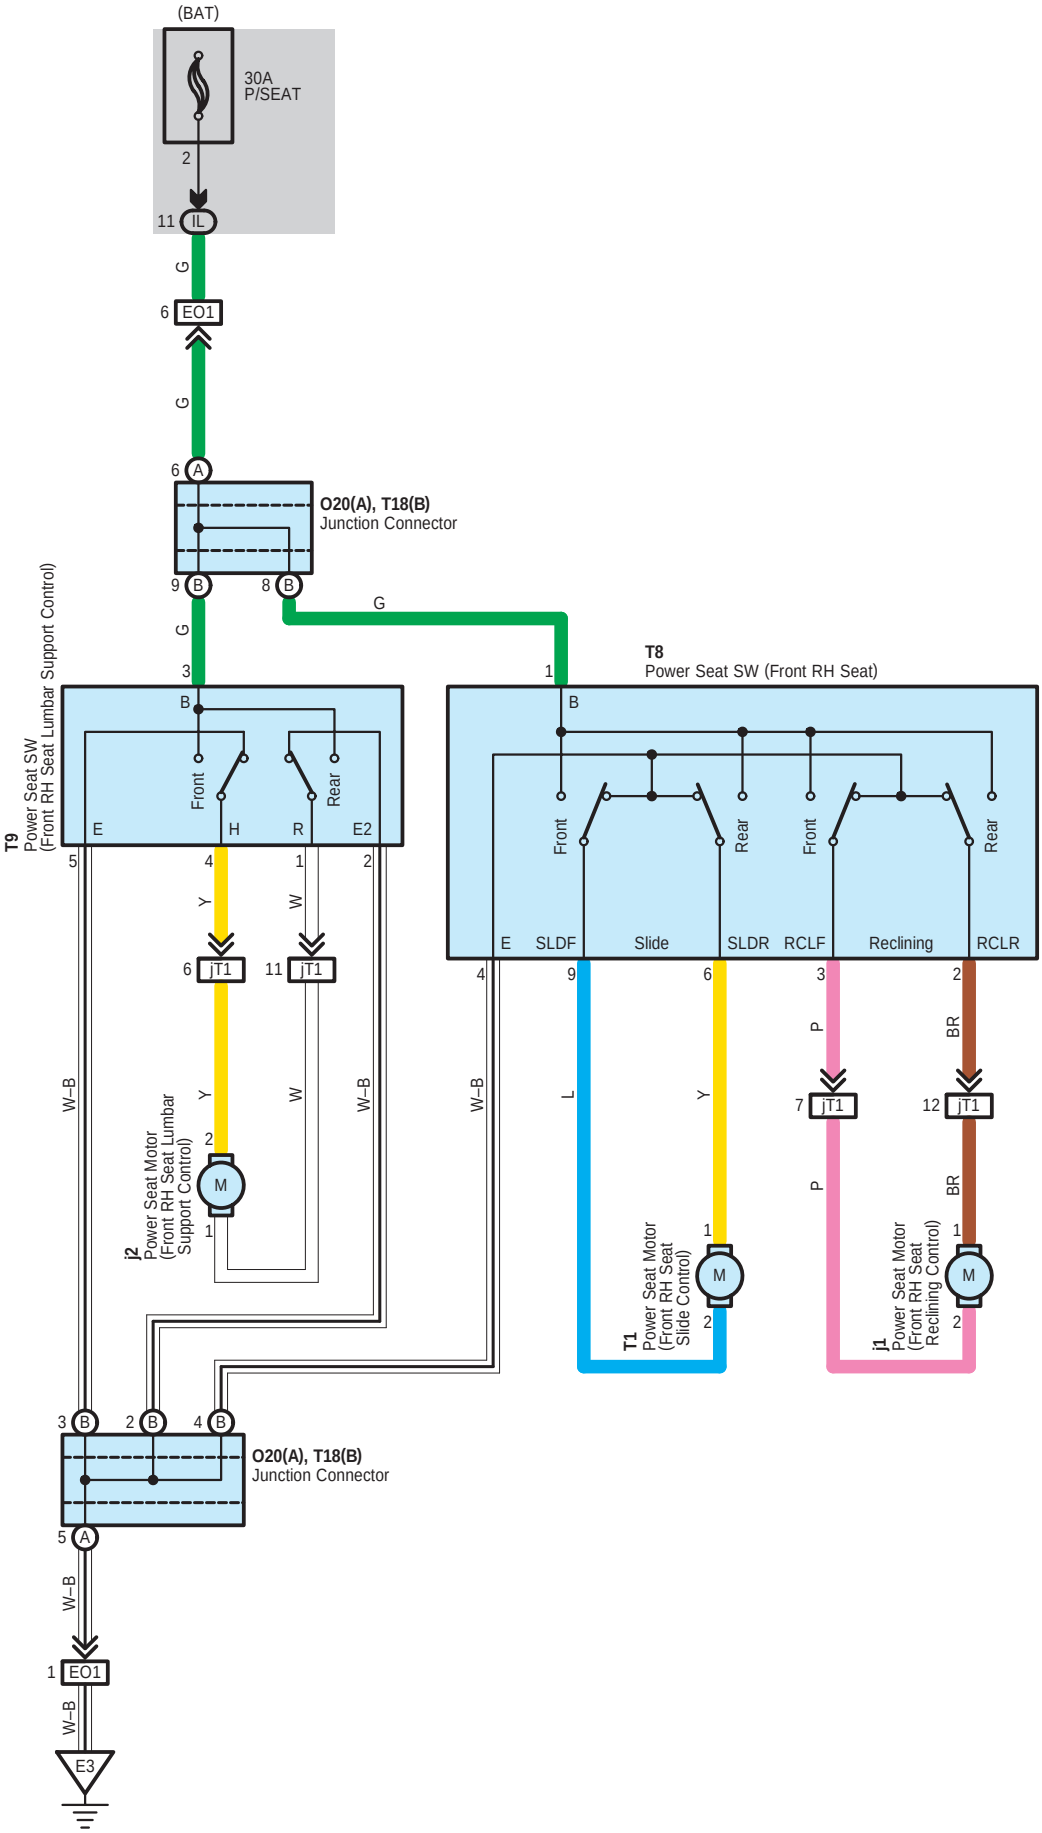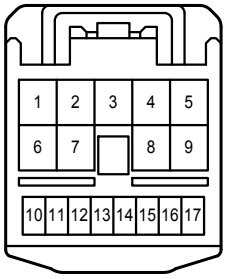


T 1
White




T 8
Black

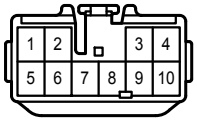


T 9
White

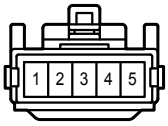


T 18
White

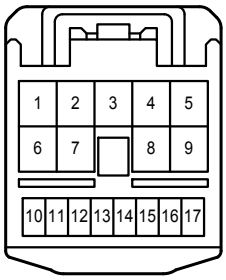


j 1
White




j 2
White



IL
White

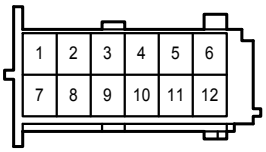

EO1
White

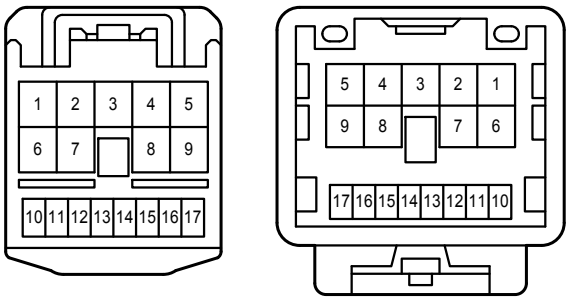

jT1
White

