
■ REMINDER METHOD

The timing chart of the buzzer and details of the reminder method are shown below.

▶ Timing Chart ◀

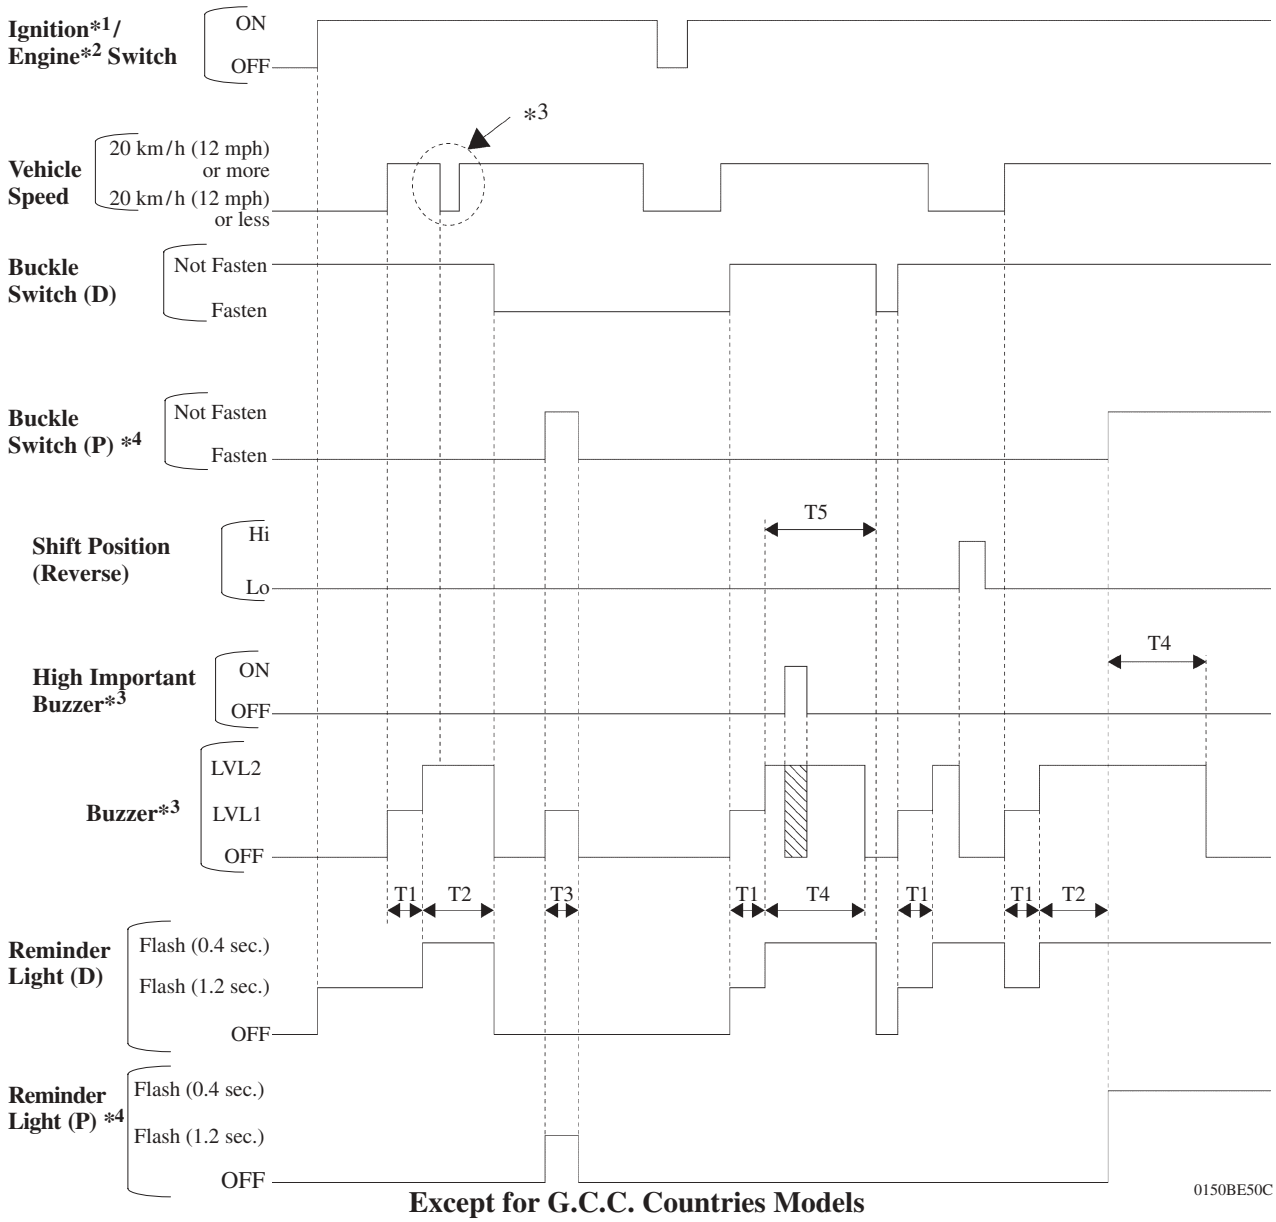


Except for G.C.C. Countries Models

T1: About 30 sec.
T2: About 90 sec. or less
T3: About 30 sec. or less
T4: About 90 sec.
T5: About 90 sec. or more

*1: Models without smart entry and start system
*2: Models with smart entry and start system
*3: Only for Australian models
*4: Except models for Australia
*5: If the vehicle speed drops below the setting level for seat belt warning after a buzzer begins to sound, the buzzer will continue to sound.
◆: The setting function can be changed using the customized body electronics system. For details, refer to Customized Body Electronics System section on page BE-14.

(Continued)

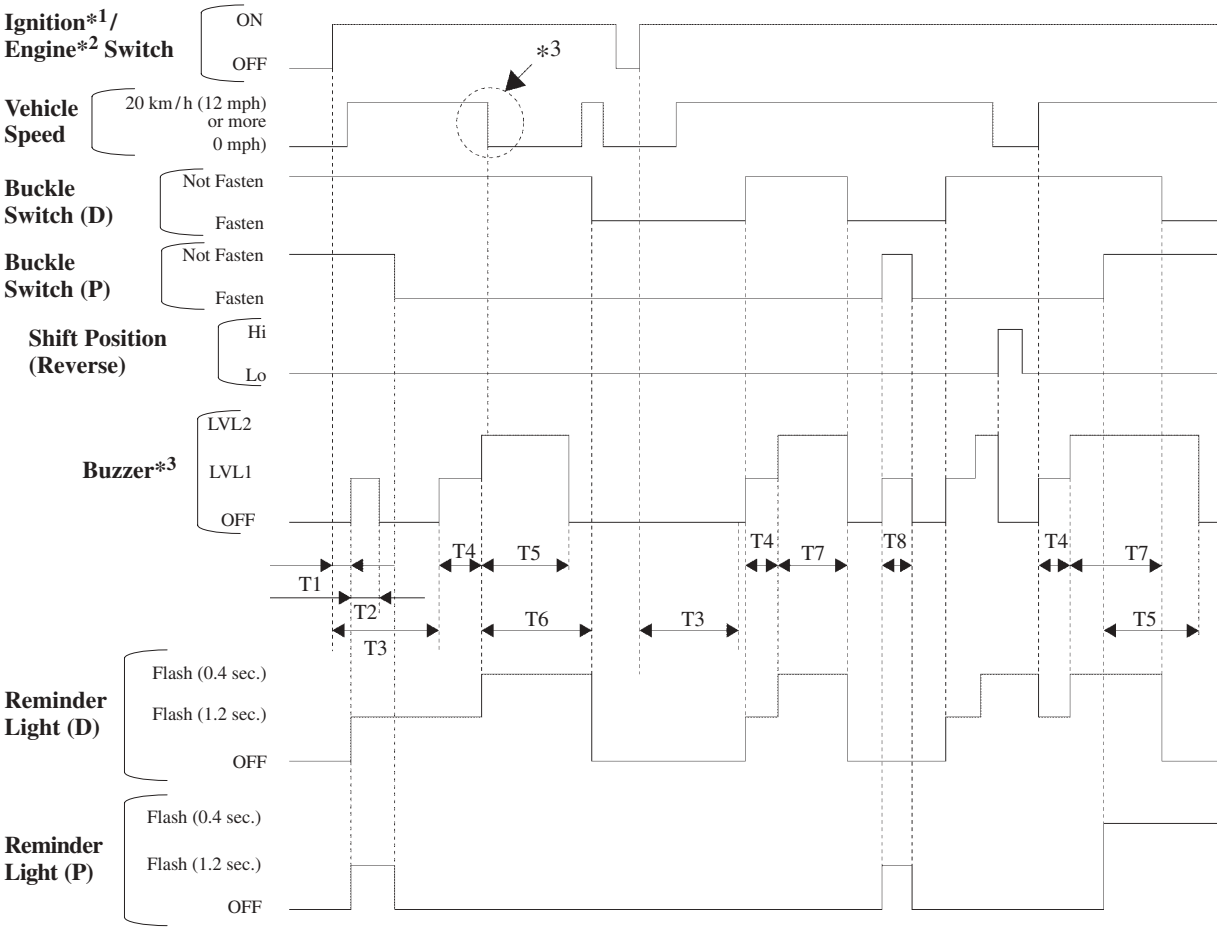

Only for G.C.C. Countries Models

0140BE193C

T1: About 1.8 sec.
T2: About 1.2 sec. x 5
T3: About 13.8 sec.
T4: About 9.6 sec.
T5: About 20 sec.
T6: About 20 sec. or more
T7: About 20 sec. or less
T8: About 9.6 sec. or less

*1: Models without smart entry and start system
*2: Models with smart entry and start system
*3: If the vehicle speed drops below the setting level for seat belt warning after a buzzer begins to sound, the buzzer will continue to sound. After the vehicle speed exceeds 20 km/h (12 mph) again, the buzzer will stop.