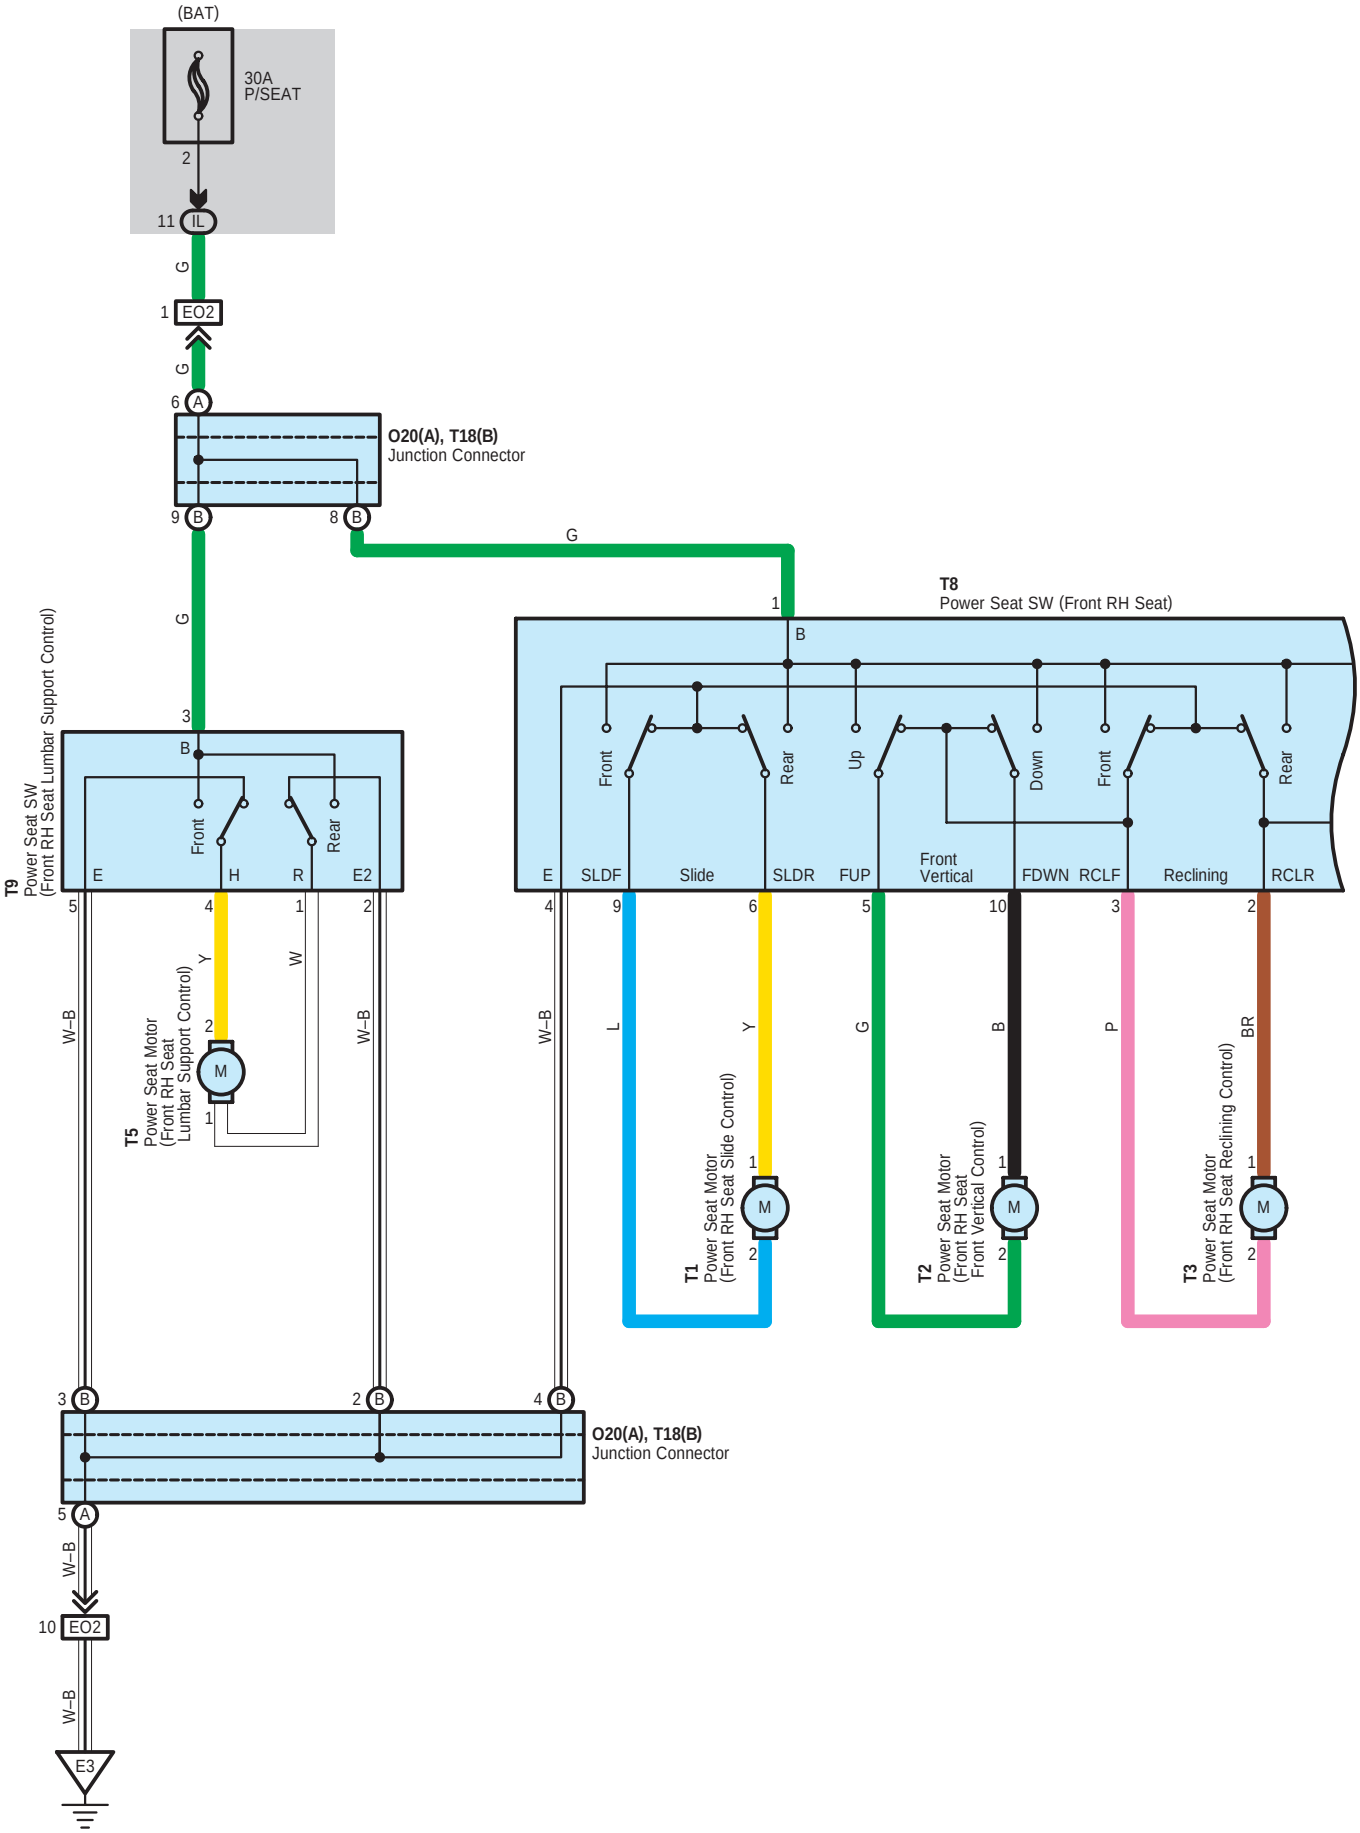
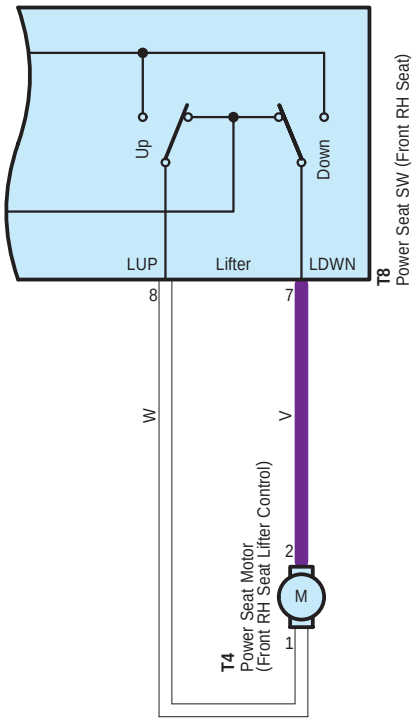
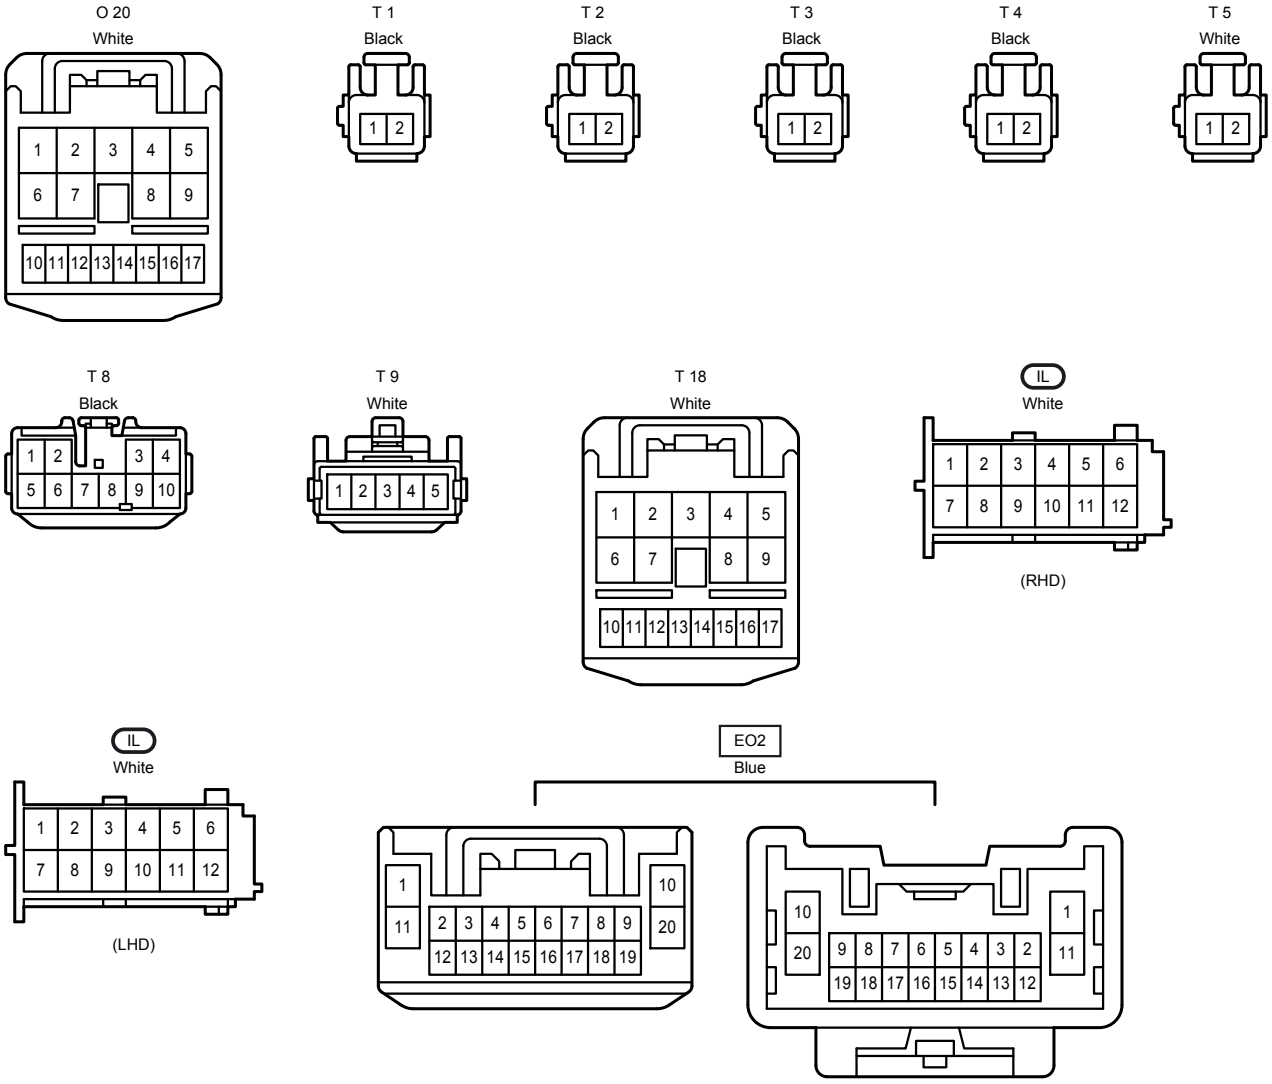

(BAT)
30A
P/SEAT
2
11 IL
G
1 EO2
G
6 A
O20(A), T18(B)
Junction Connector
9 B
8 B
G
G
1
T8
Power Seat SW (Front RH Seat)
B
Front
Rear
Up
Down
Front
Rear
E
SLDF
Slide
SLDR
FUP
Front
Vertical
FDWN
RCLF
Reclining
RCLR
4
9
6
5
10
3
2
T9
Power Seat SW
(Front RH Seat Lumbar Support Control)
3
B
Front
Rear
E
H
R
E2
5
4
1
2
Y
W
W–B
W–B
2
M
1
T5
Power Seat Motor
(Front RH Seat
Lumbar Support Control)
W–B
L
Y
G
B
P
BR
1
M
2
T1
Power Seat Motor
(Front RH Seat Slide Control)
T2
Power Seat Motor
(Front RH Seat
Front Vertical Control)
T3
Power Seat Motor
(Front RH Seat Reclining Control)
3 B
2 B
4 B
O20(A), T18(B)
Junction Connector
5 A
W–B
10 EO2
W–B
E3


Up
Down
LUP
Lifter
LDWN
T8
Power Seat SW (Front RH Seat)
8
7
W
V
2
M
1
T4
Power Seat Motor
(Front RH Seat Lifter Control)


O 20
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
T 1
Black
1 2
T 2
Black
1 2
T 3
Black
1 2
T 4
Black
1 2
T 5
White
1 2
T 8
Black
1 2 3 4
5 6 7 8 9 10
T 9
White
1 2 3 4 5
T 18
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
IL
White
1 2 3 4 5 6
7 8 9 10 11 12
(RHD)
IL
White
1 2 3 4 5 6
7 8 9 10 11 12
(LHD)
EO2
Blue
1 11 10 20
2 3 4 5 6 7 8 9
12 13 14 15 16 17 18 19
10 20 1 11
9 8 7 6 5 4 3 2
19 18 17 16 15 14 13 12