
QUARTER PANEL END HOUSING (ASSY)

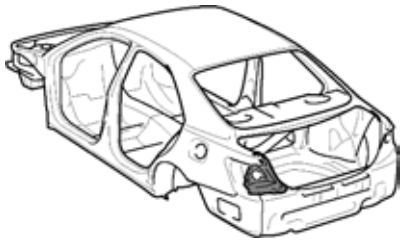


F25745A

Symbol meaning

REMOVAL	▲1 ▲2 : Remove Weld Points	: Cut with disc sander, etc.
INSTALLATION	●1 I : MIG Plug Weld	

F25745B

REMOVAL·INSTALLATION

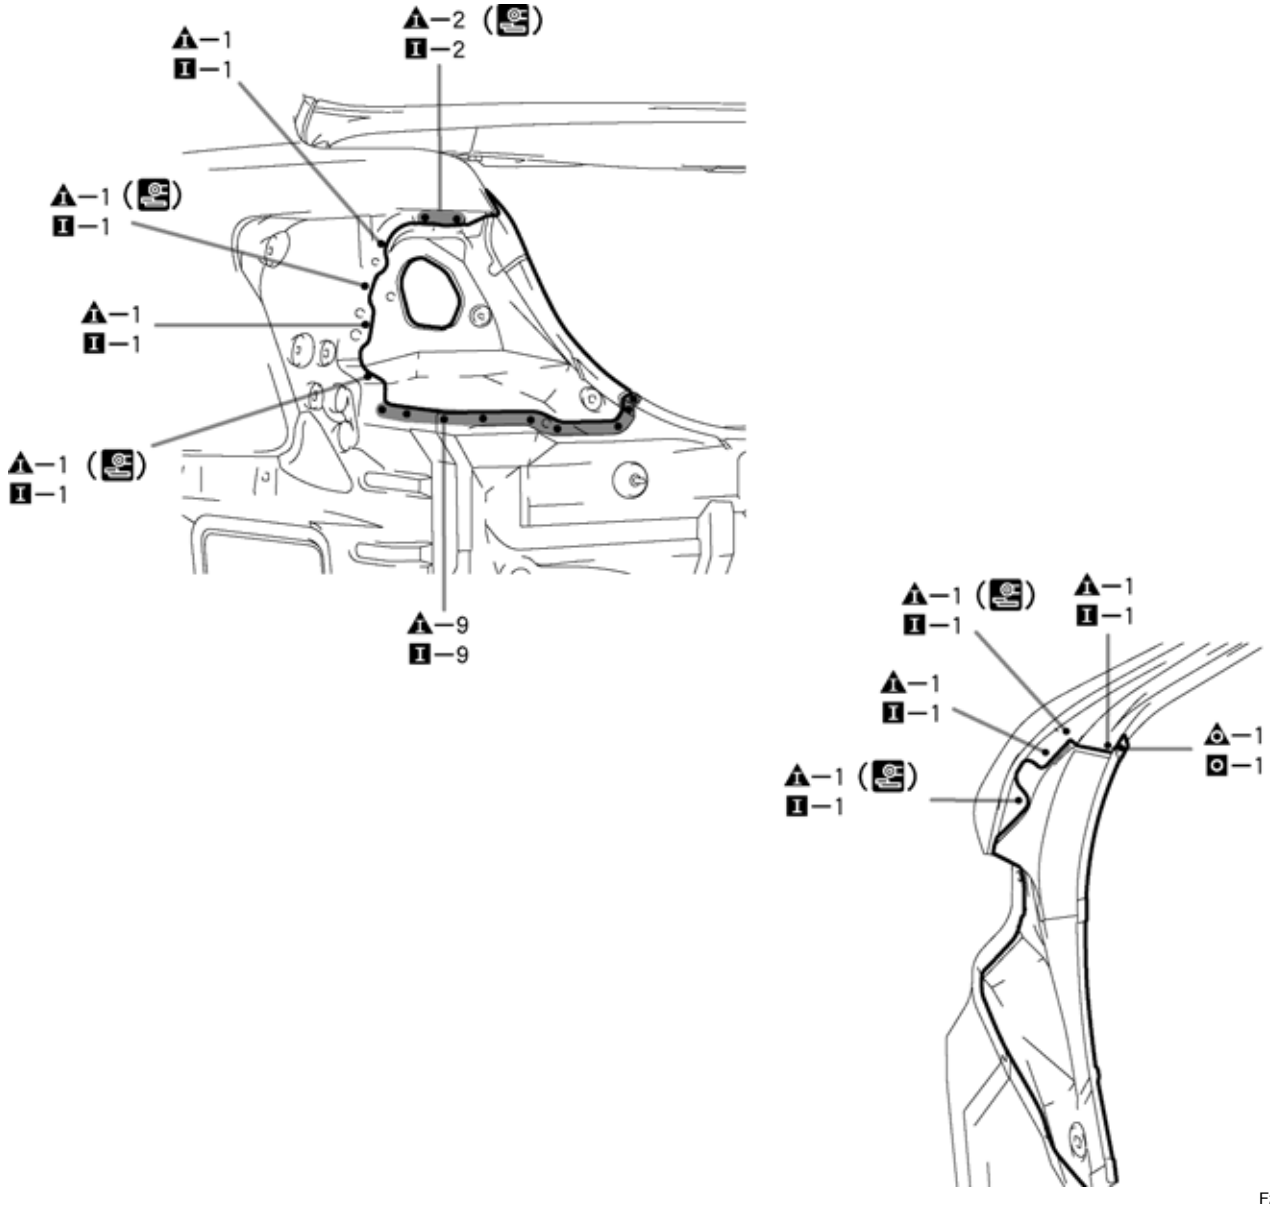

F25745

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.