
HANDS-FREE SYSTEM

■BLUETOOTH HANDS-FREE SYSTEM


1. General


- A Bluetooth hands-free system has been provided for the new Camry. The settings vary in accordance with the destinations and engine types. For details, see the equipment list in Model Outline (see page MO-42).
- Bluetooth is a short-distance, high-speed wireless data communication system that uses the 2.4 GHz frequency band prescribed by the Bluetooth SIG (Special Interest Group).
- This system enables drivers to place or receive phone calls using a cellular phone without releasing their hands from the steering wheel.
- The Bluetooth hands-free system can be operated by touching icons indicated on the navigation and radio assembly.

2. System Diagram

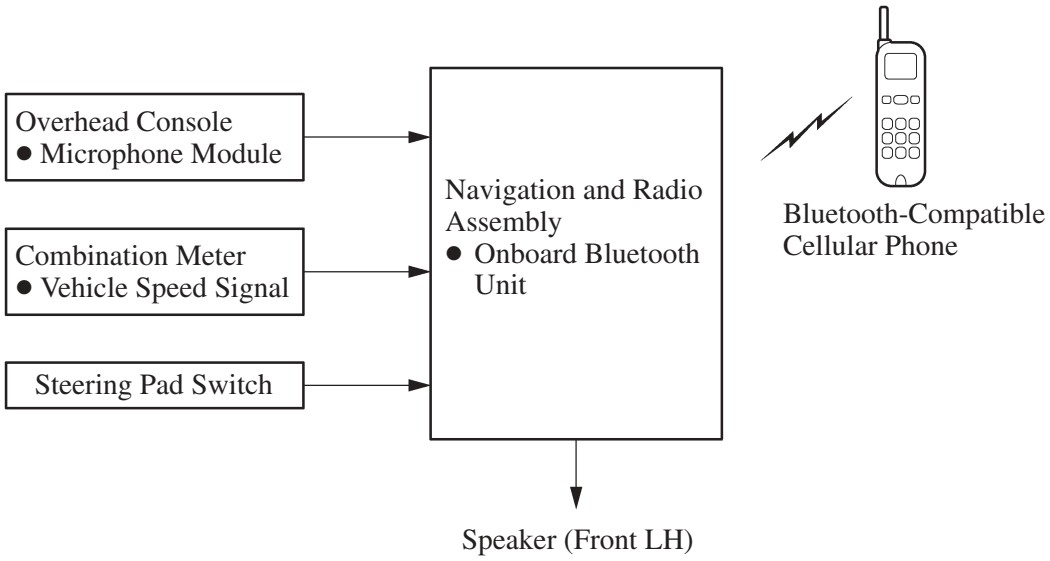

3. Layout of Main Components

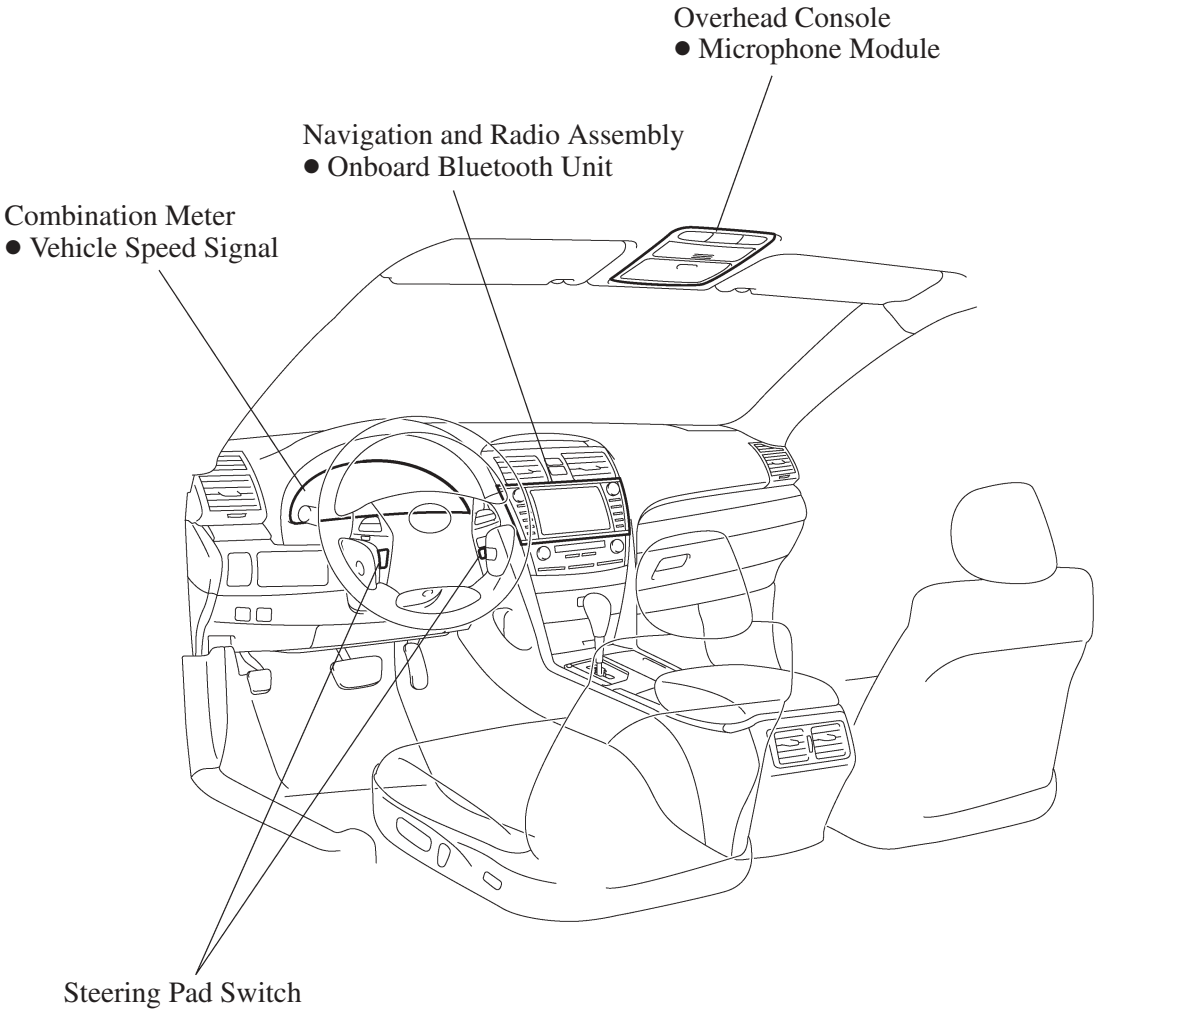

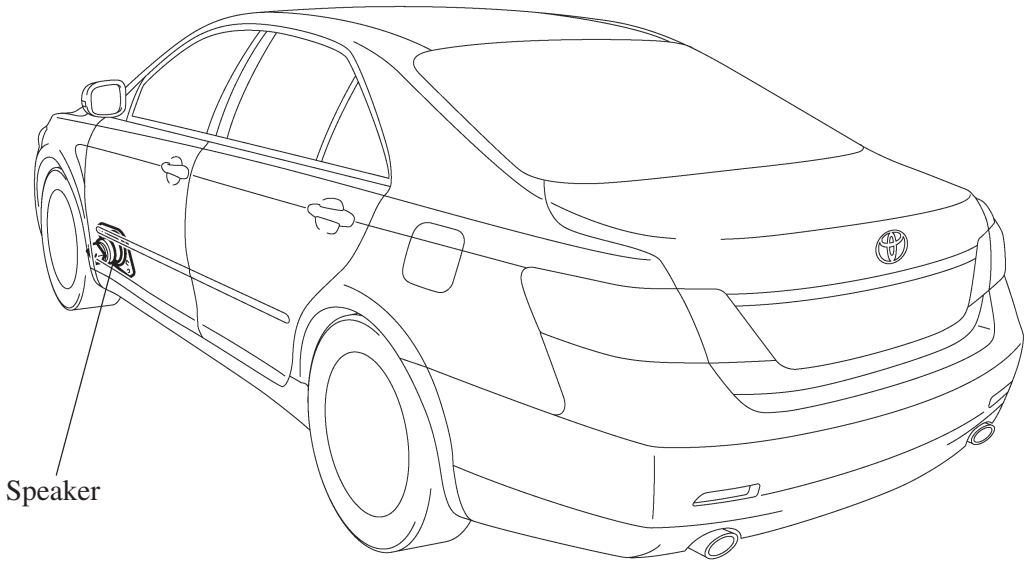

02KBE40TE

4. Hands-Free Functions

The Bluetooth hands-free system has the following functions. However, for safety, some functions may not be selectable when the vehicle is being driven.

Function		Outline
Call with Bluetooth phone	By dial	The user can call by inputting a telephone number.
	By phonebook	The user can call by using the phonebook data that have been transferred from the user's cellular phone. The user can register up to 1000 numbers in the phonebook.
	By dialed numbers	The user can call by selecting a previously dialed number. The system remembers up to five dialed numbers. If more than five numbers have been dialed, the oldest number will no longer be remembered.
	By received calls	The user can call by selecting the telephone number of a received call. When a call is received, the system will remember the last five numbers. If more than five calls have been received, the oldest number will no longer be remembered.
	By speed dial*	The user can call by using registered telephone numbers that the user selects from the phonebook, dialed numbers or received calls.
	By voice recognition (Dialing by name)	The user can call by giving a name registered in the phonebook.
	By voice recognition (Dialing by phone number)	The user can call by giving a desired number.
	By POI (Point of Interest) call	The user can call by operating a switch when "Call" is displayed on the screen of the navigation system.
Receive call with Bluetooth phone		When a call is received, the receive screen is displayed with a sound.
Talk on the Bluetooth phone		While user is talking on the phone, the talking screen is displayed.
Change the settings of the Bluetooth phone	Registering the speed dial	The user can register the desired telephone number from the phonebook, dialed numbers or received calls. Up to 17 speed dial numbers can be registered.
	Setting the volume	The user can set the volume.
		Automatic volume settings for high speed: When the vehicle speed is over 80 km/h (50 mph), the volume automatically increases by 3 dB from the volume set by the user. When the vehicle speed decreases to 70 km/h (44 mph) or lower, the volume returns to the previous volume setting.
		Initializing the settings: The user can initialize the settings.
	Setting the screen	Receiving call display: The user can select the receiving call display.
		Auto answer: When a call is received, the display automatically changes to the talking screen and user can start to talk on the phone (without touching any switch) after a preset time.
		The Bluetooth connection status at startup: When the user turns the power source to ACC or IG-ON and the Bluetooth is automatically connected, the connection check is displayed.
		Initializing the settings: The user can initialize the settings.

*: The user can operate it while driving.

(Continued)

Function		Outline
Change the setting of the Bluetooth phone	Setting the phonebook	Registering phone number: The user can register phone numbers in the phonebook.
		Transferring a telephone number: The user can transfer the telephone numbers from the user's Bluetooth phone to the system. Up to 1,000 pieces of data (up to 2 numbers per entry) can be registered in the phonebook.
		Registering the phonebook data: The user can register the phonebook data.
		Editing the name: If no name has been inputted, the number is displayed.
		Editing the phone number: The user can register a phone number in "TEL1" and "TEL2" separately. Up to 2 numbers per phonebook entry can be registered.
		Selecting the group: The user can set a group for a contact. It will then be easier for the user to find this contact when needed, by using the grouping display.
		Setting the voice recognition: The user can set the voice recognition. Up to 20 numbers can be registered to allow voice recognition.
		Adding data to the phonebook: The user can add data to the phonebook.
		Editing the data: The user can edit the registered data.
		Deleting the data: The user can delete the data.
		Deleting all the phone data: The user can delete all the phone data.
		Registering group names: The user can register 20 groups.
		Selecting group icons: The user can select the desired icon.
		Editing a group name: The user can input the name with the software keyboard.
		Deleting a group name: The user can delete the group names individually or all at once.
		Deleting the log data: The user can delete the log data individually or all at once.
Change the settings of the Bluetooth phone	Setting the security	By setting the security, the user can prevent people from using some functions of the hands-free system. It is useful when the user leaves the car with a hotel or valet parking or the user doesn't want others to see the data that the user has registered.
		Changing the security code: The security code is 4 digits and the default is "0000". Choose a new code that is hard for other people to guess.
		Phone book lock: The user sets the phonebook lock.
		Initializing the security code: The user can initialize the settings.

(Continued)

Function		Outline
Set a Bluetooth phone	Enter the Bluetooth phone	In order to use the hands-free function of a Bluetooth phone, it is necessary to register it in the audio head unit. Once a phone is registered, the hands-free function becomes available automatically. The user can register up to 6 Bluetooth phones.
	Select the Bluetooth phone	When two or more registered Bluetooth phones are in the cabin, it is necessary to select which phone to use to prevent the lines from being crossed. Only the selected phone is available for use as a hands-free phone. The phone registered last is automatically selected.
	Indicate and change Bluetooth information	The user can set, change and initialize the information of the Bluetooth phone displayed on the screen.
	Deleting a Bluetooth phone	A registered Bluetooth phone can be unregistered from the multi display.
	Displaying the information of the Bluetooth phone user delete	The user can display the information about a Bluetooth phone before deleting it and can ensure that the correct telephone will be deleted.