




(IG)
7. 5A
A/C–IG1
2
22 3B
I56
A/C Control Assembly
IG+
GND
LIN1
2
6
9
R
W–B
V
(*1 *3)
(*1 *4)
(*2)
I175
Junction
Connector
I77
A/C Amplifier Assembly
LIN1
SG–2
S5–3
PRE
37
13
10
9
GR
V
R
IA8
14 A
13 A
A70(A)
Junction Connector
B
1
3
2
–
+
PR
A55
A/C Pressure Sensor
(A/C Tube & Accessory Assembly)
I3
* 1 : 3–Zone A/C
* 2 : 2–Zone A/C
* 3 : Before Jan. 2012 Production
* 4 : From Jan. 2012 Production



I77
A/C Amplifier Assembly
CANL
CANH
12
11
A25(A), E26(B)
ECM
CANH
CANL
THW
ETHW
NE+
NE–
RFC
13 A
26 A
114 B
117 B
76 B
109 B
5 A
B
W
B
P
G
R
G
(Shielded)
15 IA8
14 IA8
2
THW
E2
1
E47
E. F. I. Engine Coolant Temperature Sensor
E72
Crank Position Sensor
I102(E), I104(F), I105(G)
Junction Connector
W
V
P
W
2 E
1 E
1 F
2 F
1 G
2 G
Y
W
BR
6 B
7 B
E76(B)
Junction Connector
7 IA8
8 IA8
GR
W
BR
Front Speed Sensors
W
B
L
G
8
19
4
16
26
14
CANH
CANL
FL–
FL+
FR–
FR+
RL–
RL+
RR–
RR+
18
31
29
17
G
R
W
B
A49
Brake Actuator Assembly
Rear Speed Sensors
G
E1


(BAT)
(IG)
50A
FAN
10A
ECU–IG1
NO. 1
1J
3D
W
V
FAN Relay
z14(B)
Cooling Fan Motor
z15(C)
No. 2 Cooling Fan Motor
B
+B1
SI
E1
A10(A), z14(B), z15(C)
Cooling Fan ECU
W–B
G
A1
A2
A73
Junction Connector


A 10
Black

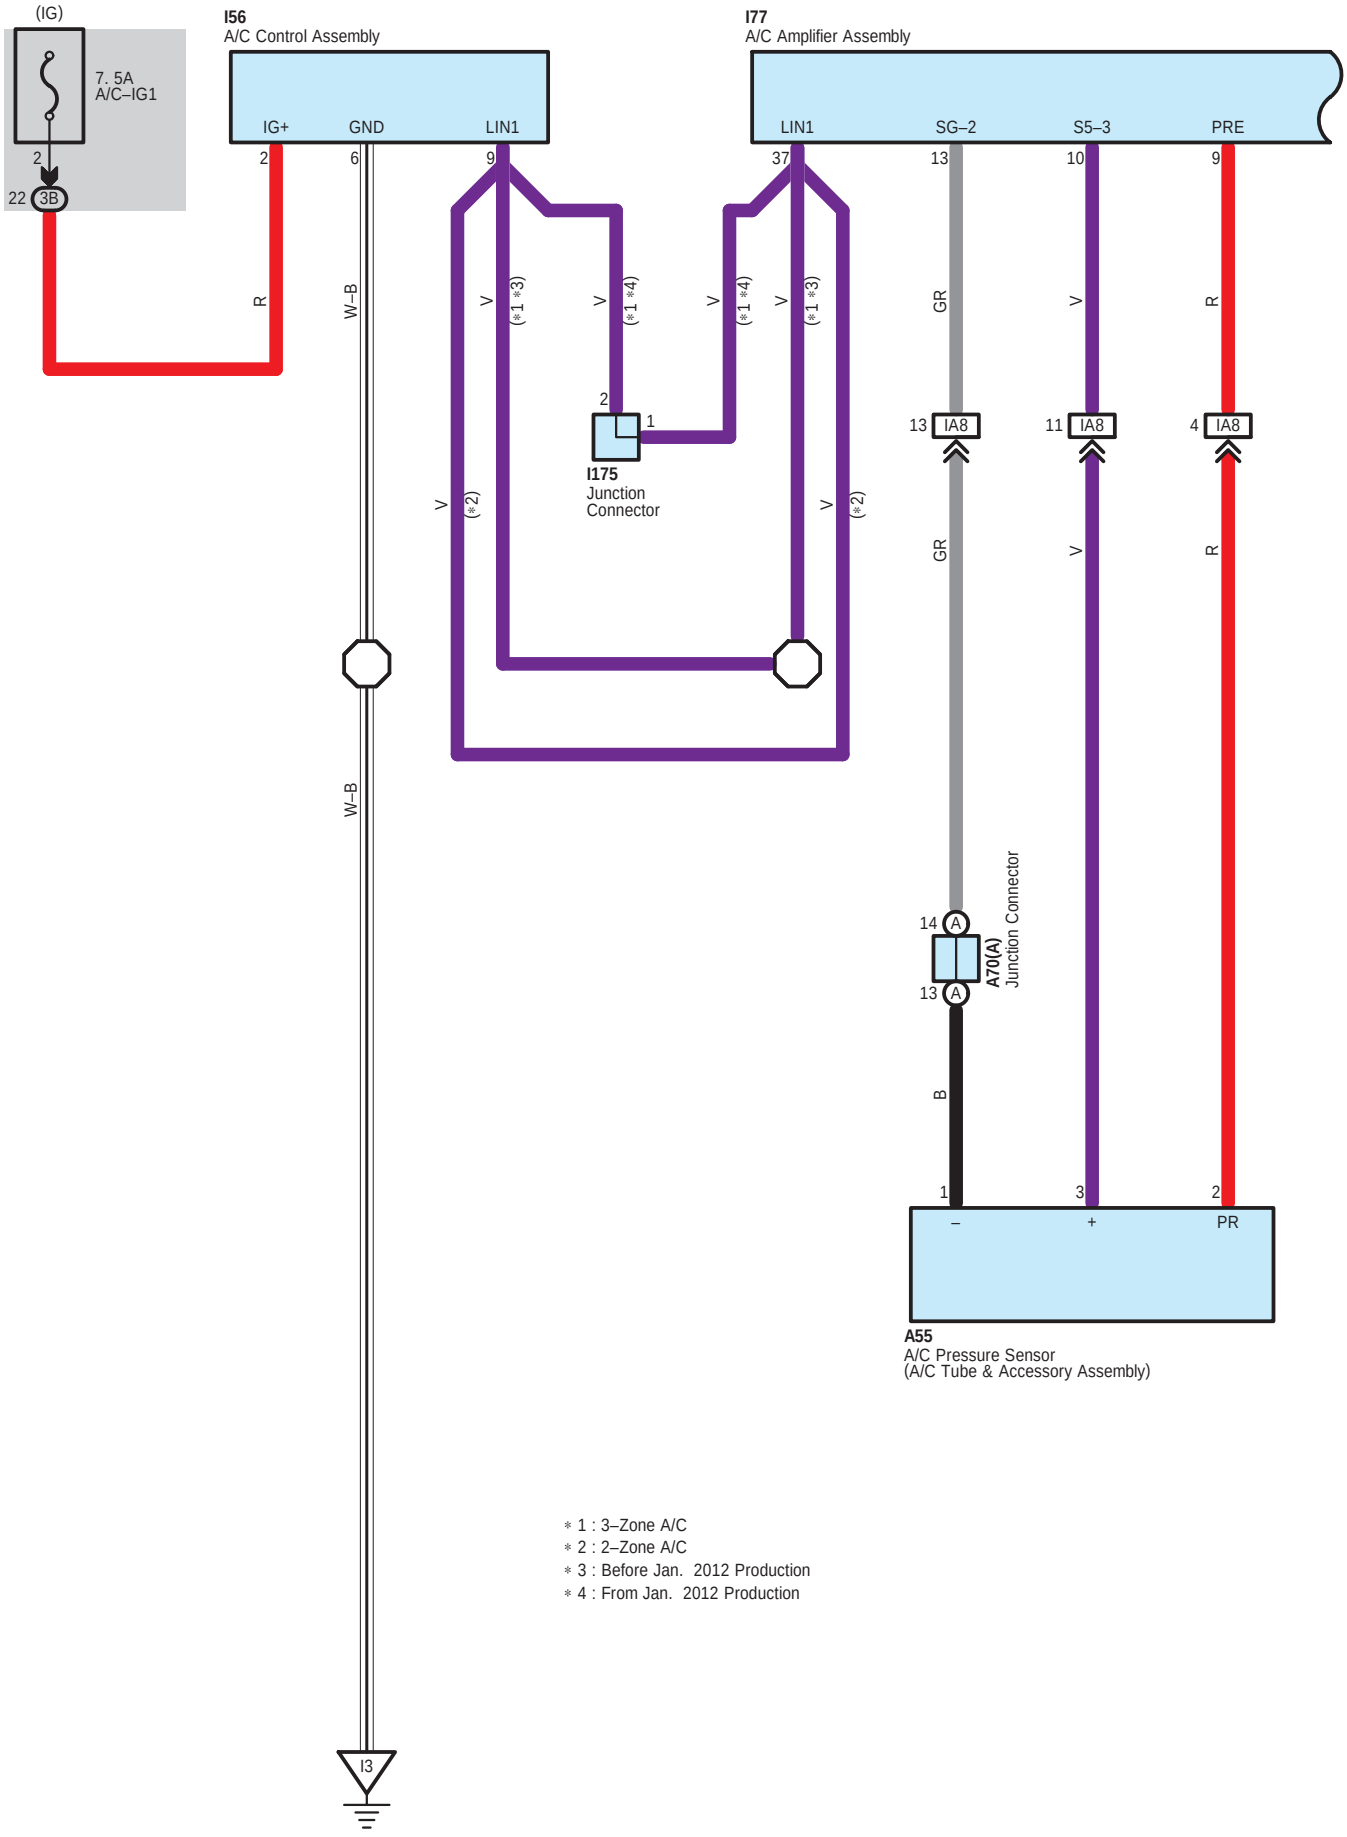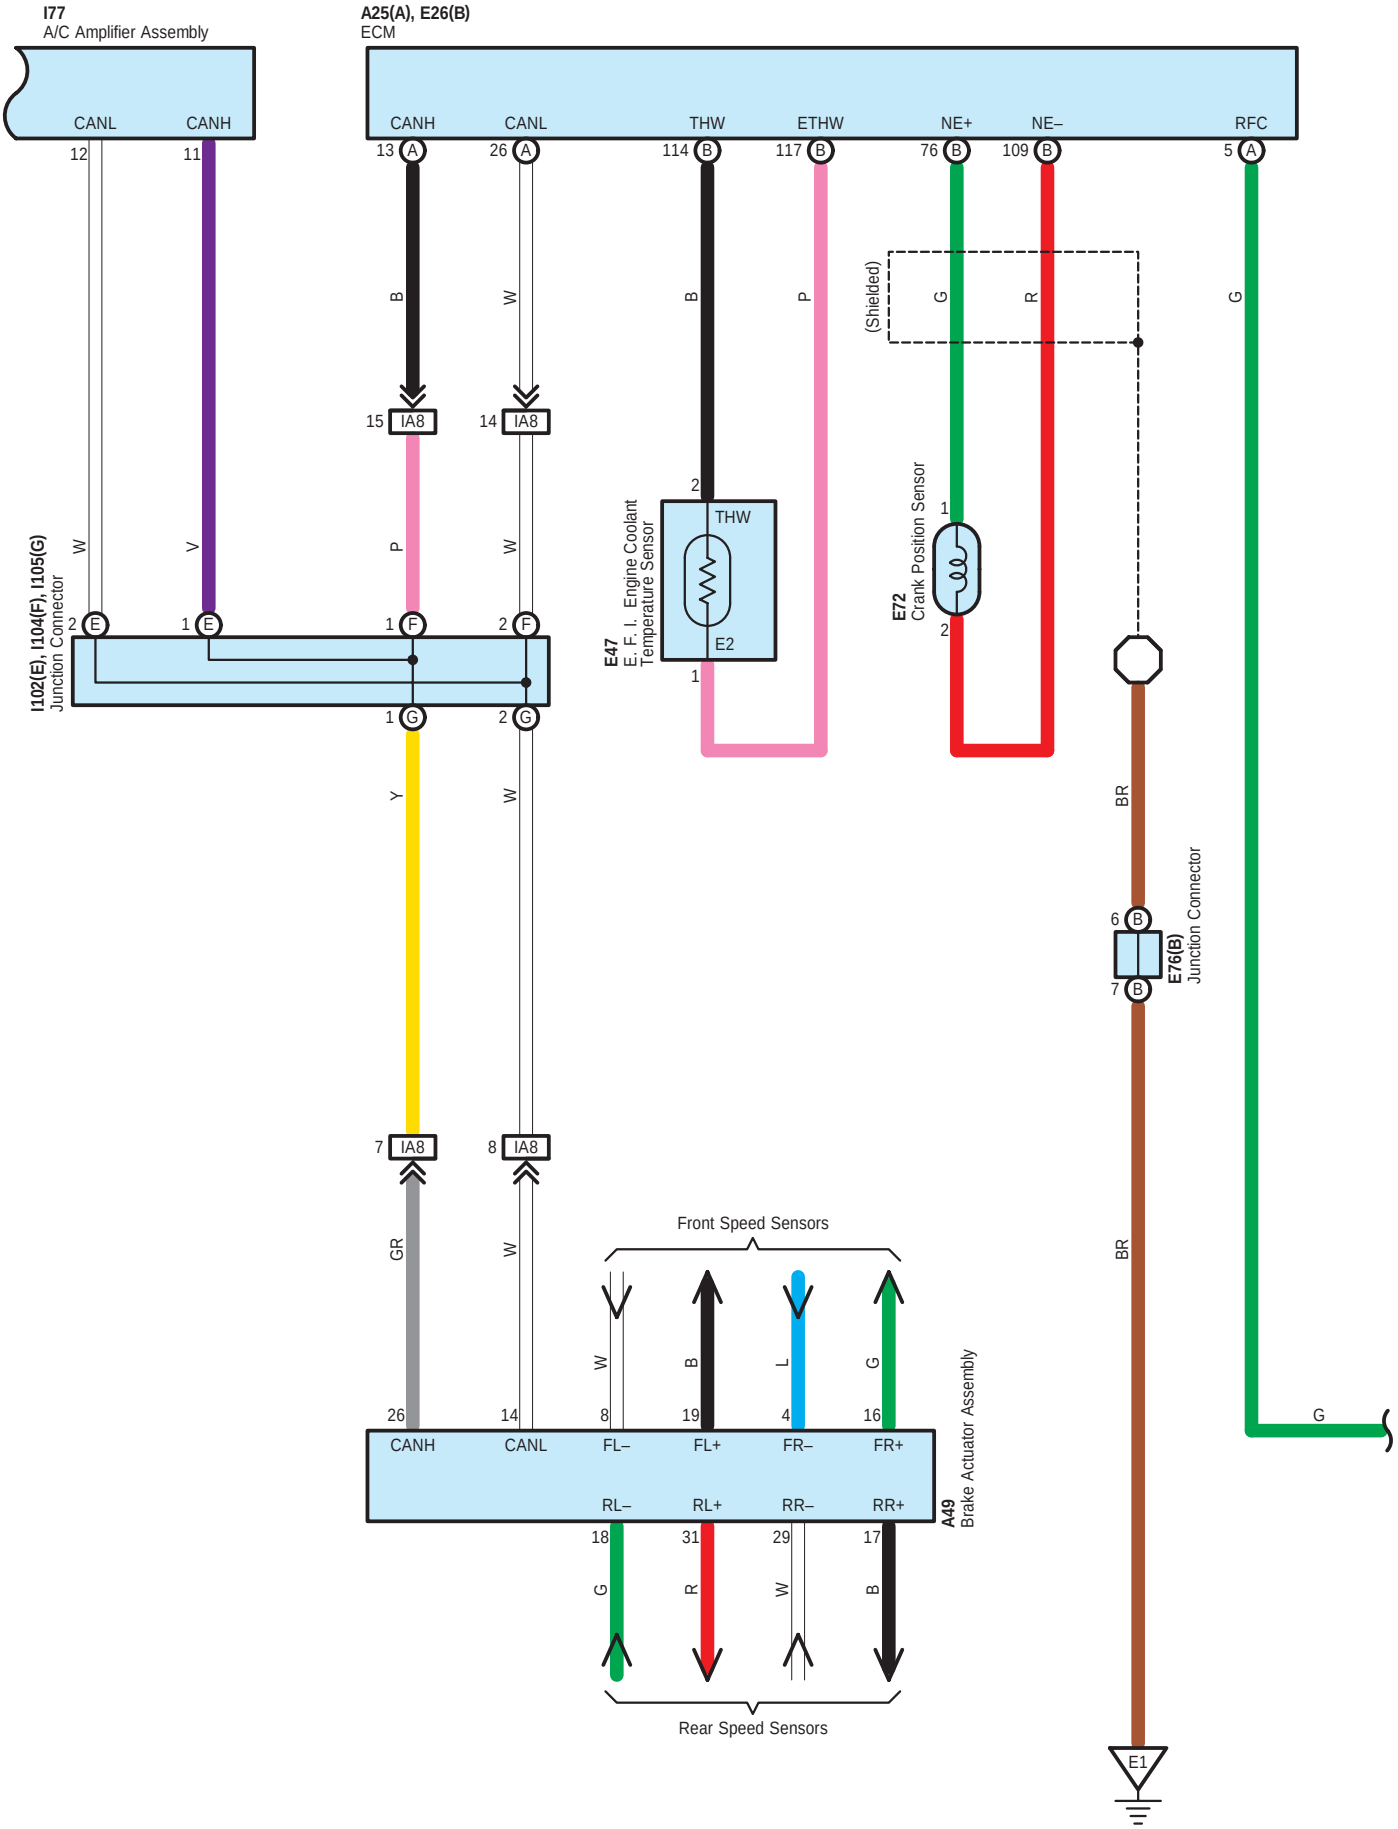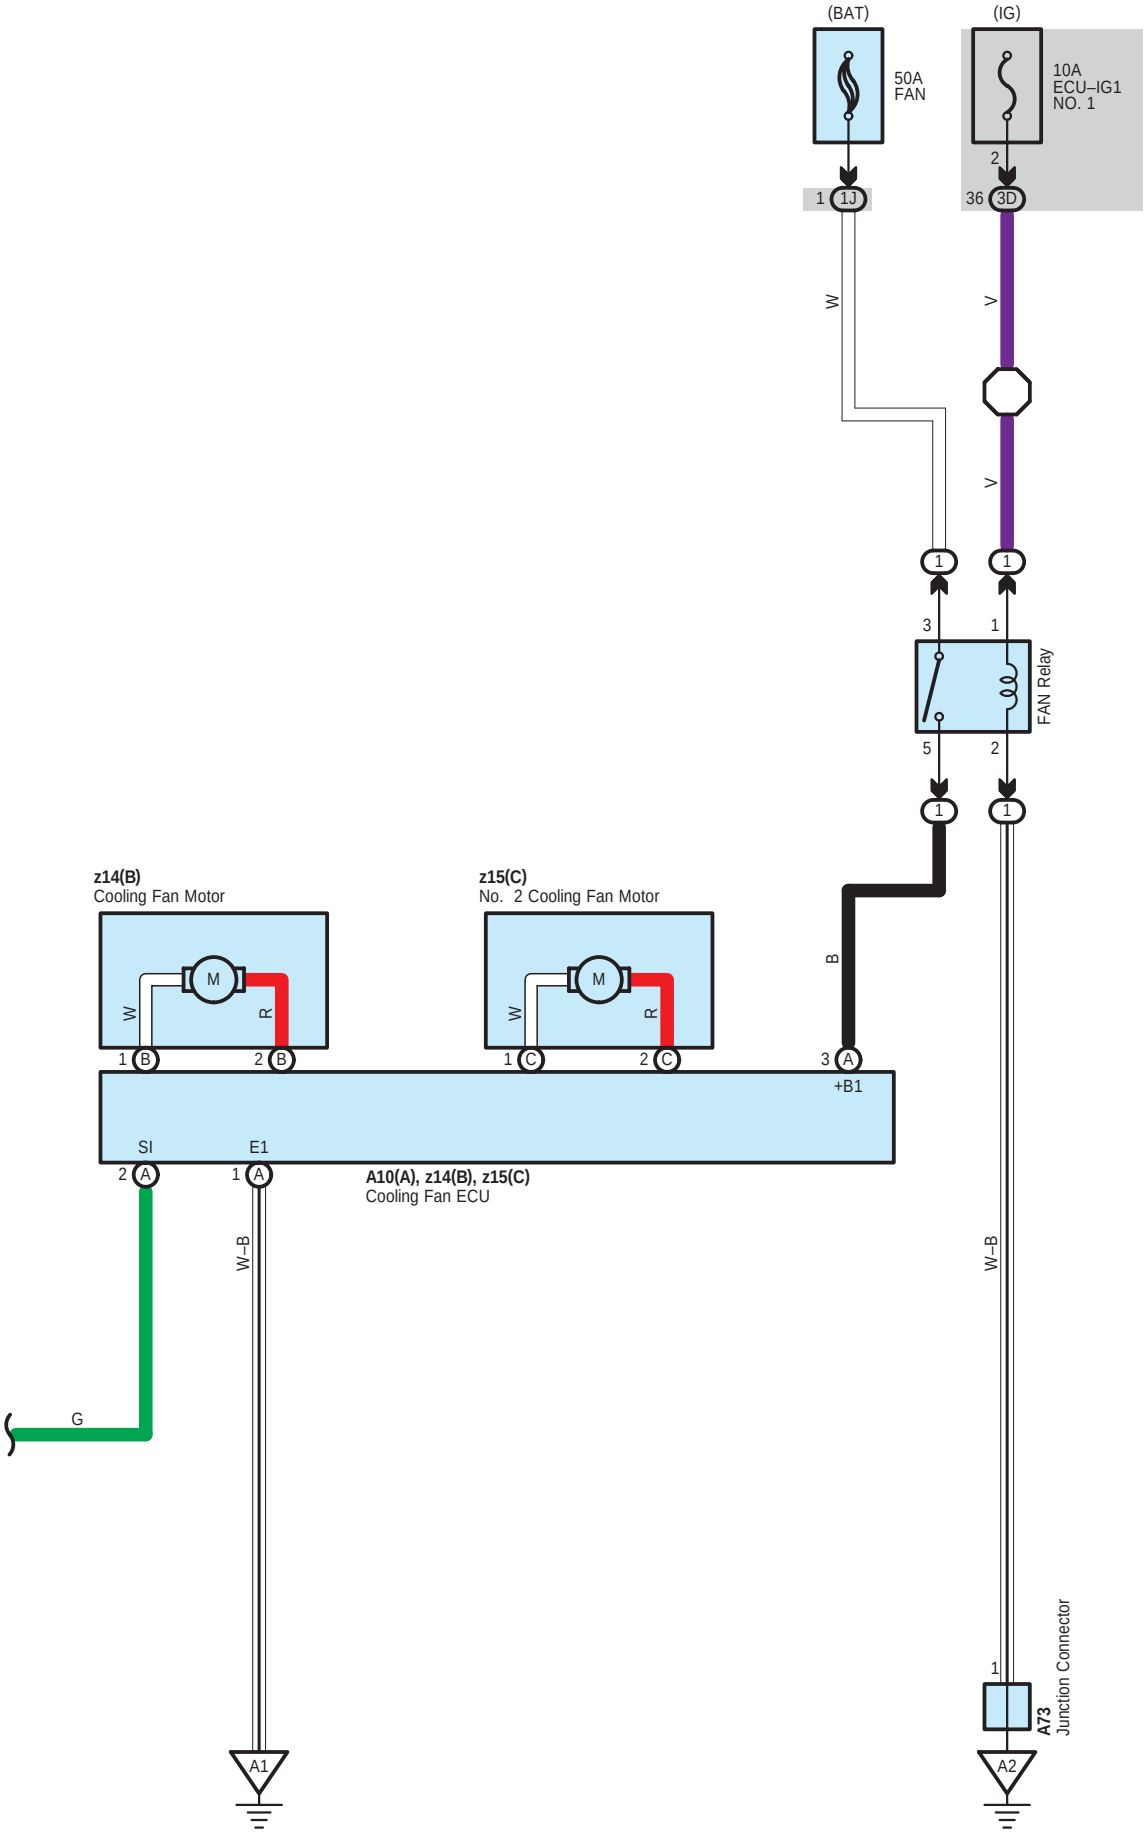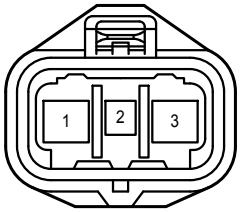


A 25
Black

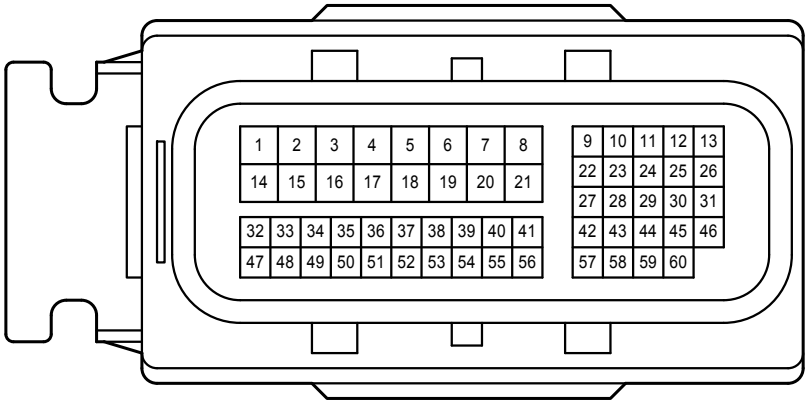


A 49
Black

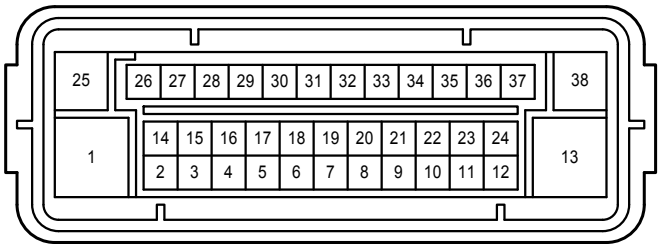

A 55
Black

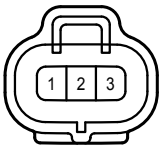


A 70
White

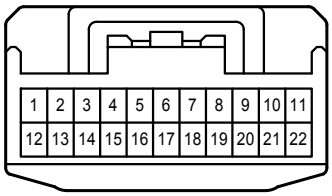

A 73
Gray




E 26
Black

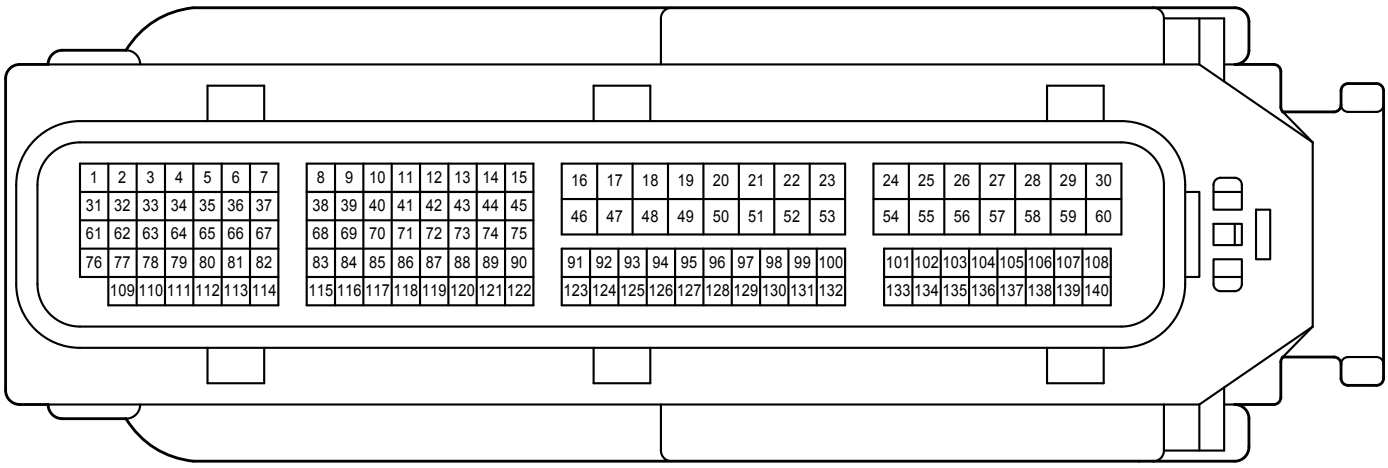


E 47
Black




E 72
Black

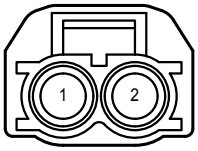


E 76
White

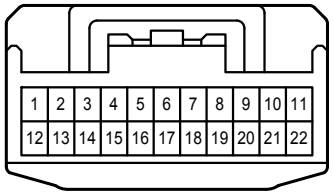


I 56
Black

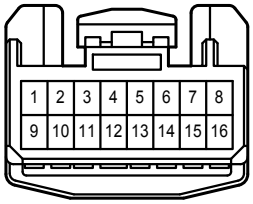


I 77
White

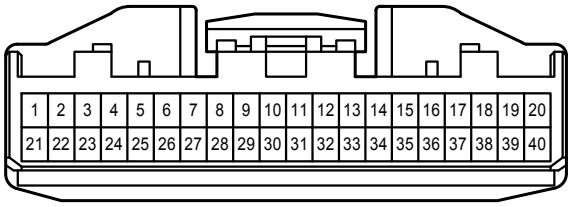


I102
White




I104
White



I105
White




I175
White




z 14
Gray




z 15
Gray

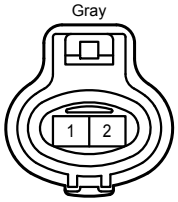


1J



3B
White

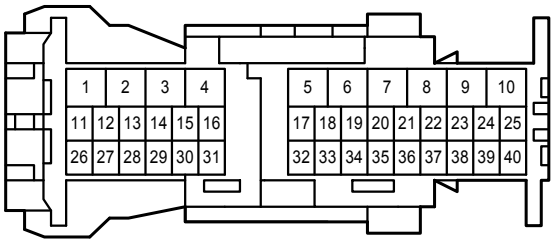

3D
White

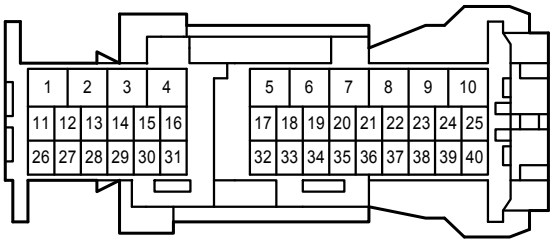

IA8
Gray

