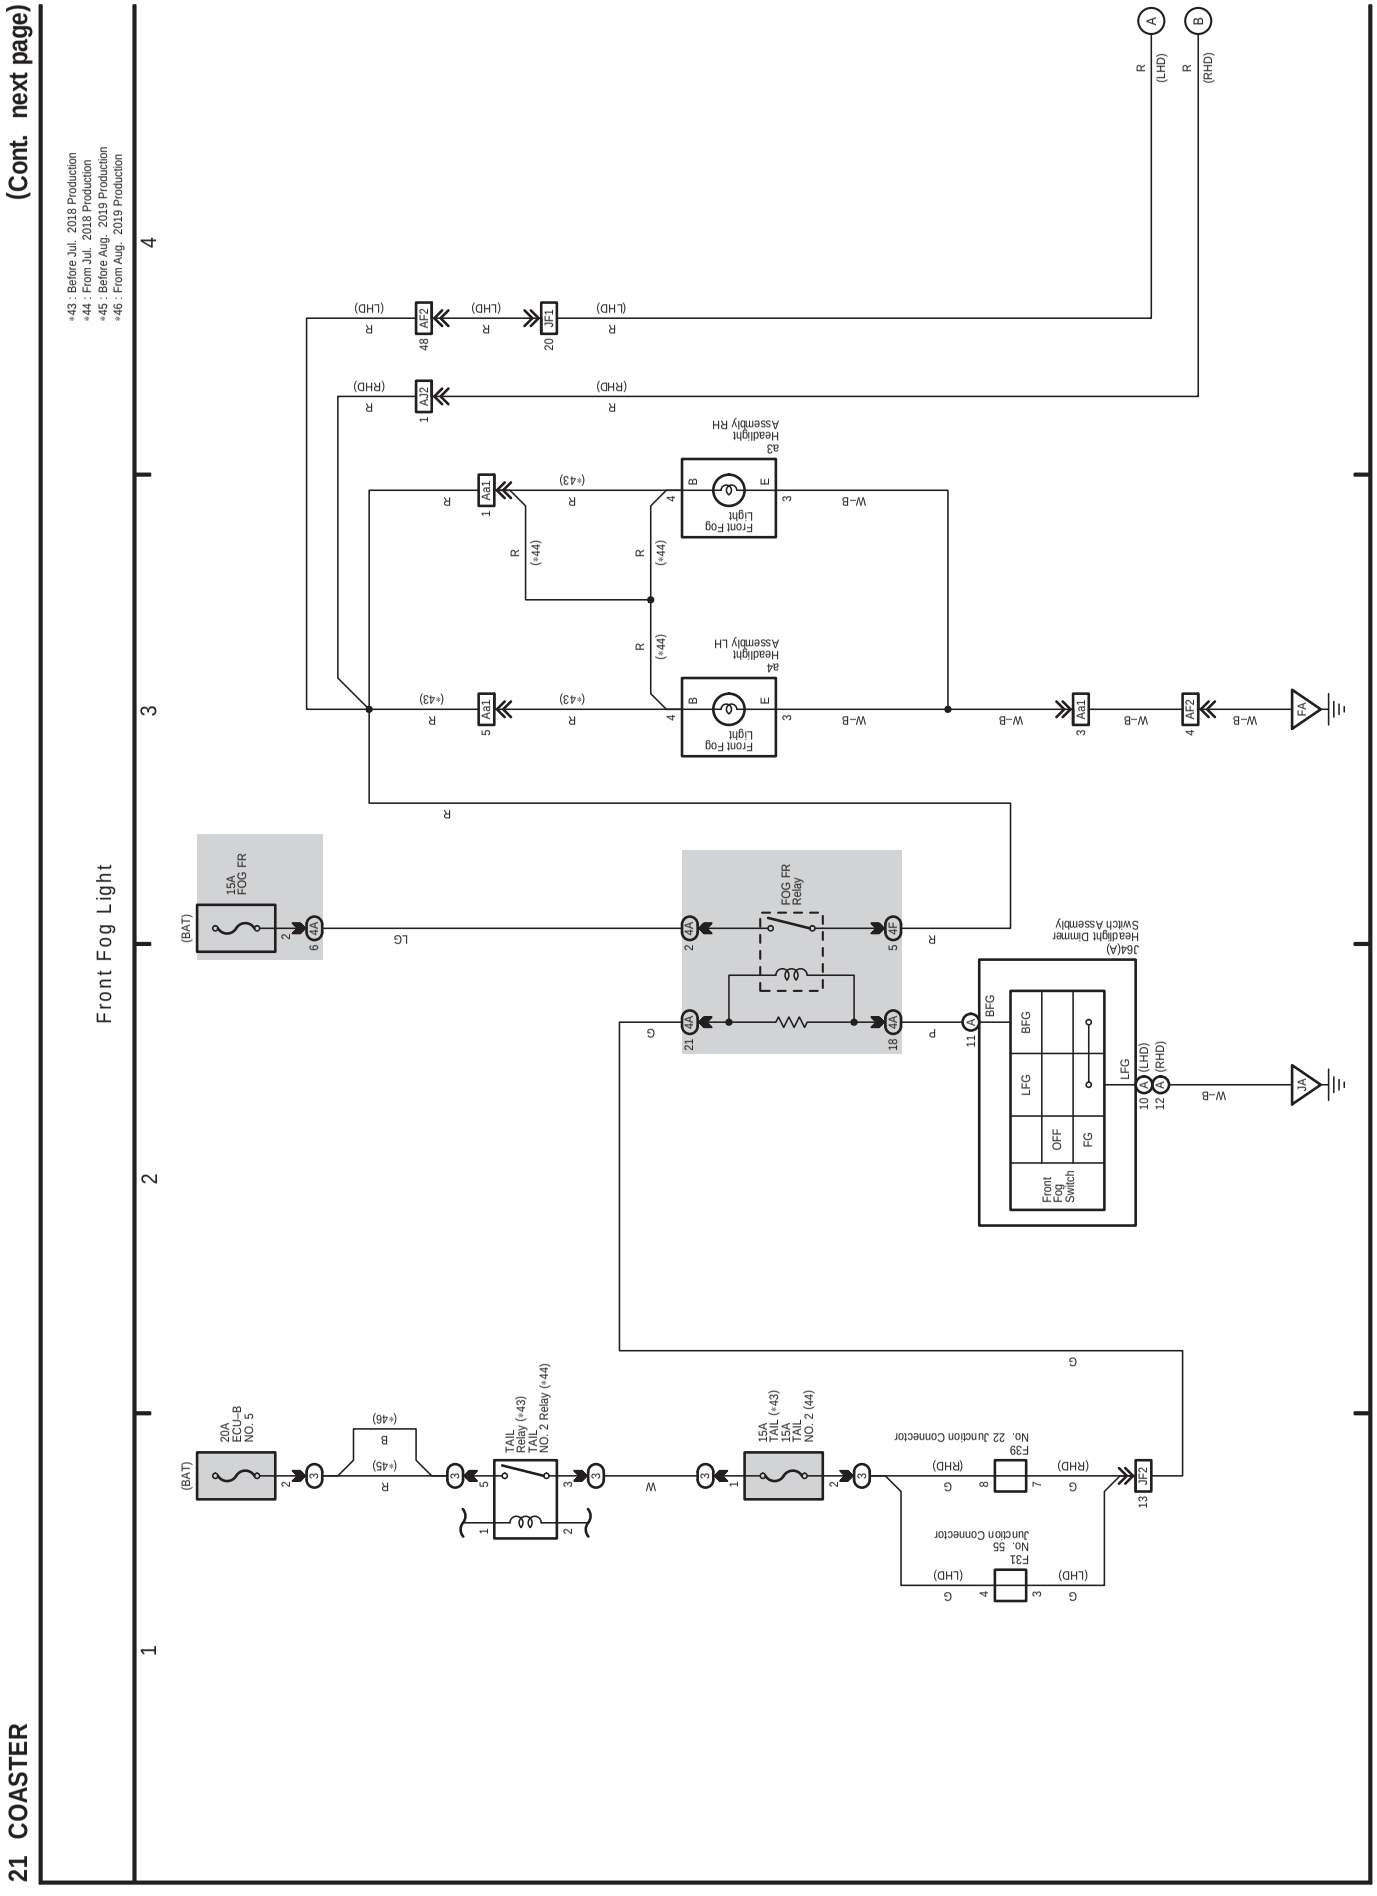
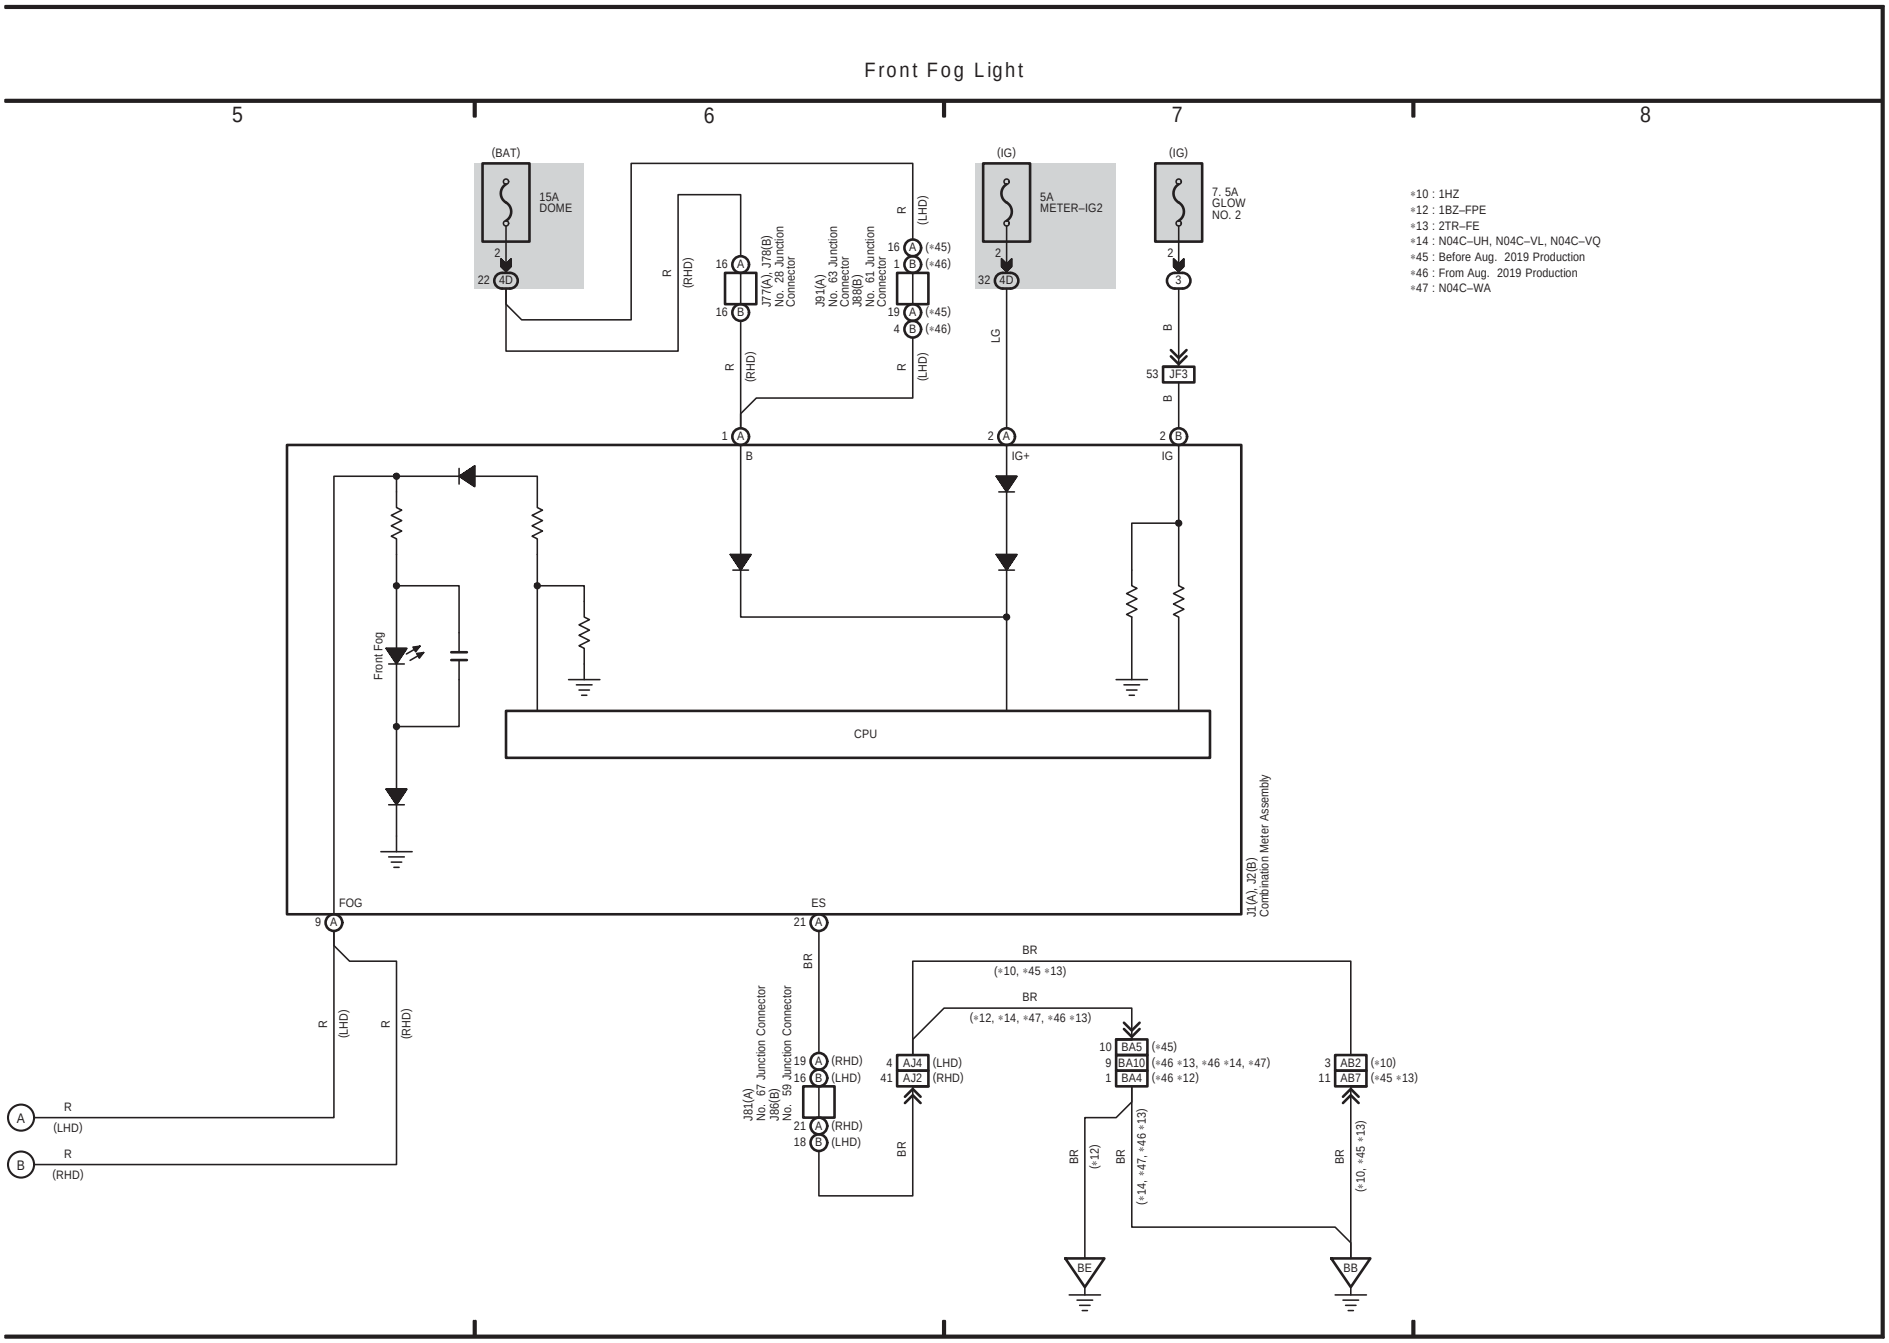

(Cont. next page)
*43 : Before Jul. 2018 Production
*44 : From Jul. 2018 Production
*45 : Before Aug. 2019 Production
*46 : From Aug. 2019 Production
Front Fog Light
1
2
3
4
21 COASTER
(BAT)
20A ECU–B NO. 5
15A FOG FR
15A TAIL TAIL NO. 2 (44)
TAIL Relay (*43) TAIL NO. 2 Relay (*44)
FOG FR Relay
Headlight Dimmer Switch Assembly
Front Fog Switch
BFG
LFG
OFF
FG
Front Fog Light
Headlight Assembly RH
Headlight Assembly LH
Junction Connector No. 55
Junction Connector No. 22
(LHD)
(RHD)
W–B
LG
G
R
W
B
FA
JA
AF2
AJ2
JF1
JF2
Aa1
4A
4F
4B
4C
4D
4E


Front Fog Light
5
6
7
8
(BAT)
15A
DOME
(IG)
5A
METER–IG2
(IG)
7. 5A
GLOW
NO. 2
∗10 : 1HZ
∗12 : 1BZ–FPE
∗13 : 2TR–FE
∗14 : N04C–UH, N04C–VL, N04C–VQ
∗45 : Before Aug. 2019 Production
∗46 : From Aug. 2019 Production
∗47 : N04C–WA
J77(A), J78(B)
No. 28 Junction
Connector
J91(A)
No. 63 Junction
Connector
J88(B)
No. 61 Junction
Connector
(LHD)
(RHD)
LG
JF3
B
IG+
IG
CPU
Front Fog
FOG
ES
J1(A), J2(B)
Combination Meter Assembly
J81(A)
No. 67 Junction Connector
J86(B)
No. 59 Junction Connector
BR
(∗10, ∗45 ∗13)
(∗12, ∗14, ∗47, ∗46 ∗13)
AJ4
AJ2
BA5
BA10
BA4
AB2
AB7
(∗45)
(∗46 ∗13, ∗46 ∗14, ∗47)
(∗46 ∗12)
(∗10)
(∗45 ∗13)
(∗12)
(∗14, ∗47, ∗46 ∗13)
(∗10, ∗45 ∗13)
BE
BB