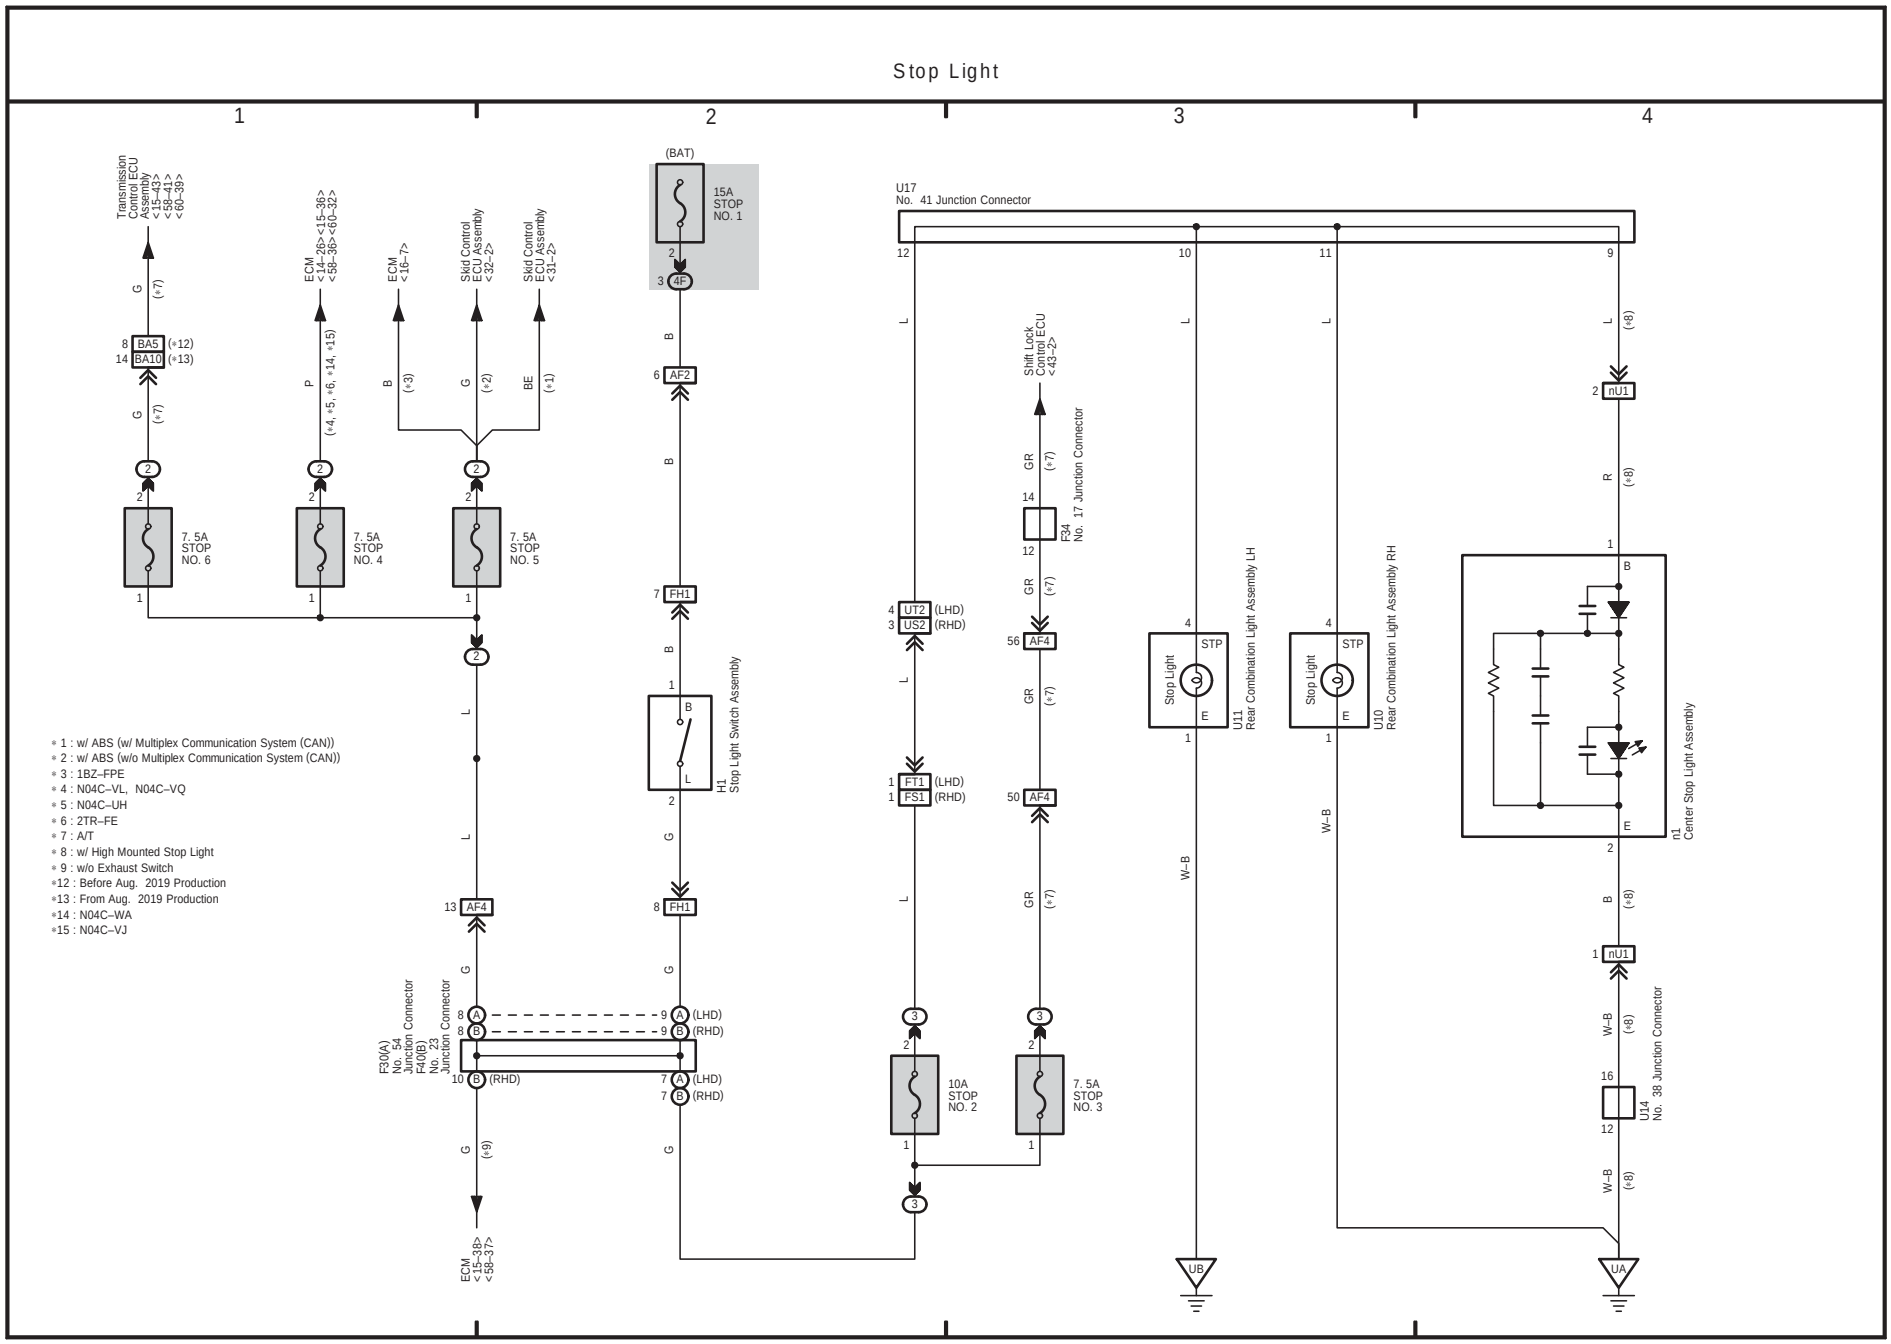

Stop Light
1
2
3
4
(BAT)
15A STOP NO. 1
2
3 4F
B
6 AF2
B
7 FH1
B
1
B
L
H1 Stop Light Switch Assembly
2
G
8 FH1
G
Transmission Control ECU Assembly <15–43> <15–44> <60–39>
G (*7)
8 BA5 (*12)
14 BA10 (*13)
G (*7)
2
2
7. 5A STOP NO. 6
1
ECM <14–26><15–36> <58–36><60–32>
P (*4, *5, *6, *14, *15)
2
2
7. 5A STOP NO. 4
1
ECM <16–7>
B (*3)
Skid Control ECU Assembly <32–2>
G (*2)
Skid Control ECU Assembly <31–2>
BE (*1)
2
2
7. 5A STOP NO. 5
1
2
L
13 AF4
G
F30(A) No. 54 Junction Connector F47(B) No. 23 Junction Connector
8 A
8 B
10 B (RHD)
9 A (LHD)
9 B (RHD)
7 A (LHD)
7 B (RHD)
G (*9)
ECM <15–38> <58–37>
U17 No. 41 Junction Connector
12
L
4 UT2 (LHD)
3 US2 (RHD)
L
1 FT1 (LHD)
1 FS1 (RHD)
L
3
2
10A STOP NO. 2
1
3
Shift Lock Control ECU <43–2>
GR (*7)
14
12
F24 No. 17 Junction Connector
GR (*7)
56 AF4
GR (*7)
50 AF4
GR (*7)
3
2
7. 5A STOP NO. 3
1
10
L
4
STP
Stop Light
E
1
U11 Rear Combination Light Assembly LH
W–B
UB
11
L
4
STP
Stop Light
E
1
U10 Rear Combination Light Assembly RH
W–B
9
L (*8)
2 nU1
R (*8)
1
B
E
2
n1 Center Stop Light Assembly
B (*8)
1 nU1
W–B (*8)
16
12
U14 No. 38 Junction Connector
W–B (*8)
UA
* 1 : w/ ABS (w/ Multiplex Communication System (CAN))
* 2 : w/ ABS (w/o Multiplex Communication System (CAN))
* 3 : 1BZ–FPE
* 4 : N04C–VL, N04C–VQ
* 5 : N04C–UH
* 6 : 2TR–FE
* 7 : A/T
* 8 : w/ High Mounted Stop Light
* 9 : w/o Exhaust Switch
*12 : Before Aug. 2019 Production
*13 : From Aug. 2019 Production
*14 : N04C–WA
*15 : N04C–VJ